

## **ONEFABRIC**® Graphic Installation

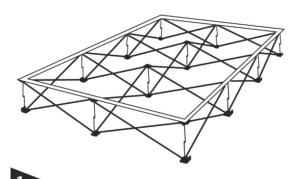


Assemble frame and lay flat on its back. Remove existing graphic.

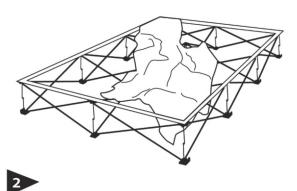


Starting at one corner, attach Velcro® on graphic to Velcro® on frame.

Overlap Velcro® of graphic a 1/4" on all sides of Velcro® of frame.


Note: Velcro® should not be flush.

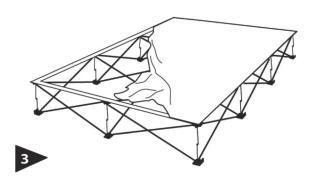

Work in continuous direction around the frame until graphic is completely attached.

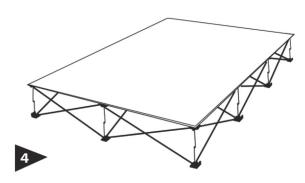

If needed, adjust Velcro® for taut fit.

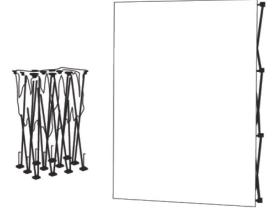

WARNING! DO NOT FORCE CLOSED.

To avoid damage, all hooks must be disconnected before collapsing frame.


## ONEFABRIC® Setup Instructions



Remove frame and graphic from bag.




Ensure "adjustable knobs" of frame are on the floor. Pull up display into upright postion.

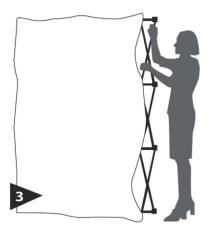

Lock all hooks between front and back hubs.



Adjust leveling knobs for desired angle. OneFabric™ display can now be moved easily into position.

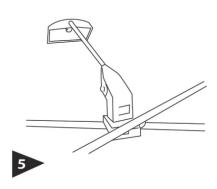

OPTIONAL
Attach lights to top of frame by sliding the plastic
X Blocks under the frames cross sections.





## WARNING! DO NOT FORCE CLOSED.

To avoid damage, all hooks must be disconnected before collapsing frame.