 
Product Specifications

Product Parts

1 - Large Leg 2 - Small Leg 3 - Pole Insert





Display Set-Up

Step 1

Remove the parts from the bag and place them on a clean, flat surface.

Step 3

Insert the Pole Insert (3) into the hole in the Large Leg (1) and twist to secure into the Small Leg (2).



3

Step 5

Your Sail Sign is now ready to display.

Step 2

Place the the Small Leg (2) on the surface so only it's feet are touching. Put the Large Leg (1) on top so the hole matches with the notch of the Small Leg (2).

Step 4

Place the assembled base in the desired location and slip the pole of your sail sign over the Pole Insert (3) to attach.





Optional Ballast Set-Up

Step 1

For added stability, fill a Round or Square Water Ballast with ballast material and place over the Cross Base (1) before attaching the sail sign's pole.



Storage

Take apart the base and place all parts in the Carry Case. Store in a cool, dry location.



Round Water Ballast Recommended for indoor use and sail signs under 14' tall.



Square Water Ballast Recommended for outdoor use and sail signs above 14' tall.

Care

To clean, wipe with damp cloth.

190711

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.