 
Deluxe SEG Glo

Product Parts

- 1 Bottom Right
- 2 Top Right
- 3 Top
- 4 Bottom Assembly with Feet
- 5 Bottom Left
- 6 Top Left
- 7 Center Support Bar
- 8 Power Cord
- 9 Graphic (2)
- 10 Soft Case
- 11 No-Gap Connectors (x4)*
- 12 Optional Corner Connector









Display Set-Up

Step 1

Set Bottom Assembly with Feet (4) on floor and rotate both feet 90 degrees.

Step 2

Assemble Bottom Right (1) and Bottom Left (5) to the Bottom Assembly with Feet (4) by matching numbered stickers.

Step 3

Assemble Top Right (2) and Top Left (6) to Bottom Left and Right sections by matching numbered stickers.

Step 4

Assemble Top (3) to the Left and Right Top sections by matching numbered stickers.

Step 5

Press Center Support Bar (7) into provided slots by pressing with equal pressure on both sides. Remove by pulling equally on both sides to prevent breaking.

Step 6

Connect center light cords from Bottom sections into Top sections. Connect light cords from Bottom Assembly with Feet to Bottom sections.

Step 7

Insert the graphic's gasket edges into the frame, by inserting each corner into the frames four corners, then work around the frame alternating opposite sides until complete. **Loop** for removing Graphics (9) will be at bottom corner.

Insert stitched side of the gasket first





3'x6.5'







3'x8'

Two frames connected with No-Gap Connectors (11).

Step 8

Power Cord (8) has a twist connection that attaches to cord coming from underside of Base. Align and hand tighten. Plug male end of Power Cord into power source.

Optional Corner Connector #254850

The Optional Corner Connector (12) can be used to connect multiple same sized hardware allowing the frames to make a 90 degree turn.



Storage & Care

*The No-Gap Connectors allow for multiple frames to be connected.