

Instructions For:

Top Load Frame


Product Specifications

Color Options: Silver, Black

Visible Graphic:	Total Graphic Print Size:	Frame Dimensions:
8" W x 10.5" H	8.5" W x 11" H	8.75" W x 11.25" H x .75" D
10.5" W x 16.5" H	11" W x 17" H	11.25" W x 17.25" H x .75" D
16.5" W x 21.5" H	17" W x 22" H	17.25" W x 22.25" H x .75" D
21.5" W x 27.5" H	22" W x 28" H	22.25" W x 28.25" H x .75" D
23.5" W x 35.5" H	24" W x 36" H	24.25" W x 36.25" H x .75" D

Product Parts

- 1 - Frame
- 2 - Plastic Overlay
- 3 - Graphic Backing
- 4 - Loading Hole
- 5 - Front & Back Holes

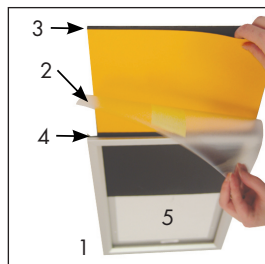

Step 1

Take all parts out of the box.
Lay the Frame on a clean, flat surface.

Step 2

Slide the Graphic Backing (3) and the Plastic Overlay (2) out of the Loading Hole (4) on the top of the Frame (1) by gently pressing on them through the Front & Back Holes (5).

The Plastic Overlay (2) is 2-sided, and may have a protective sheeting on the Glossy side that needs to be removed (large sizes). The Glossy side offers the appearance of glass. The Matte side eliminates glare.

Place the Graphic on the Graphic Backing (3), and place the Plastic Overlay (2) on top of the Graphic with the desired side facing up.




Step 3

Slide the Graphic, Plastic Overlay (2), and Graphic Backing (3) into the Loading Hole (4) until they rest within the Frame (1).



Step 4

Attach Wall Mounting Hardware (not included) to the back of the Frame (1). Hang the Frame (1) on the wall as desired.

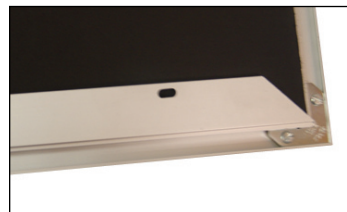

Graphic Changes

Remove the Frame (1) from the wall. Gently press on the back of the Graphic Backing (3), Graphic, and Plastic Overlay (2) through the front and Back Holes (3) to slide the Graphic upwards and out of the Loading Hole (2) in the top.

