
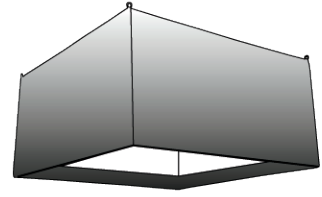


# EuroFit Fabric Hanging Banner Displays - 8' Square

## Product Parts

- 1 - Top Poles (x8)
- 2 - Bottom Poles (x8)
- 3 - Vertical Ribs (x4)
- 4 - Vertical Poles (x4)
- 5 - Bolts (x12)
- 6 - Eye Bolts (x4)

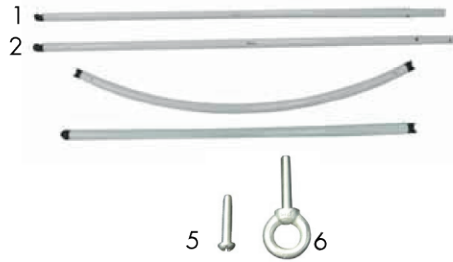

## Hanging Cables not included.

Most Convention Centers will require you to use their hanging hardware.

## Display Set-Up

Recommended for indoor use only.


### Step 1

Remove all parts from bag. Connect the Bottom Poles (2) together until the release button snaps into place. Connect poles numerically (1 to 2, 2 to 3, etc.)



### Step 3

Attach Vertical Ribs (3) to the middle of the Bottom Poles (2). Thread a bolt (5) up through the center hole and into the Vertical Rib. Make sure the rib is inverted and bowing into the center of the square (see figure on right). Tighten bolt.

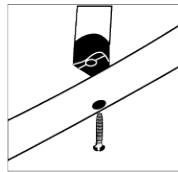

### Step 5

Unzip your graphic all the way around, then push the blank back side of graphic under the bottom frame. With the help of another person, position your graphic and ensure that it is facing right side up.




**NOTE: WHEN POSITIONING FABRIC AROUND THE FRAME, CAREFULLY LIFT AND REPOSITION.**

DRAGGING FABRIC CAN CAUSE SNAGS.

### Step 7

Step inside the Frame. With the outside of the fabric graphic now connected, zipper together the inside of the fabric graphic to the outside to form the finished square.

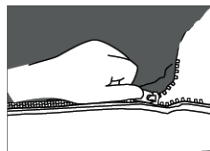


### Step 2

Connect Bottom Poles 1 & 2 to 3 & 4 by threading bolt (5) through the bottom. Attach a Vertical Pole (4) to the top of the bolt and tighten with a screw driver. Repeat steps on all four corners.




### Step 4

Repeat step three and attach all remaining Vertical Ribs (3). Then begin to connect four sets of Top Poles (1) and attach them to the assembled frame using the four eye bolts (6).

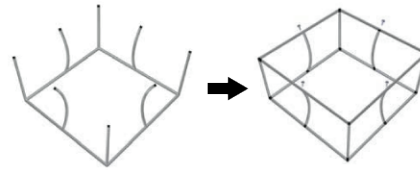

### Step 6

Secure the outside of the fabric graphic to frame by feeding the Eye Bolt (6) in the reinforced hole from the graphic and then through the hole in each corner of the frame. Ensure that all four eyebolts are tight.

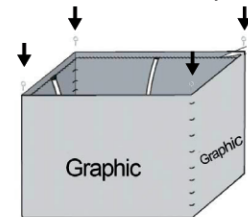

## Hanging Cables not included.

Most Convention Centers will require you to use their hanging hardware.

## Storage and Care

Place all product parts into Carry Case and store in a cool dry location.

Machine wash on gentle cycle using mild detergent. Tumble dry on low heat setting only. Do Not dry Clean, Do Not iron.