


Scan to view Product Instructional Video or visit:
www.creativeDisplaysite.com/4season.html



Product Parts


- 1 - Frame
- 2 - Snap Edges
- 3 - Protective Graphic Film
- 4 - Springs
- 5 - Base
- 6 - Screw Holes
- 7 - Snap Handle
- 8 - Wing Bolt (x2)
- 9 - Washers (x2)
- 10 - Bushing (x2)
- 11 - Lock Nut (x2)

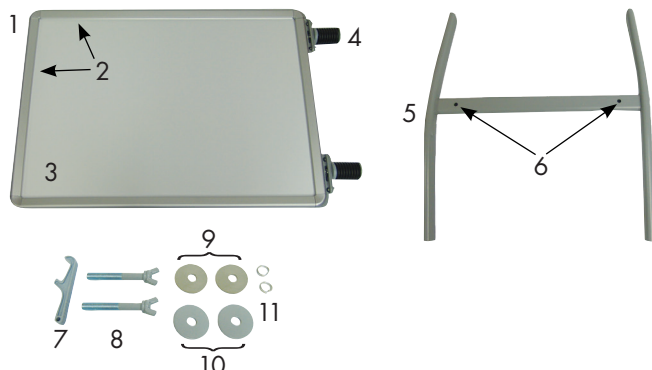

Display Set-Up


Step 1

Remove all parts from the box and remove all protective wrapping. Place on a clean, flat surface. Open all the Snap Edges (2) on one side of the Frame (1) by hand or you can use the optional Snap Handle (7). Remove the Protective Graphic Film (3) and align it over the printed side of your graphic.

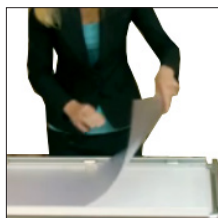


Step 2

Slide your Graphic covered by the Protective Graphic Film (3) into the display's Frame (1) and close all Snap Edges (2). Flip the Frame (1) over and repeat on the second side.

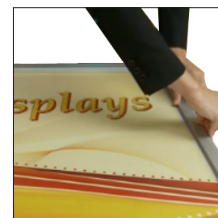

Step 2

Stand Frame (1) and Base (5) on their sides with the four base feet positioned away from the Frame (1). Align the top Spring (4) with the Screw Hole (6). Feed the Winged Bolt (8) with one Lock Nut (11) and one Washer (9) through the Screw Hole (6). Once threaded add one Bushing (10) and begin screwing into the Spring (4). Do not fully tighten. Repeat this step to bottom Spring (4) and Base (6). Tighten both Winged Bolts (8).

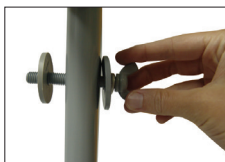

Step 4

With Base (5) firmly attached, lift the display into an upright position to display.



Storage

Place all product parts into Carry Case and store in a cool dry location.

Care

To clean, wipe with damp cloth.