

Four Season Flex Sign with Ballast Base



263006, 263007, 190297
BSD504

Product Specifications

Viewable Graphic Size: 23.4375" w x 33.125" h
Footprint Dimensions: 31" w x 18" d
Graphic Template Available

Product Parts

- 1 - Frame
- 2 - Snap Edges
- 3 - Springs
- 4 - Base
- 5 - Threaded Holes
- 6 - Plug
- 7 - Snap Handle
- 8 - Wing Screw (x2)
- 9 - Washers (x2)
- 10 - Lock Nuts (x2)

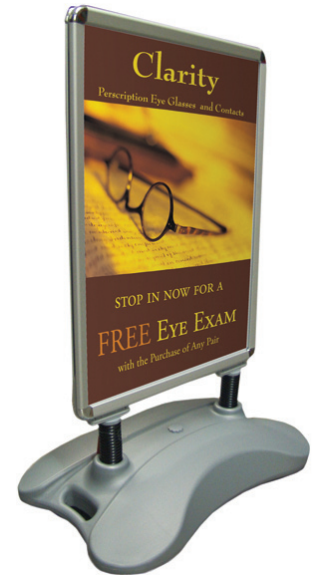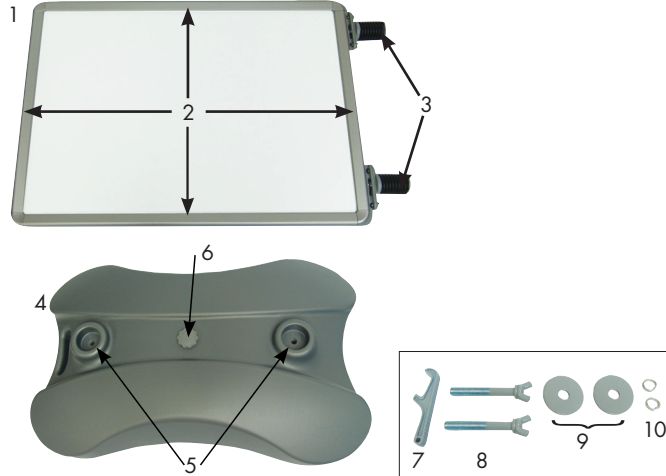

Display Set-Up

Step 1

Remove all parts from the box and remove all protective wrapping. Place on a clean, flat surface. Open all the Snap Edges (2) on one side of the Frame (1) by hand or you can use the optional Snap Handle (7). Remove the Protective Graphic Film and align it over the printed side of your graphic.




Step 2

Slide your Graphic covered by the Protective Graphic Film into the display's Frame (1) and close all Snap Edges (2) Flip the Frame (1) over and repeat on the second side.



Step 3

Place one Lock Nut (10) and one Metal Washer (9) on each Wing Screw (8). Stand the Frame (1) and the Base (5) on their sides with the Springs (3) inserted in the top side of the Threaded Holes (5) on the Base (4). Feed the Screws (8) through the bottom of the Threaded Holes (5), then tighten both Screws into the holes in the bottom of the Springs (3).

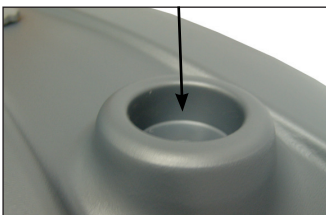

Step 4

Remove the Plug (6), and fill the Base (5) with either water or sand. Replace the Plug (6) when finished.



Storage & Care

Place all product parts into Carry Case and store in a cool dry location. To clean, wipe with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.