


# Eurofit 20FT Arch or Arch Plus Display

## Product Parts

- 1 - Arch Poles (x20)
- 2 - Top Poles (x2)
- 3 - Support Poles (x5)
- 4 - Corner (x4)
- 5 - Graphic
- 6 - Hex Wrench
- 7 - Hex Screws (x10)
- 8 - Bottom Poles (x2)

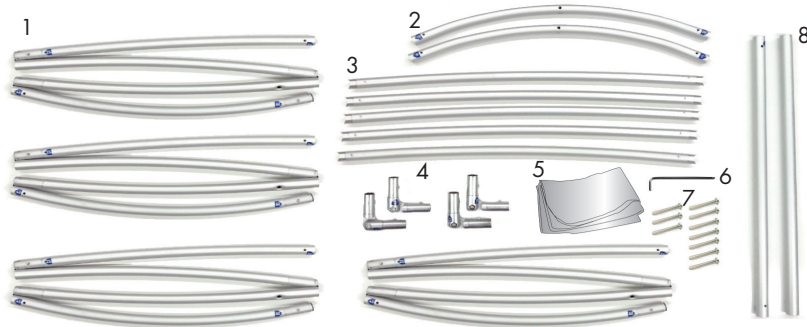

## Display Set-Up

### Step 1

Remove everything from soft case and place on a clean flat surface. Verify you have all parts described above.


### IMPORTANT INFORMATION

\* During assembly, match the labels to each other on each connection point (Ex. T6 connects to T6).




### Step 2

Assemble the 20 Arch Poles (1) and the two Top Poles (2) to create two large arches.

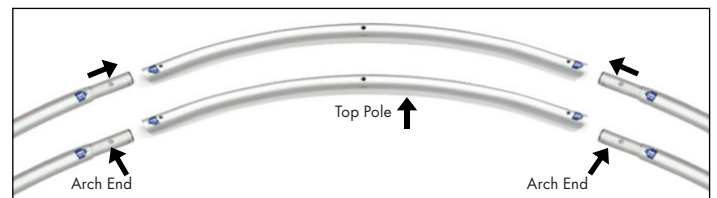

### Step 3


Connect the four Corners (4) to the ends of the two assembled arches.

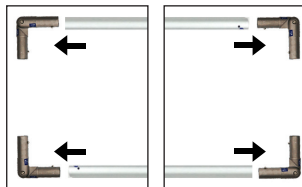

### Step 4

Using the six Hex Screws (7) and the Hex Wrench (6) Screw the five Support Poles (3) and the two Bottom Poles (8) to one of the arches assembled in Step 2.

\* **Do not tighten at this time.**

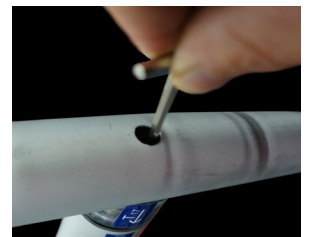


**Support Poles (3) have a slight arc to them. This arc needs to go towards the inside/underside of the frame.**

### Step 5

Assemble the two arches together as shown. Tighten all Screws until snug.

\* **Do not over tighten.**

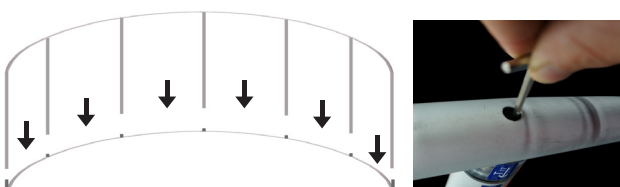

### Step 6


Your display should now look like the image to the right.



## Graphic Set-Up


### Step 7

Lay your display on it's side. Drape you Graphic (5) over the side of the display and gradually pull it down over the display.

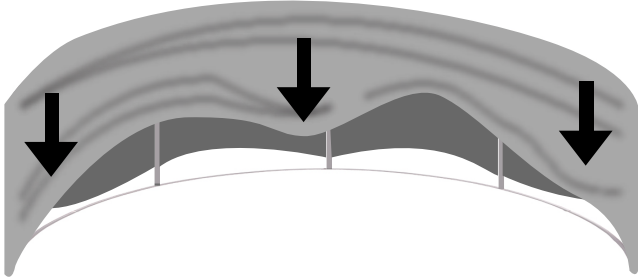

### Step 8

Zip the Graphic (5) closed around the Back.

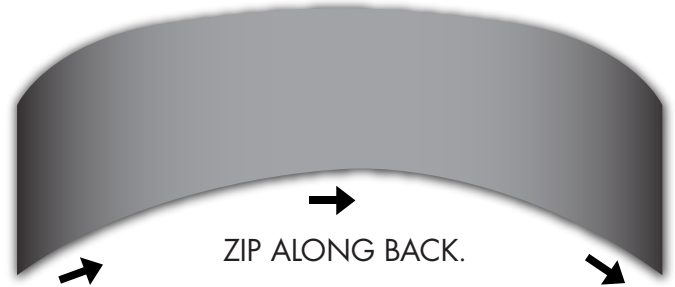

### Step 9

Stand Display up.



## Storage & Care

Store in a cool dry location. Machine wash cold, gentle cycle. Air Dry Only