# 6' & 8' Deluxe Tent

**Product Parts** 

- 1- Frame
- 2- Soft Case with Wheels
- 3- Canopy
- 4- Stake Kit



Deluxe Frame has 1.25" Steel legs and plastic coated metal lever height adjustment

 


## Set-Up

#### Step 1

Remove the Frame (1) from the soft case (2) and place it at your desired location.


In tandem with another person, separate the legs of the Frame (1) until they are extended a full arms length.



## Step 2


Unfold your Canopy (3) and drape over the Frame (1). Position

the apex of the Canopy (3) with the center pole of the Frame (1).

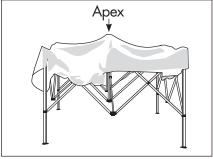


## Step 3

Attach the Canopy (3) by connecting the loop strips on the Canopy (3) corners with the hook strips on the four legs of the Frame (1).

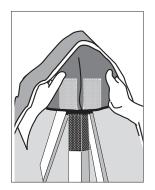

## Step 4

Stand diagonal to each other, lift and separate the legs of the Frame (1). The Frame (1) will open a little at a time so alternate ends until the Frame (1) no longer expands.

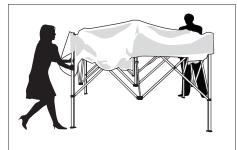


DO NOT DRAG FRAME-THIS COULD BEND THE LEGS

## Set-Up Continued...
 
#### Step 5

Unlock the Height Adjustment connectors on Frame (1) legs. With connector in unlock position, lift the framework upwards until the four sliding connectors lock into place on the legs of the Frame (1).






<sup>-</sup>Push down lever

## Step 7

Lift the apex of the Canopy (3) into place by turning the crank counterclockwise until the Canopy (3) is taut.

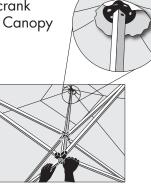


#### Step 6

Place your foot on the base of the tent leg as you release and extend the telescoping legs. Raise the tent to your desired height and lock the legs into place.

#### NOTE:

To move an assembled frame, make sure a person is located at each leg. Lift and transport carefully in unison.

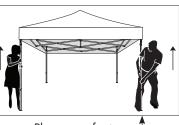


Place your foot on the base as you lift \_



### Secure with Stakes

Secure by looping rope through the "D" ring located on each corner of the canopy.



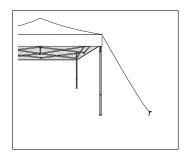


#### \*FRAME MUST BE SECURED DOWN TO PREVENT WIND FROM LIFTING TENT AND CAUSING DAMAGE. NOT SECURING TENT PROPERLY VOIDS THE WARRANTY.

### Storage & Care

Remove Canopy (3) from Frame (1) and collapse. Store collapsed Frame (1) in soft case (provided) as well as folded Canopy (3) in front pocket. *Option: Hard Case item # 220150 (Not Included.)* 

 Store in a cool dry location. To clean, wipe with damp cloth.





Soft Case 220079 included with Kits only.

#### MAKE SURE TO TAKE SPECIAL CARE TO NOT DRAG THE FRAME WHEN SETTING UP OR TAKING DOWN.