

Instructions For:

# Pedestal Snap Frame

 


## Product Specifications

Visible Graphic: 8" W x 10.5" H  
Total Graphic Print Size: 8.5" W x 11" H  
Foot Print Dimensions: 9 3/4" Diam.

## Product Parts

- 1 - Base
- 2 - Threaded Hole
- 3 - Pole
- 4 - Pole Extension Button
- 5 - Hub
- 6 - Winged Screw & Wing Nut
- 7 - Frame
- 8 - Snap Edges
- 9 - Plastic Overlay

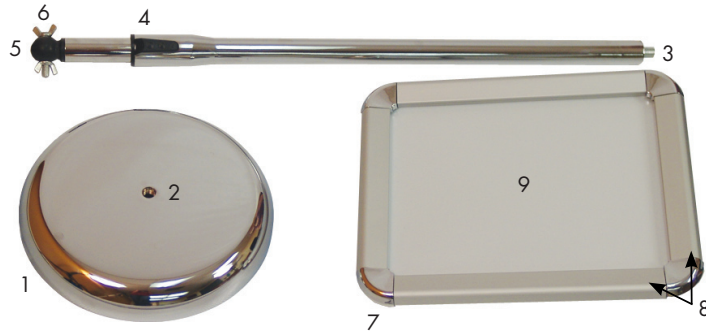

### Step 1

Take all parts out of the box.


### Step 2

Lay the Base (1) on the floor. Fasten the fixed screw on the base of the Pole (3) into the Threaded Hole (2) in the center of the Base (1).



### Step 3

Remove the Winged Screw & Wing Nut (6) from the Hub (5). Line up the holes in the fixture on the back of the Frame (7) with the holes in the Hub (5), and fasten it in place with the Winged Screw & Wing Nut (6).

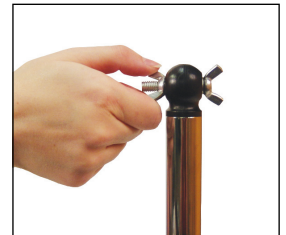


Rotate the Frame (1) to be oriented Portrait or Landscape.



### Step 4

Open all 4 Snap Edges (8) and remove the Plastic Overlay (9). Place the Graphic in the Frame (7), place the Plastic Overlay (9) on top of the Graphic, and close all 4 Snap Edges (8), securing the Graphic in the Frame.

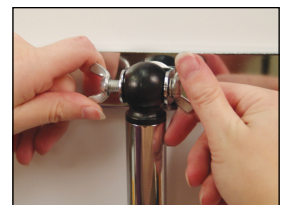

### Step 5

Press the Pole Extension Button (4) to adjust the sign to the desired height and place the assembled unit in the desired location.

