

Cross Base for Sail Signs

190707

Product Specifications

 
 
Color: Silver

Footprint Dimensions: 23" x 23"

Product Parts

1

1 - Cross Base

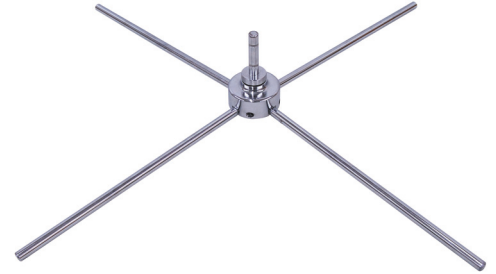

Display Set-Up

Step 1

Remove the base from the box and move it along with your assembled sail sign to your desired location.

Step 2

Extend the legs of the Cross Base (1) outward, until they are flat on the ground.



Step 3

Slip the pole of your sail sign over the pole on the Cross Base (1) to attach.



Step 4

 
Your Sail Sign is now ready to display.



Optional Ballast Set-Up

Step 1

For added stability, fill a Round or Square Water Ballast with ballast material and place over the Cross Base (1) before attaching the sail sign's pole.

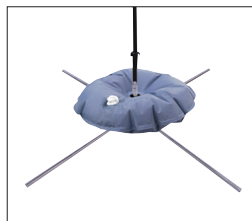

Round Water Ballast

Recommended for indoor use and sail signs under 14' tall.



Square Water Ballast

Recommended for outdoor use and sail signs above 14' tall.

Storage

Place the base along with the sail sign into the Sail Sign's Carry Case and store in a cool, dry location.



Care

To clean, wipe with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.