

**Congratulations on the purchase of your Pop-Up Three Dimensional Fabric Display.**

## Owner's Manual

Includes:

- Parts List
- Assembly Instructions
- Disassembly Instructions
- Storage Instructions
- Care Instructions
- Warranty Information

 
Please read all of the information carefully and contact your distributor or supplier with any issues.



## Parts List

**Important:** Before you begin please count and inspect all pieces.

- 1- 9 Quad Frame (Q)
- 1- Graphic Banner (A)
- 4- Graphic Banner (C)
- 1- Graphic Banner (F)
- 1- Oval Display Case (S)

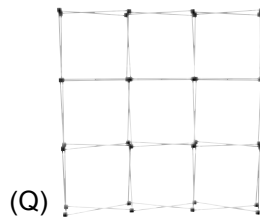

(Q)



(A)



(C)




(F)




(S)

## Assembly Instructions

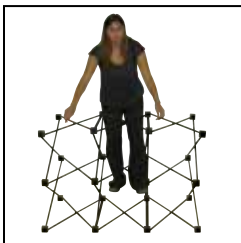 

### Step 1

 Remove frame (Q) from case. Standing in front or behind the frame (Q) pull up from the middle of the frame until it expands and extends out fully.

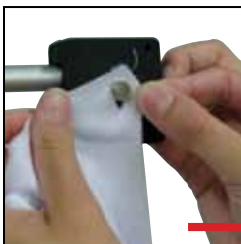

### Step 2

Attach graphic banner to frame (Q) by locating hole slits in each corner of banner (and sides) and securing it around metal pins in frame (Q). Repeat this step for each banner until all banners are secured to frame (Q) in desired locations.

See Step 4 for banner placement specifics.



### Step 3

Please note that graphic banners (F) has additional hole slits located in the center that need to be attached to frame (Q).

See Step 4 for banner placement specifics.

## Assembly Instructions (cont.)

### Step 4

**Banner A** attaches to the front of the frame on all four corners. Or this can be reversed with all four corners in the back.

**Banner C** attaches to the front of the frame with the right two corners and the back of the frame with the left two corners. Or this can be reversed with the left two corners in the front and the right two corners in the back.

**Banner F** covers 4 quads and attaches to the front of the frame with all nine peg holes. Or this can be reversed with all nine peg holes in the back.



Graphic Placement



Banner A



Banner C



Banner F

## Disassembly Instructions



### Step 1

For quick set up and take down you may leave graphic banners on frame (Q). Place hands on frame (Q) and collapse.



### Step 2

Continue to collapse frame (Q) until fully retracted for storage. Make sure that no graphic banners become snagged while collapsing frame (Q).

## Storage Instructions



Store in oval display case (S) and keep in a cool dry environment. Make sure that all graphic banners are dry before storing.

## Care Instructions

Graphic banners are machine washable. Tumble dry low. Clean frame with damp cloth and wipe dry.

## Warranty Information

All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.