

Assembly Guide

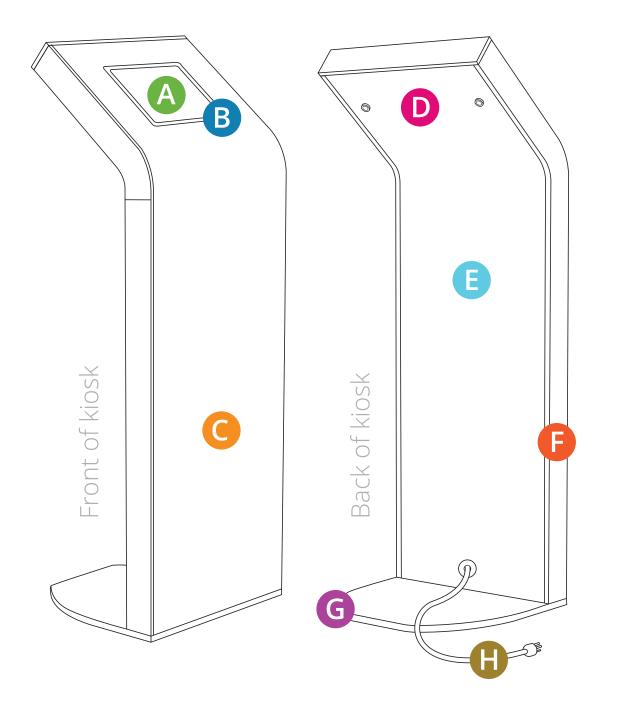

The backlight remote control

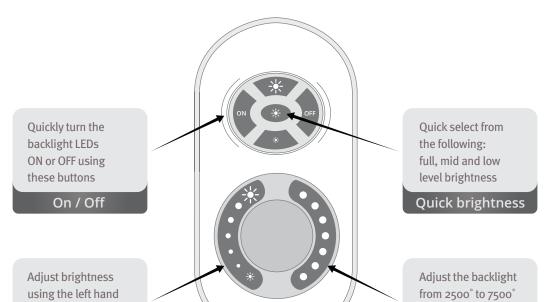


Unpacking AURA

- **o1** Once the crate side has been removed, carefully unscrew the four screws holding the base plate onto the crate bottom
- **o2** Lift the AURA from the crate, carefully removing it from the enclosure
- **o3** Remove the plastic covering that protects the AURA during shipping (*do not use any sharp tools as to not damage the surface finish on the kiosk*)
- **04** Check all outer finishes to ensure no damage occured during shipping
- **o5** Proceed to Step#1 on the back of this sheet, skipping 1B and removing all orange tape pieces (*which are added to keep parts from shifting during shipping*)
- **o6** Your graphic (*if ordered*) comes with a protective plastic cover, please remove before using the kiosk


Getting to know AURA

A	Tablet opening
B	Tablet frame
С	Magnetic graphic panel
D	Keyed locks
E	Back panel
Ð	Side rails
G	Base plate
•	120V grounded plug

 Powering your tablet

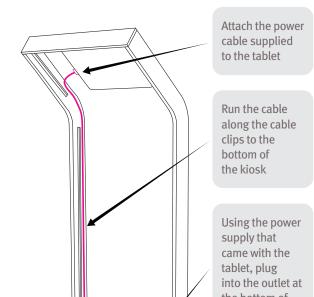






the bottom of the kiosk

Warranty & other information available at: **armodilo.com**






1 OPEN Opening the kiosk, removing the tablet and graphic panel

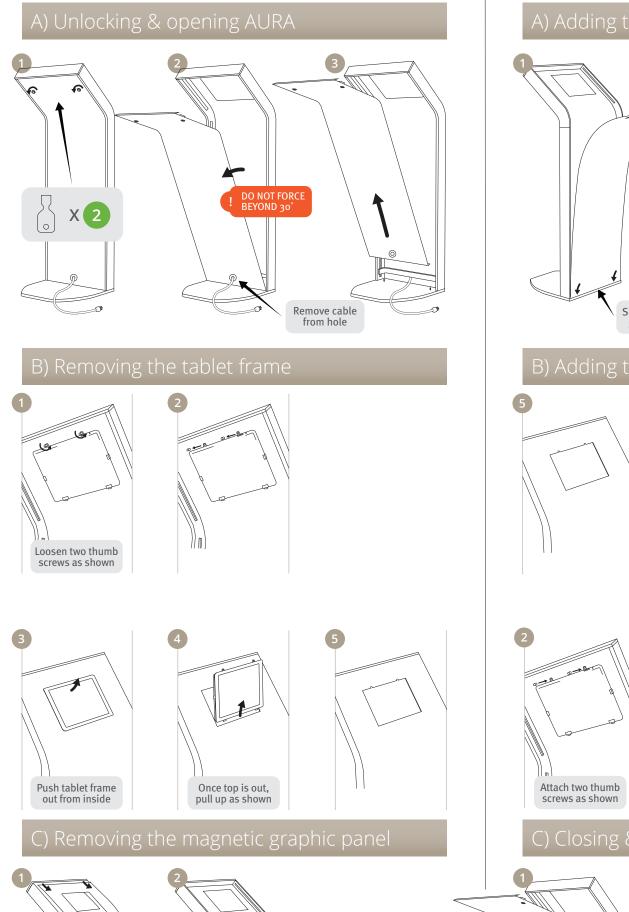




2 CLOSE Adding graphic panel, the tablet and closing the kiosk

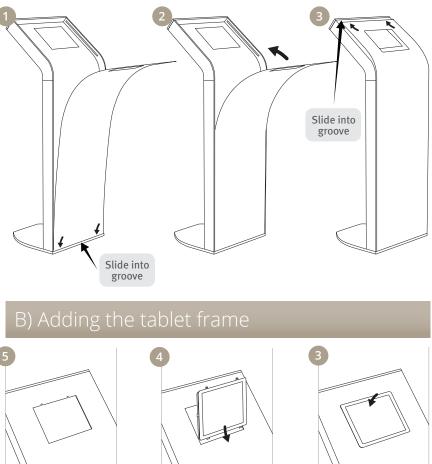



Slide tabs under

clear acrylic

Slide top of tablet frame into place

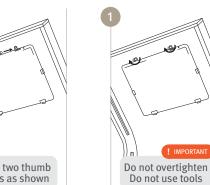

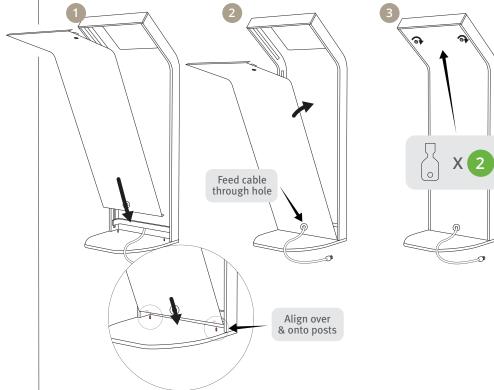

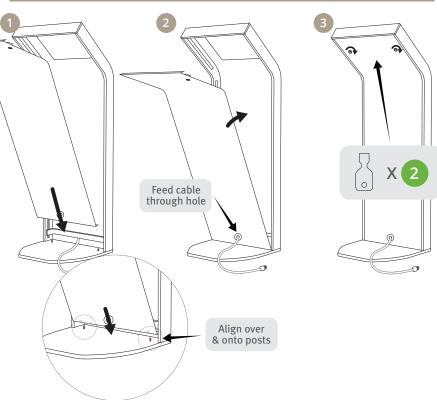



at: armodilo.com

