Model B-8 and B-8 Base

Installation and Maintenance Instructions


Questions? Call 800-657-2650 for help

For ALL installations:

- Display or sign load MUST be balanced.
- Do NOT use stabilizer casters or wheels.
- Do NOT exceed rated capacity of unit.


Display or Sign mounted on TOP of Rotator:

Rotator Without Base:

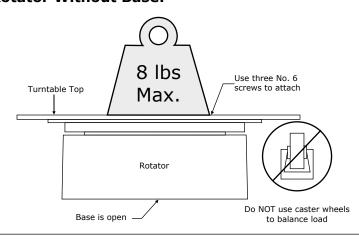

- Maximum compressive weight = 8 lbs.
- Maximum recommended display size = 1' x 1"
- Larger diameter turntable top may be attached to rotator turntable.
- Weight MUST be balanced (add a counter weight if needed).
- Do NOT use caster wheels to support turntable.

Rotator With Base:

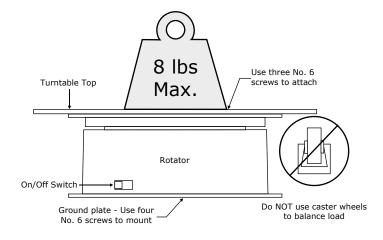

- Maximum compressive weight = 8 lbs.
- Maximum recommended display size = 1' x 1"
- Larger diameter turntable top may be attached to rotator turntable.
- Weight MUST be balanced (add a counter weight if needed).
- Do NOT use caster wheels to support turntable.
- Ground plate can be used for base mounting.

WARNING! Do NOT hang weight from unit.

Hanging Weight will cause unit to come apart and fall.

Maintenance:

No regular maintenance is required for this unit.



Phone: 800-657-2650 Email: info@dynapacrotating.com www.dynapacrotating.com

Model B-8 and B-8 Base

Electrical Connections

Questions? Call 800-657-2650 for help

↑WARNING




Disconnect power before servicing or installing. Do not touch any electrical components while unit is connected to power source.




Keep hands clear while operating. Read installation and maintenance instructions prior to operation.

Rotator without base (B-8)

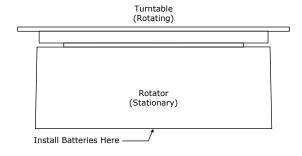

- Use one or two D-cell batteries (Two batteries will extend life.)
- Batteries are installed in base.
- Unit will automatically run when battery/batteries are installed.

Rotator with base (B-8 Base)

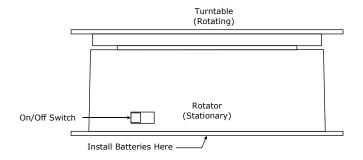

- Use one or two D-cell batteries (Two batteries will extend life.)
- Batteries are installed in base.
- Turn unit on/off with switch.



Phone: 800-657-2650 Email: info@dynapacrotating.com www.dynapacrotating.com