
# Model H-650

### Installation and Maintenance Instructions


### Questions? Call 800-657-2650 for help

### For ALL installations:

- Display or sign load MUST be balanced.
- Do NOT exceed rated capacity of unit.

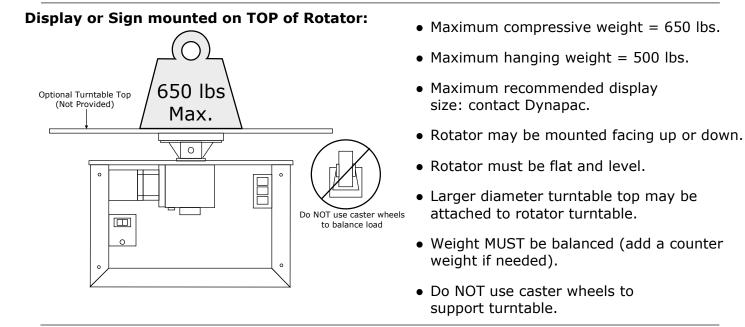

### Rotator inside display or sign:

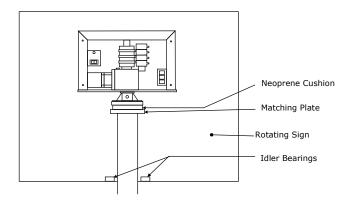

### Maintenance:


No regular maintenance is required for this unit.

- Maximum compressive weight = 650 lbs.
- Maximum hanging weight = 500 lbs.
- Maximum recommended display size: contact Dynapac
- Mount rotator inside sign, above center line.
- Sign must be welded or bolted to rotator frame.
- Mount idler bearings to stabilize sign.




## Model H-650 Electrical Connections


### Questions? Call 800-657-2650 for help

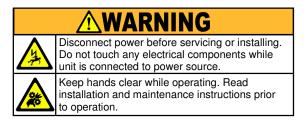


### Unit with rotating wires, turntable facing up:

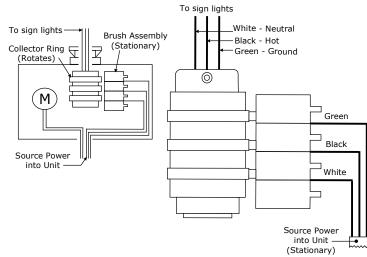

### Unit with rotating wires, turntable facing down:

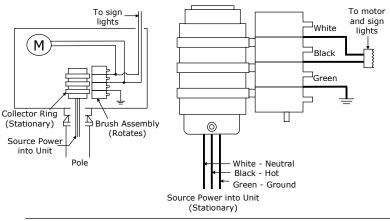

#### Unit without rotating wires:

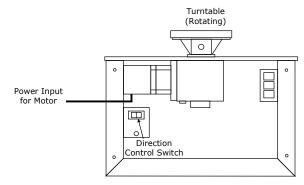

- WARNING! Electrical components are live when unit is plugged in.
- Do NOT exceed rated electrical capacity of unit. (See label on unit)
- Stationary source power wiring attaches to brush assembly.
- Motor does not turn, and can be attached directly to source power wiring.
- Rotating sign wiring attaches to collector ring.
- Motor power draw = 0.2 A (24 watts)
- WARNING! Electrical components are live when unit is plugged in.
- Do NOT exceed rated electrical capacity of unit. (See label on unit)
- Stationary source power wiring attaches to the collector ring.
- Rotating sign wiring attaches to the brush assembly.
- Motor power draw = 0.2 A (24 watts)
- No rotating electrical wires are available.
- Connect wires to power.
- Motor power draw = 0.2 A (24 watts)



Phone: 800-657-2650 Email: info@dynapacrotating.com www.dynapacrotating.com