# Model IR-100


## Installation and Maintenance Instructions

### Questions? Call 800-657-2650 for help

#### For ALL installations:

- Display or sign load MUST be balanced.
- Do NOT use stabilizer casters or wheels.
- Do NOT exceed rated capacity of unit.

#### **Display or Sign mounted on TOP of Rotator:**

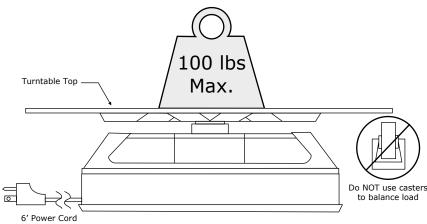

- Maximum compressive weight = 100 lbs.
- Maximum recommended display size = 3' x 3'
- Rotator must be placed on a flat and level surface.
- Larger diameter turntable top may be attached to rotator turntable.
- Weight MUST be balanced (add a counter weight if needed).
- Do NOT use caster wheels to support turntable.

## WARNING! Do NOT hang weight from unit.

Hanging Weight will cause unit to come apart and fall.

#### **Maintenance:**

No regular maintenance is required for this unit.



# Model IR-100

## **Electrical Connections**

Questions? Call 800-657-2650 for help






Disconnect power before servicing or installing. Do not touch any electrical components while unit is connected to power source.




Keep hands clear while operating. Read installation and maintenance instructions prior to operation.

#### Unit with rotating wires:

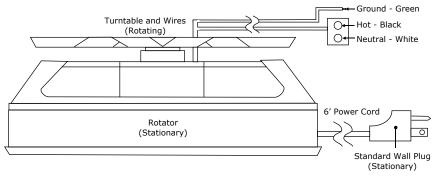

- WARNING! Electrical componenets are live when unit is plugged in.
- Do NOT exceed rated capacity of unit (see label on unit).
- Attach display wires to rotating turntable wires.
- Plug unit into wall to begin rotating.
  - Motor power draw = .05 A (6 watts)
  - No power switch on unit.

### Unit without rotating wires:

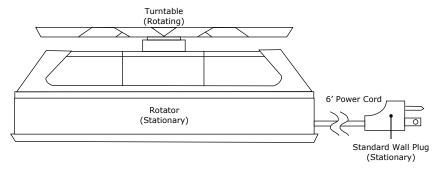

- No rotating electrical wires are available.
- Plug unit into wall to begin rotating.
- Motor power draw = .05 A (6 watts)
- No power switch on unit.



Phone: 800-657-2650 Email: info@dynapacrotating.com www.dynapacrotating.com