


# Xpress Banner Display

## Product Parts


1. Xpress Banner Hardware
2. Graphic
3. Pouch

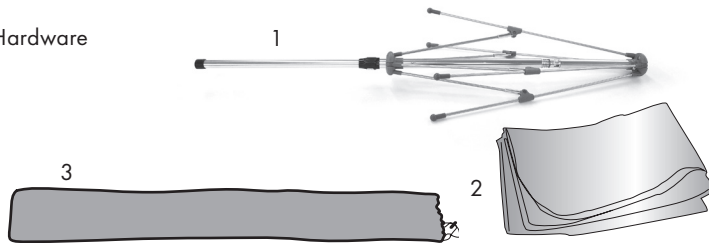

## Display Set-Up

### Step 1

Similar to an umbrella, slide the bottom portion of Xpress Banner Hardware (1) to top of center post. There are two holes on top portion for button to lock into, this allows for either vertical or horizontal options for your display.

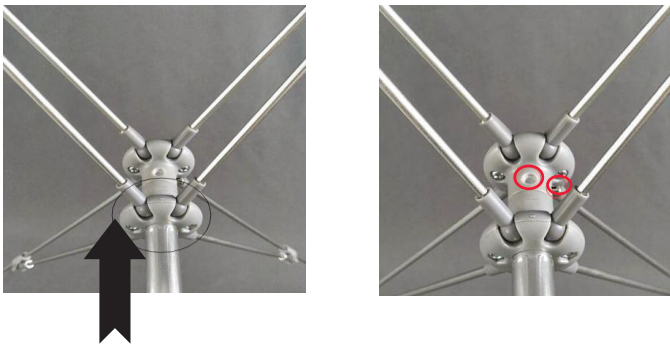

### Step 2

Place each rounded pole end into pole pocket of each corner of Graphic (2).



### Step 3

Pulling the locking collar down allows leg to be angled. A slight twist to the bottom half of pole will adjust the length of the pole.



Adjust Pole Length.



## Storage & Care

Display can be stored in Pouch (3) with Graphic (2) attached. To clean hardware, wipe with damp cloth. Graphic can be machine washed on gentle cycle using mild detergent. Tumble Dry No Heat. Do NOT dry clean, Do Not Iron.