## **TSQU-1405**

## SET UP INSTRUCTIONS:

- CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
- 2. CONNECT SIDE TUBES
- 3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
- 4. CAREFULLY REMOVE FABRIC COVER FROM BAG
  5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
  6. PULL COVER CAREFULLY UP TO THE TOP
- 7. CLOSE ALL ZIPPERS
- 9. CONNECT CABLE HARNESS TO THE EYEBOLTS
  10. COMPLETELY TIGHTEN THREADED CONNECTORS


BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME


TOTAL WEIGHT: 155.4 (lbs)


HARDWARE: 105.0 (lbs)


MAX SIZE: 51.3 (in)


- FABRIC CARE INSTRUCTIONS: 1. UNZIP COVER ZIPPERS 2. CAREFULLY REMOVE FABRIC COVER
- 3. CLOSE ALL ZIPPERS
- 4. FOLD OR ROLL NEATLY
- 5. PLACE FABRIC IN COVER BAG

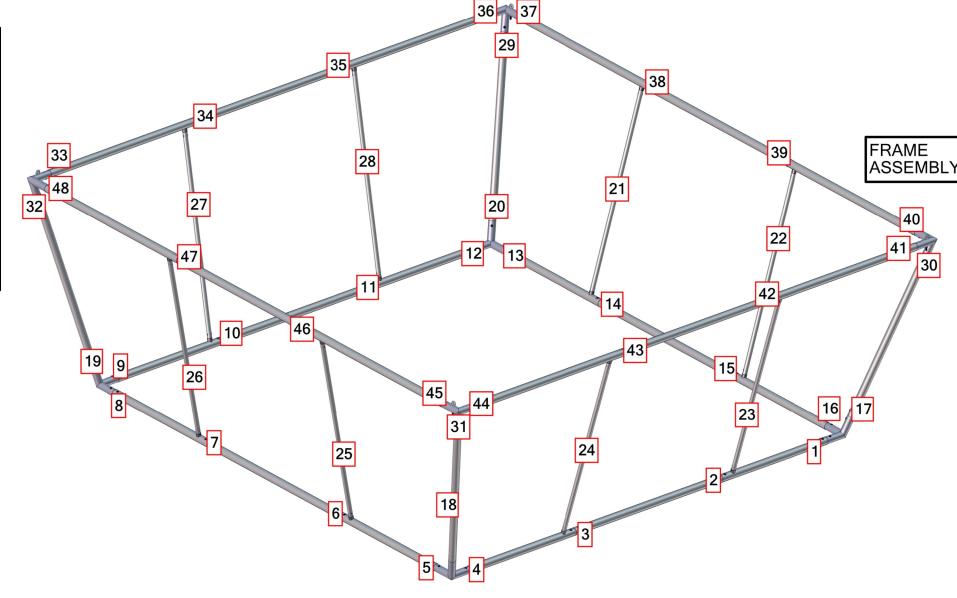


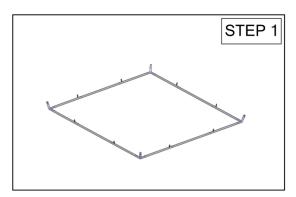


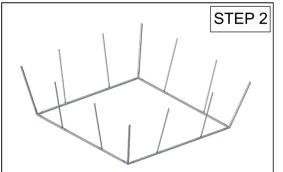

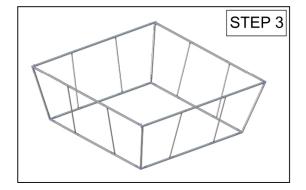


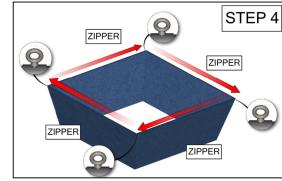


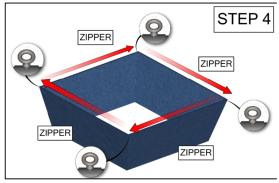


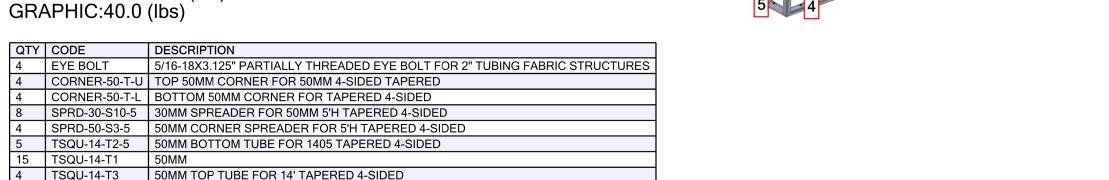




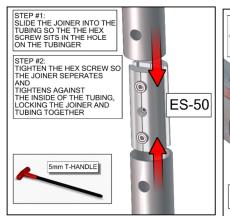

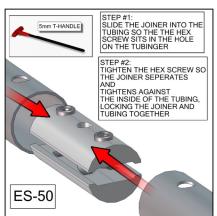

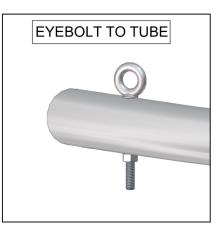

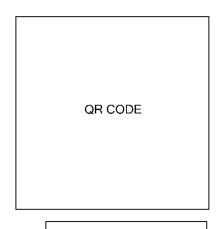

Set-up Video