

Instructions For:

Double Premium Bracket System




Product Specifications

Graphic sizes will vary - **Do not exceed 24 Square Feet**

Requirements: 2" Top and Bottom Pole Pockets with #2 Grommets

Product Parts

- 1 - Castings (x4)
 - 2 - Premium Fiberglass Arms (x4)
 - 3 - 40" Stainless Steel Bands (x4)
 - 4 - Large Pin (x4)
 - 5 - Small Pin (x4)
 - 6 - Screws (x8)
 - 7 - Large Washer (x4)
 - 8 - Small Washer (x8)
- *Screw/nut driver & drill will be needed**

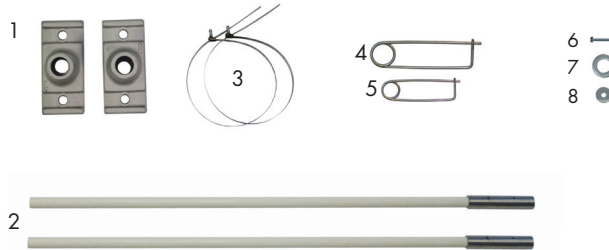

Step 1


Take out all parts.

Step 2

Attach the top Castings (1) to pole. Be sure the arrow is facing up - away from the banner and that the castings are on opposite sides of the pole.

Place a Screw (6) with a Small Washer (9) in the top hole and drill into place. Depending on the kind of pole - you may need to pre-drill the holes.

Repeat Step 2 with the hole on the bottom of both top Castings (1).

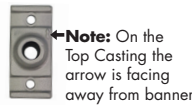

Step 5

Slide Large Washer (7) onto the Premium Fiberglass Arm (2). This will keep your banner from sliding up the arm.





Step 6

Measure your banner for correct placement of the lower Castings (1) so it fits your boulevard banners properly.

Repeat Step 2 -5 to attach the Lower Castings (1) and arms.

Be sure the arrow is facing down on both lower casting - away from the banner, and that the Pin (5) clips above the Castings.

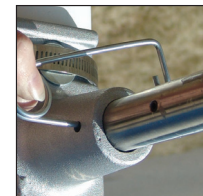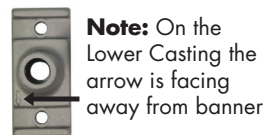

*Pin should clip above casting

Step 3



Secure the top Castings (1) to the Pole with two Stainless Steel bands (3). Tighten the bands until they hold both brackets securely and lock it into place with a screwdriver or nut driver. Clip off any excess band length.



Step 7

Slide your banner onto the Premium Fiberglass Arms (2).



Secure the top and bottom of the banner by pinning the Large Pin (4) through the grommets.

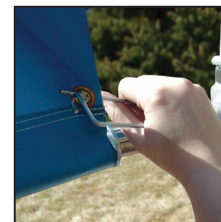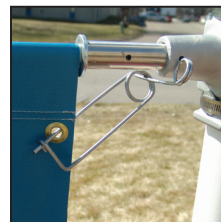

Step 4

Insert the end of a Premium Fiberglass Arm (2) into the Casting (1) **Image A**. Line up the holes in the arm to the holes on the side of the Casting and secure by inserting the Small Pin (5) **Image B**.

Before closing the Small Pin (6) attach the Large Pin (4) onto the Small Pin (5) as shown in **Image C**.

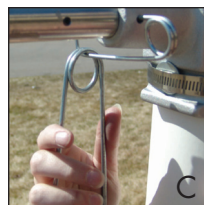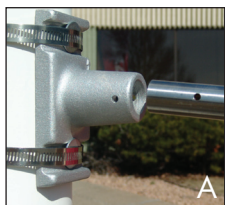

*Pin should clip below casting