

Please Note: Follow the set up instructions for the Waveline Media panel before beginning the hanging harness instructions.

Parts Included:

(x2) M6 eye bolts for the frame



(x2) Cables for attaching monitor to the frame



(x2) M4, M6, or M8 eye bolts for the monitor

**Only one set of two will be used.*


**The mounting pattern and screws are determined by the VESA standards and specified by the monitor's manufacturer.*




Schematics:

Monitor (Not Included) Requirements:

**Monitors not meeting these requirements may work but will not hang straight and/or may cause fabric to bunch.*

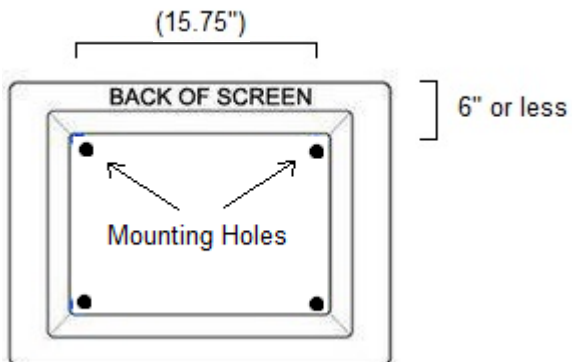


Basic Schematic:

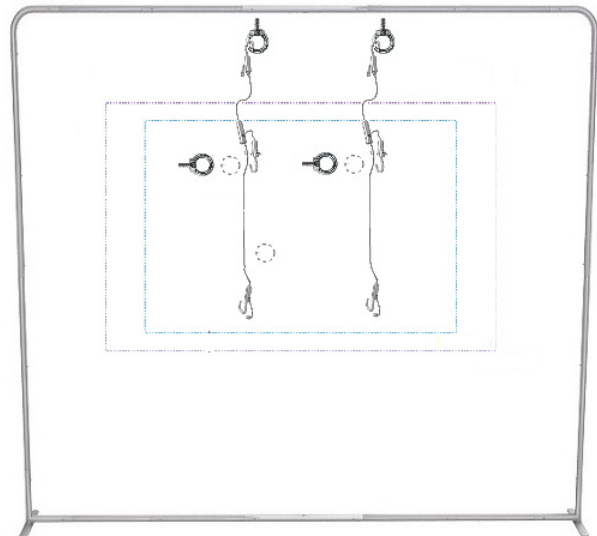


Setup Instructions:

Step 1: With the back of the graphic unzipped (Image 2), attach two M6 eye bolts (Image 1) to the underside of the top bar of the frame (Image 3).

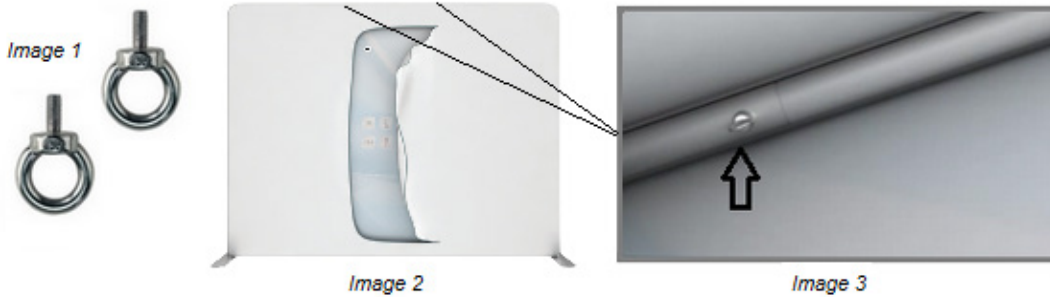

Setup Instructions Continued:

Step 2: Screw eye bolt that fits your monitor into the back upper two mounting holes. (Use one set of two, M8, M6, or M4)

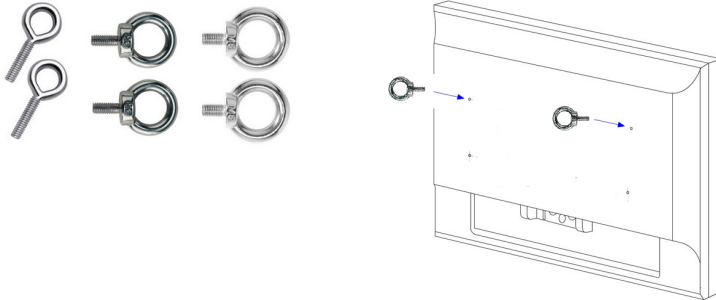

Step 3: Hook one cable to each of the eye bolts in the top of the frame (Image 1 and 2). Adjust the height of the middle hook by compressing the pin (See Arrows in Image 3) and pulling the wire up or down, release to lock. Put the middle hook through the top two grommets (Image 4). Attach hooks to the monitor (Image 5). The third, lowest hook is not used.

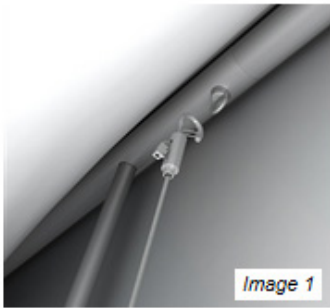


Image 1



Image 2



Image 3



Image 4



Image 5

Step 4: Run power and a/v cords through lower grommet on the front (Image 1) and between the zippers in the back (Image 2).

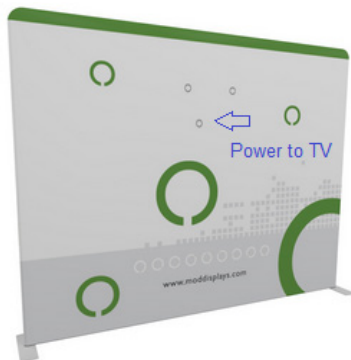


Image 1

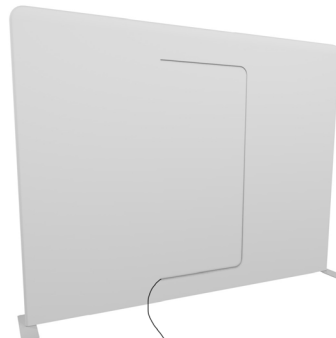


Image 2



Complete