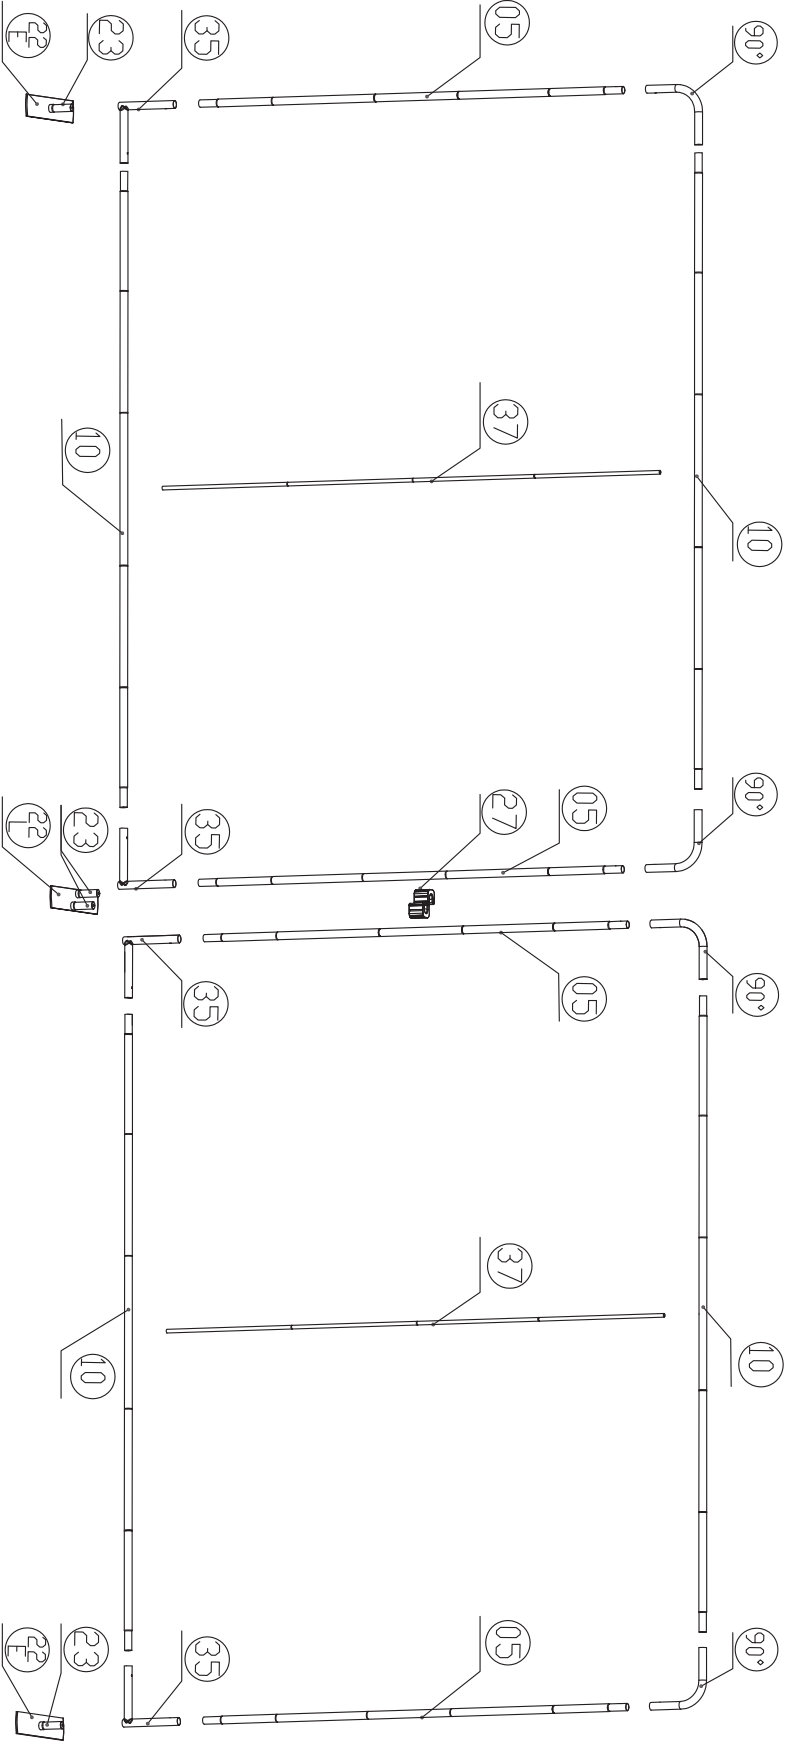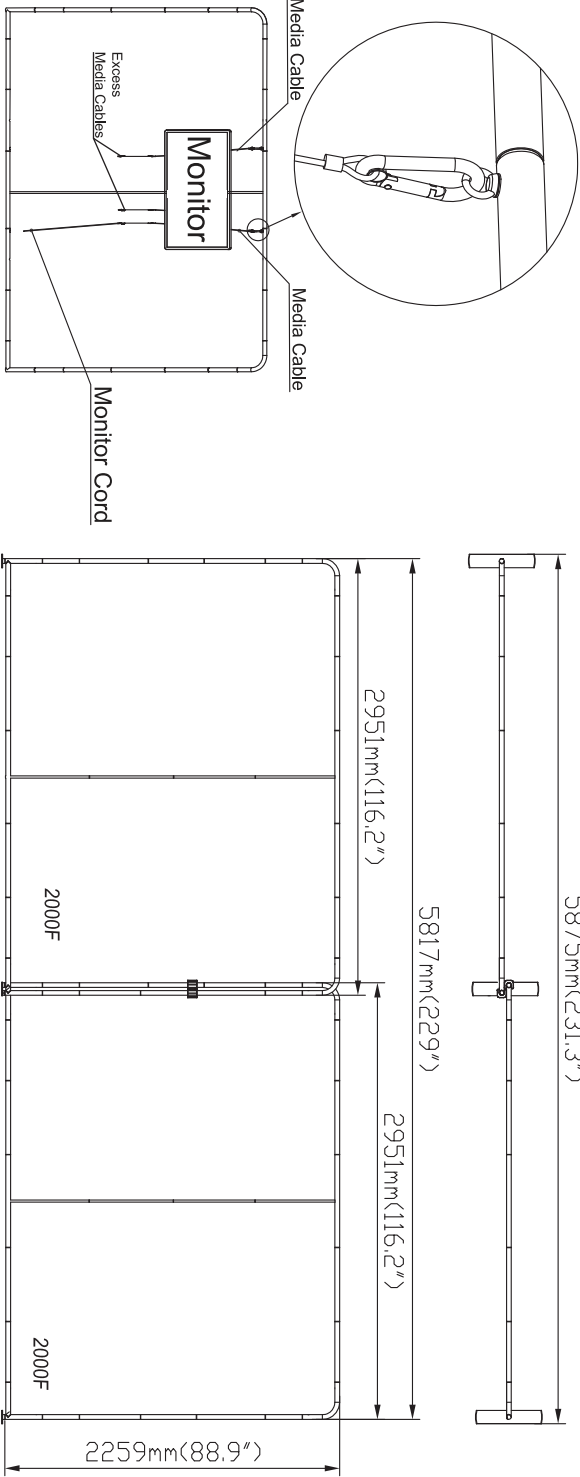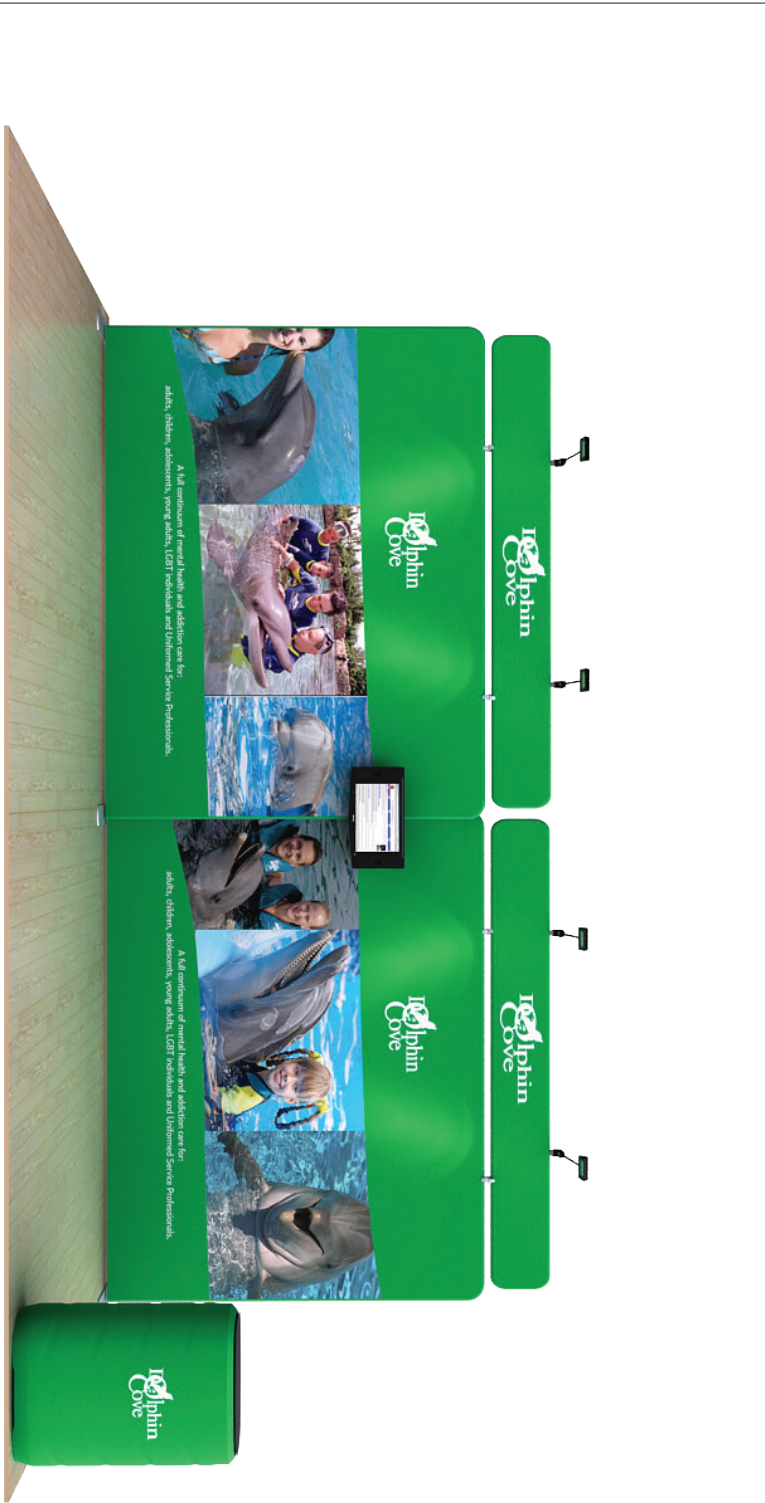# WLM-DOLPHN A

Setup Instructions

1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.

2. Make sure that all the corresponding numbers are correct.

3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.

4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.

5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.

6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.

7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

Media Cable
Excess
Media Cables
Monitor
Media Cable
Monitor Cord

Frame		Frame		Frame		Frame		Frame		TV kit	Shipping Case	accessories	
NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Confirm
27	1		22								22.6"	CA900	
37	2		L 22	1							32"	CA500	
23	4		E 22	2							40"		
10	4		90°	4									
05	4		35	4									
NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Confirm

2951mm(116.2")
2951mm(116.2")
5817mm(229")
5875mm(231.3")
2000F
2000F
2259mm(88.9")

Setup Instructions

1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.

2. Make sure that all the corresponding numbers are correct.

3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.

4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.

5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.

6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.

7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

Frame			Frame			Frame			Frame			Frame			Frame			TV kit	Shipping Case	accessories
NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm			
27	1		25 clear	8														22.6"	CA900	
37	2		22 L	1														32"	CA500	
23	4		22 E	2		16	4											40"		
10	4		90°	4		09	4													
05	4		35	4		34	2													

Media Cable

Excess Media Cables

Monitor

Monitor Cord

Media Cable

5875mm(231.3")
5817mm(229")
2876mm(113.2")
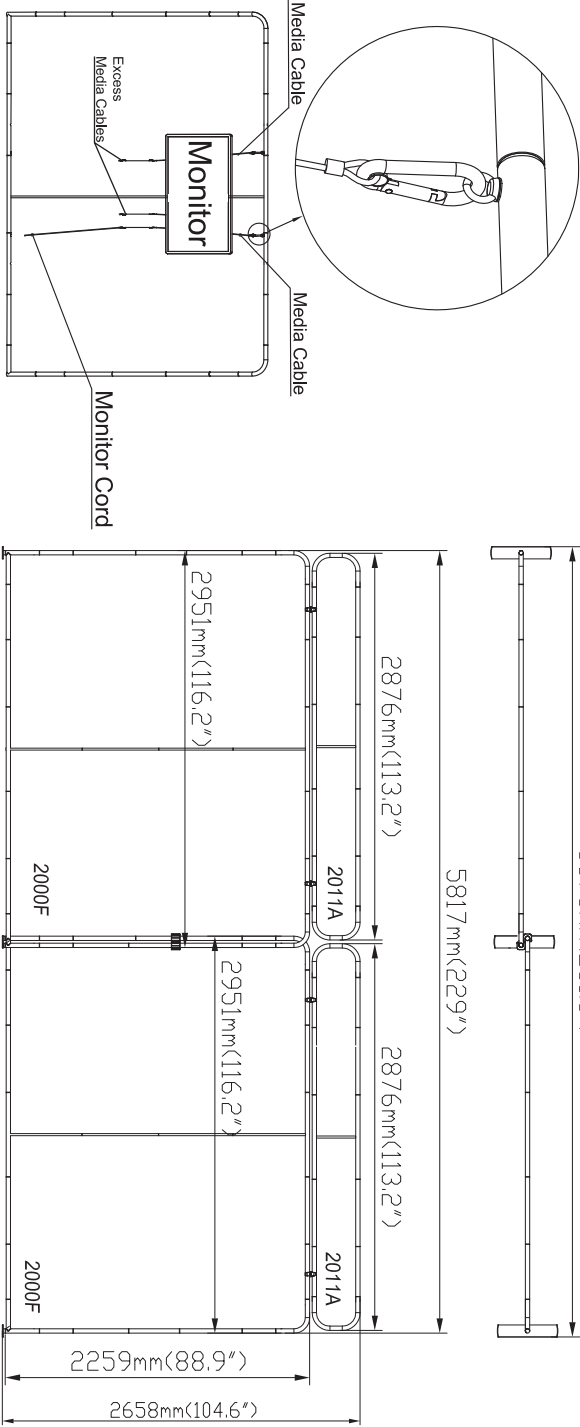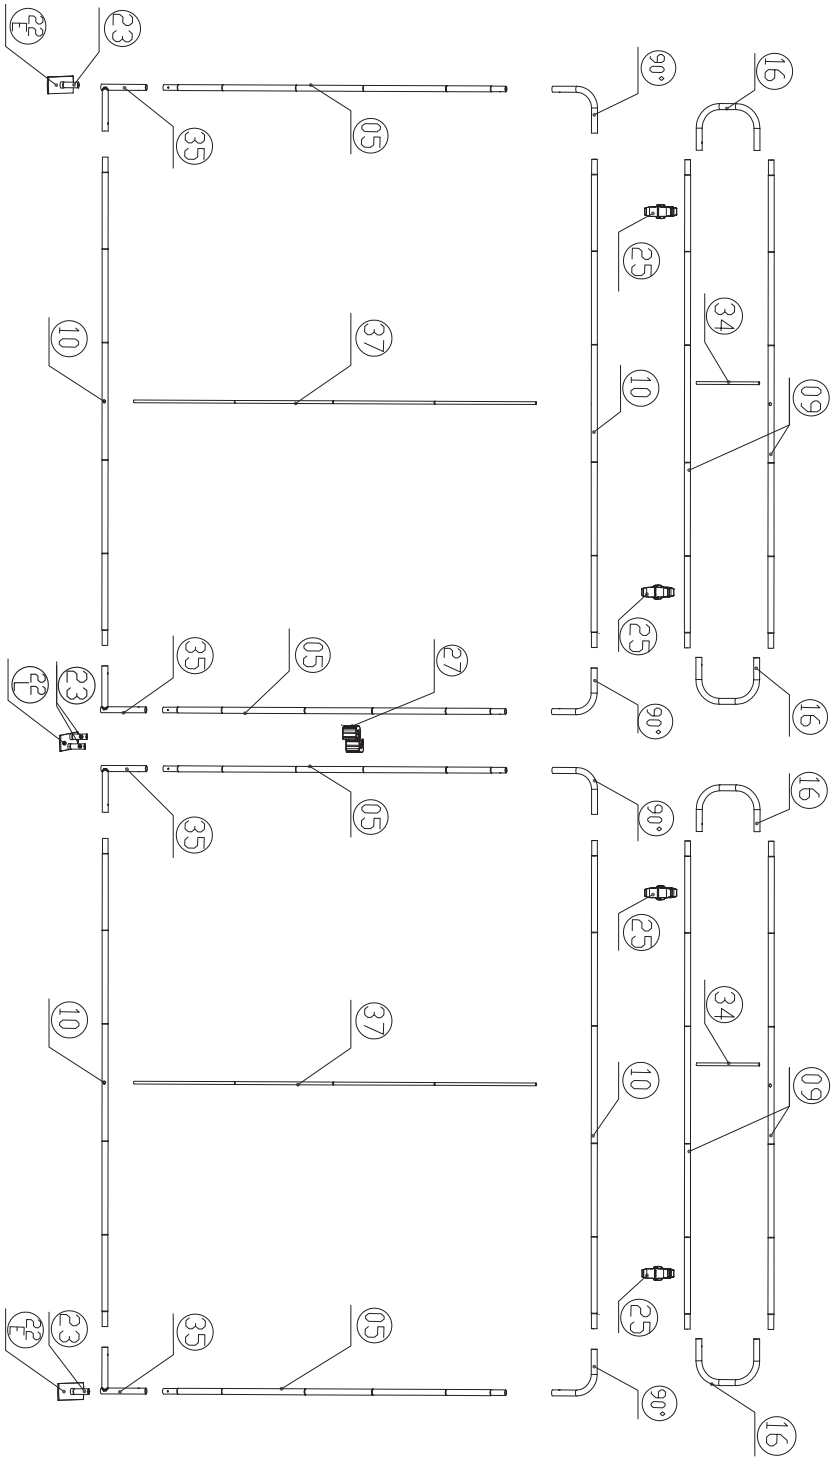2951mm(116.2")
2000F
2011A
2259mm(88.9")
2658mm(104.6")

WLM-DOLPHN C – Curved Header

Setup Instructions

1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.

2. Make sure that all the corresponding numbers are correct.

3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.

4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.

5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.

6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.

7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

Media Cable
Excess Media Cables
Monitor
Media Cable
Monitor Cord

Frame		Frame		Frame		Frame		Frame		Frame		TV kit	Shipping Case accessories
NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm		
22/E	2	37	2	34	2							22.6"	CA900
23	4	05	4	24/R clear	4							32"	CA500
90°	4	27	1	24/L clear	4							40"	2000F*2+2011B*2
10	4	16	4	22	1								
35	4	17	4										

2602mm(102.4")   2011B
2951mm(116.2")   2000F
2602mm(102.4")   2011B
2951mm(116.2")   2000F
2259mm(88.9")
2658mm(104.6")
2000mm(78.7")
5817mm(229")
5875mm(231.3")
469mm(18.5")