


Step 1. Attach legs to base using three M12 bolts. Tighten w/ 8mm hex key. (**do not over tighten**)

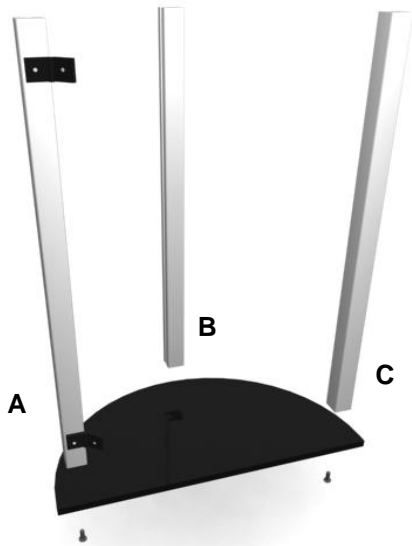

A

C

Top view of extrusions

Step 2. Attach top using three M12 bolts. Tighten w/ 8mm hex key. (**do not over tighten**)



Step 3. Insert infill panels



Step 4. Attach door using two 1/4"-20 x 1/2" button head cap screws. Tighten w/ 5/32" hex key. (**do not over tighten**)

