


Step 1. Assemble left and right ends.



Step 3. Insert front infill panels.

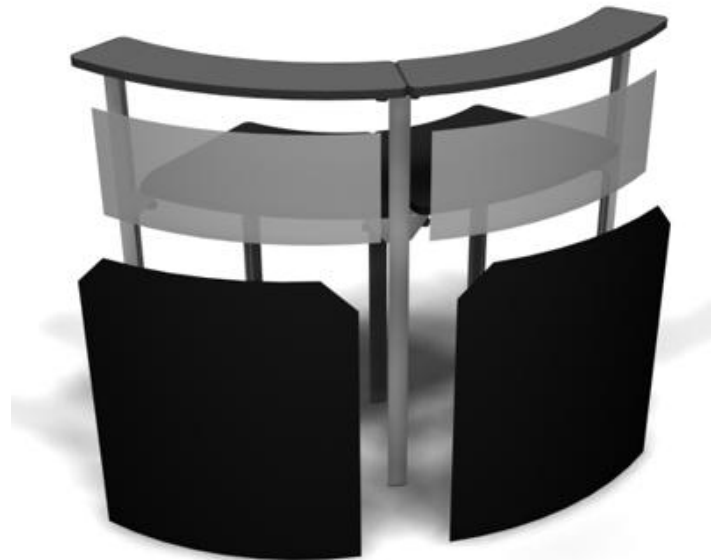

Step 2. Attach transaction tops

