



- A.) x1 Mount Plate
- B.) x2 Mounting Brackets
- C.) x2 1/2" Flatheads
- D.) x2 T-nuts
- E.) x4 3/4" Spacers
- F.) x4 M4 30mm Phillips
- G.) x4 M4 12mm Phillips




4" Phillips Screw Driver

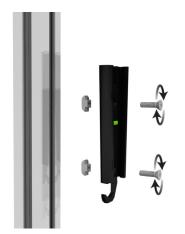


Step 1. Insert ×2 1/2" Flathead screws through mout plate; attach s-nuts.

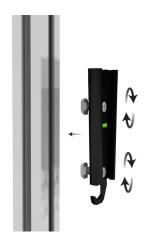


Step 2. Insert s-nuts into XV extrusion channel.

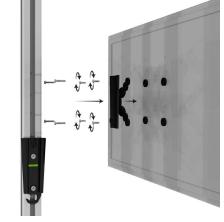

Step 3. Attach spacers(if needed). Choose M4 screw set that fits your needs attach monitor bracket to back of TV.

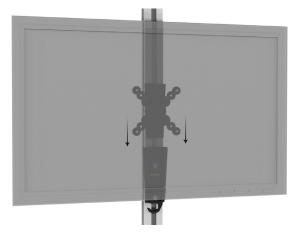

Step 4. Slide monitor bracket into mounting plate.

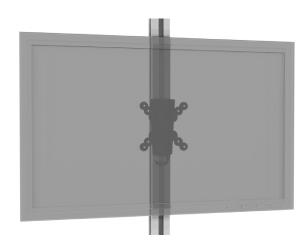

Step 5. Complete.