


Step 1. Assemble left and right ends.

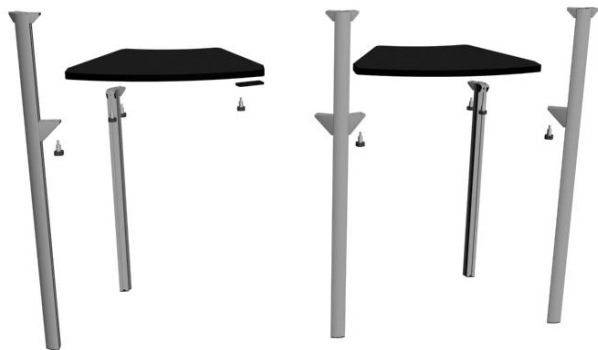

Step 3. Insert panels.



Step 2. Attach transaction tops & joining plate. (there are 2 holes at termination end)

