
WAVELINE® MEDIA 20ft DISPLAY KITS

WLM-H-ANGELFISH-A

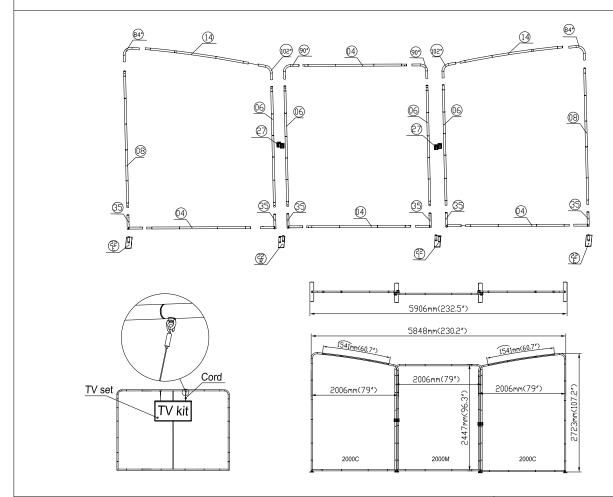




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:s	Ac	cessor	ies	Shi	oping (Case		TV Kit	
84°)	2		(22 R	1		(22 L	1					Single or Double	e-sided	59			CA900			22.6"		
14	2		(102°)	2		(22 E	2					None					CA500			32"		
08	2		90°)	2								Complete					NYLON BAG			40"		
06	4		27	2								Split-ship										
04	4		35	6																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-ANGELFISH-C

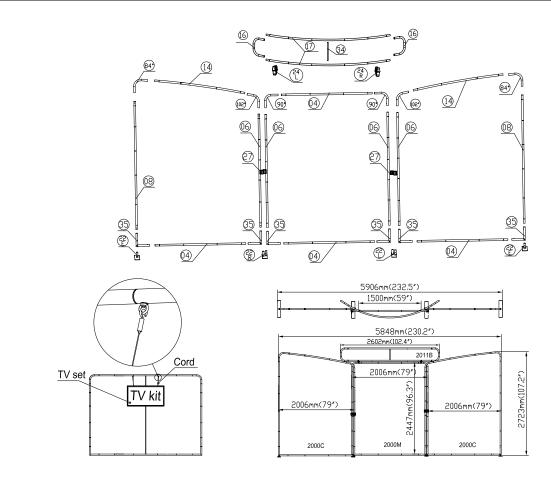




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	oping C	ase		TV Kit	
34	1		84°)	2		(22 L	1		(24 L	1		Single or Double	e-sided	59			CA900			22.6"		
14	2		102°	2		(22 E	2		(24 R	1		None					CA500			32"		
08	2		90°	2		(22 R	1					Complete					NYLON BAG			40"		
06	4		27	2		16	2					Split-ship										
04	4		35	6		17	2															
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-ATLANTIC-A

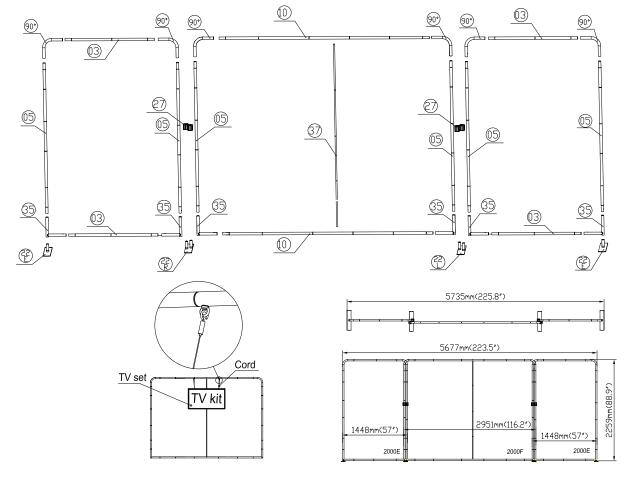




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	٠ς	Αr	cessor	ies	Shii	oping C	ase		TV Kit	
27)												Single or Double		59			CA900	7	luse	22.6"		
90°	6		(22 L	1			/					None					CA500			32"		
10	2		(22 E	2								Complete					NYLON BAG			40"		
05	6		37	1								Split-ship										
03	4		35	6																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-ATLANTIC-B

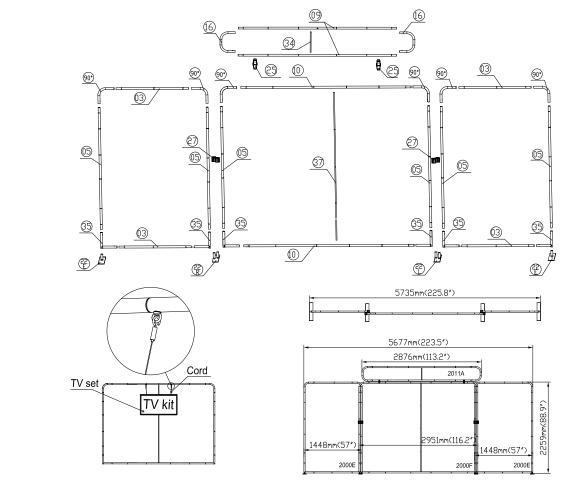




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	pping (ase		TV Kit	
27	2		(22 R	1		34	1					Single or Double	e-sided	59			CA900			22.6"		
16	2		(22 L	1		09	2					None					CA500			32"		
10	2		(22 E	2		25	2					Complete					NYLON BAG			40"		
05	6		37	1		90°)	6					Split-ship										
03	4		35	6																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-ATLANTIC-C

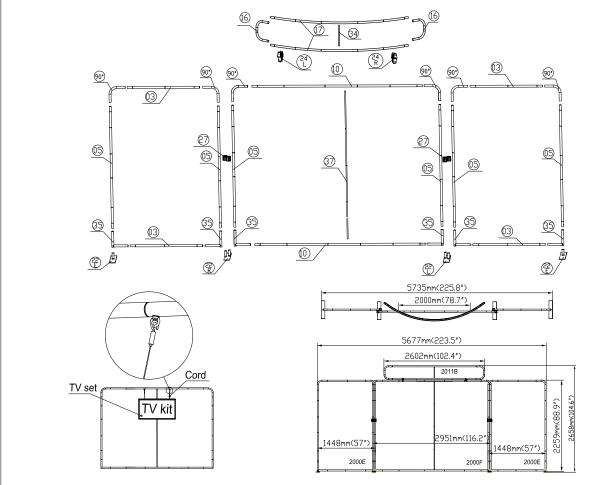




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:s	Ac	cessor	ies	Shi	oping C	ase		TV Kit	
2 22 1 24 1										Single or Double	e-sided	59			CA900			22.6"				
90°	6		(22 L	1		(24 L	1					None					CA500			32"		
10	2		(22 E	2		16	2					Complete					NYLON BAG			40"		
05	6		37	1		34	1					Split-ship										
03	4		35	6		17	2															
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-CARIBBEAN-A

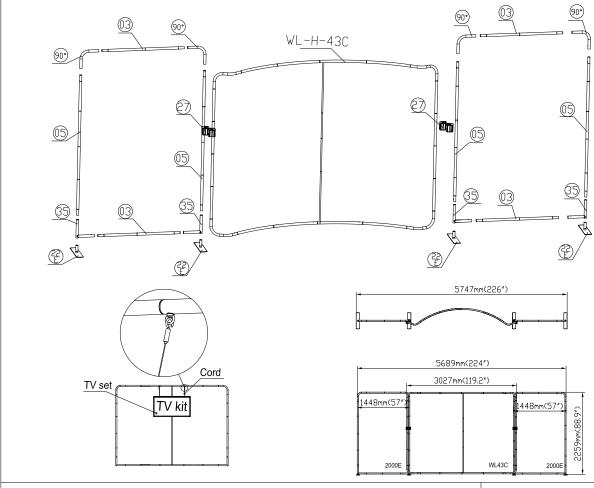




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:5	Ac	cessor	ies	Shi	pping (ase		TV Kit	
(22 E	4		WL-H-43C	1								Single or Double	e-sided	59			CA900			22.6"		
27	2		35	4						/		None					CA500			32"		
90°	4											Complete					NYLON BAG			40"		
05	4											Split-ship										
03	4																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-CARIBBEAN-C

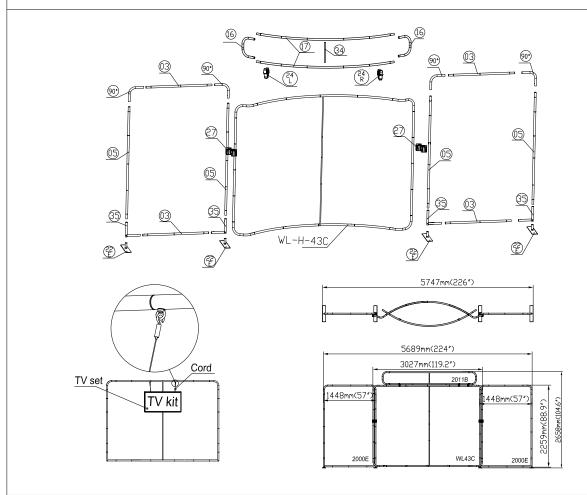






- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessori	ies	Shi	pping C	ase		TV Kit	
(22) E	4		(24 L	1		16	2					Single or Double	e-sided	59			CA900			22.6"		
27	2		(24 R	1		17	2			/		None					CA500			32"		
34	1		WL-H-43C	1								Complete					NYLON BAG			40"		
05	4		90°	4								Split-ship										
03	4		35	4																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-DOLPHIN-A

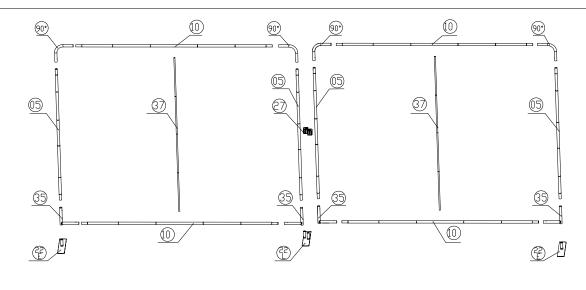

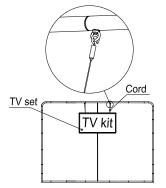

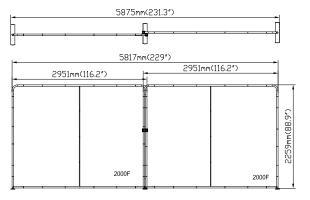




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphics	Ad	cessor	ies	Shij	pping (Case		TV Kit	
27	1		(22 L	1								Single or Double-sided	59			CA900			22.6"		
37	2		(22 E	2								None				CA500			32"		
35	4		90°	4								Complete				NYLON BAG			40"		
10	4											Split-ship									
05	4																				
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-DOLPHIN-B

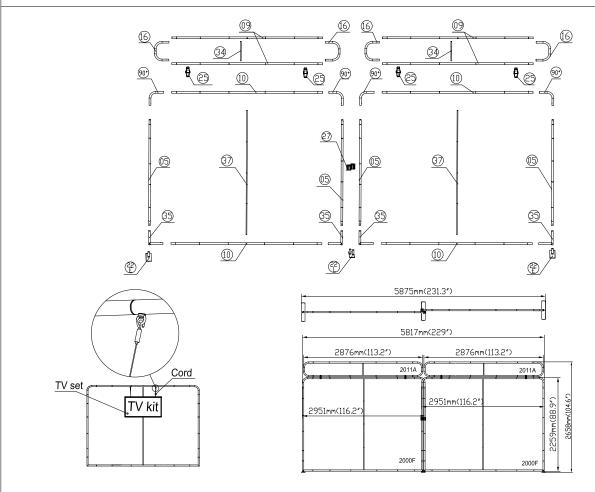




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	oping C	ase		TV Kit	
27	1		25	4		09	4					Single or Double	e-sided	59			CA900			22.6"		
37	2		(22 L	1		34	2					None					CA500			32"		
16	4		(22 E	2								Complete					NYLON BAG			40"		
10	4		90°)	4								Split-ship										
05	4		35	4																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-DOLPHIN-C

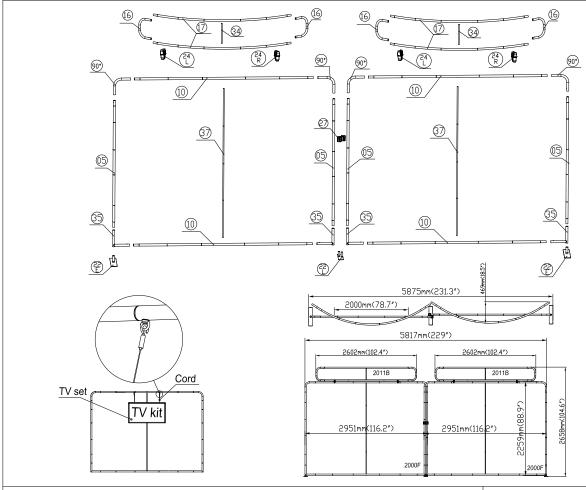




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:s	Ac	cessor	ies	Shi	pping (:ase	l	TV Kit	
(22) E								Single or Double	e-sided	59			CA900			22.6"						
34	2		05	4		(24 L	2					None					CA500			32"		
90°	4		27	1		(22 L	1					Complete					NYLON BAG			40"		
10	4		16	4								Split-ship										
35	4		17	4																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm


WLM-H-HAMMERHEAD

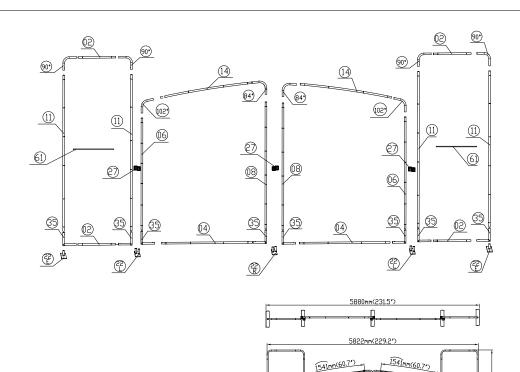

1032mm(40.6°)

2000H

2000C






Setup Instructions


- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:s	Ac	cessori	es	Ship	oping C	ase		TV Kit	
08	2		84°	2		90°	4					Single or Double	e-sided	20001	H*2+20000	C*2	CA900					
11	4		14	2		22 R	1					None					CA500					
06	2		102°	2		(22 L	2					Complete					NYLON BAG					
04	2		27	3		(22 E	2					Split-ship										
02	4		35	8		61	2															
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

1032mm (40.6") 2000H

WLM-H-GULF

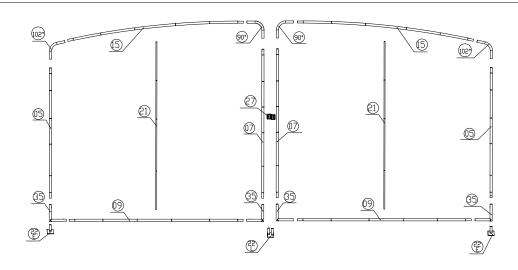

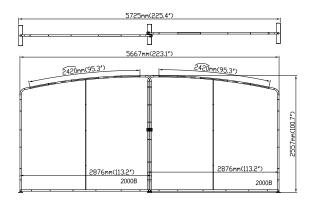




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	ping (ase		TV Kit	
35	4		(22) L	1		(22) E	2					Single or Double	e-sided				CA900					
27	1		15	2								None					CA500					
09	2		21	2								Complete					NYLON BAG					
07	2		90°	2								Split-ship										
05	2		102°	2																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-MARLIN-A

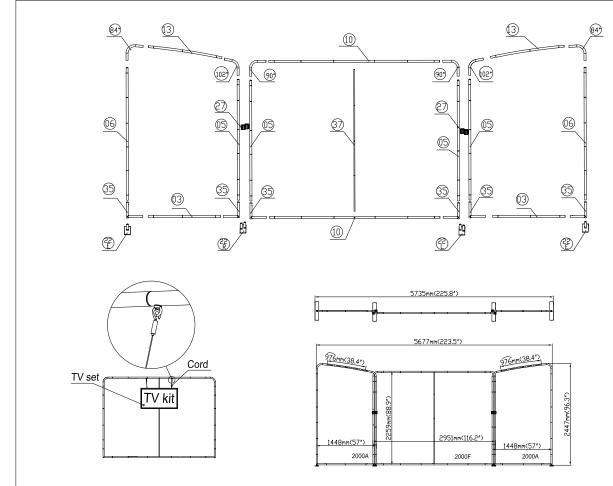




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:s	Ac	cessor	ies	Shij	ping (ase		TV Kit	
102°	2		90°	2		(22 E	2					Single or Double	e-sided	59			CA900			22.6"		
84°)	2		35	6		10	2					None					CA500			32"		
13	2		27	2		05	4					Complete					NYLON BAG			40"		
06	2		(22 R	1		03	2					Split-ship										
37	1		(22) L	1																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-MARLIN-B

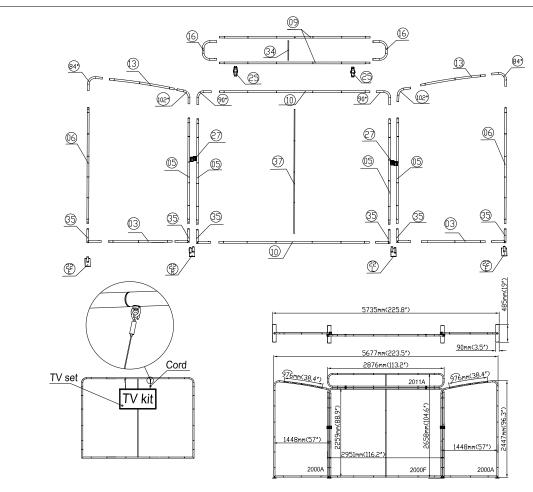




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	ping (ase		TV Kit	
(22 E	2		35	6		37	1		25	2		Single or Double	e-sided	59			CA900			22.6"		
102°	2		34	1		90°	2		16	2		None					CA500			32"		
84°)	2		10	2		27	2		09	2		Complete					NYLON BAG			40"		
13	2		05	4		(22 R	1					Split-ship										
06	2		03	2		(22 L	1															
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-MARLIN-C

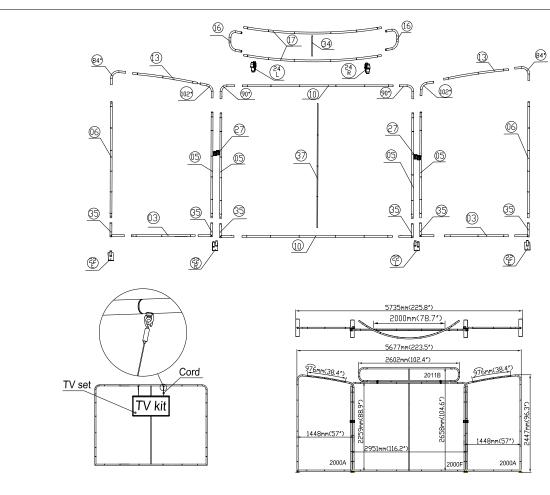




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:s	Ac	cessor	ies	Shi	pping (ase		TV Kit	
(22 E	2		35	6		37	1		(24 R	1		Single or Double	e-sided	59			CA900			22.6"		
102°	2		34	1		90°	2		(24 L	1		None					CA500			32"		
84°)	2		10	2		27	2		16	2		Complete					NYLON BAG			40"		
13	2		05	4		(22 R	1		17	2		Split-ship										
06	2		03	2		(22 L	1															
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-ORCA-A

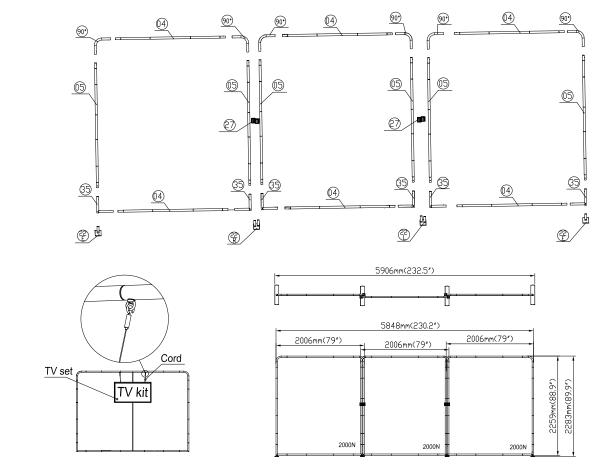




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Ship	ping (ase		TV Kit	
35	6		(22 R	1								Single or Double	e-sided	59			CA900			22.6"		
27	2		(22 L	1								None					CA500			32"		
90°	6		(22 E	2								Complete					NYLON BAG			40"		
05	6											Split-ship										
04	6																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-ORCA-B

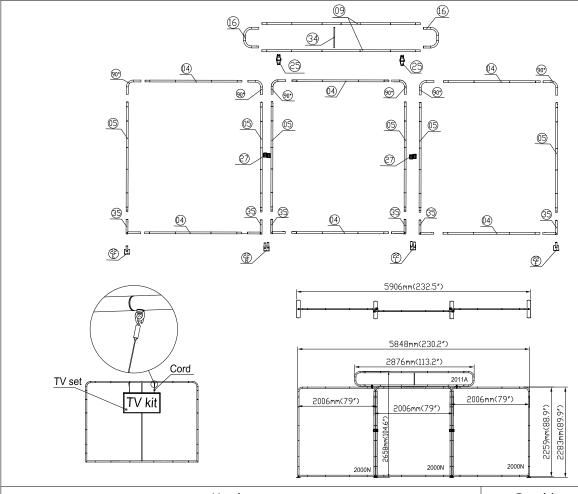




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:s	Ac	cessor	ies	Shi	pping (Case		TV Kit	
35	6		16	2		09	2					Single or Double	e-sided	59			CA900			22.6"		
27	2		(22 R	1		25	2					None					CA500			32"		
34	1		(22 L	1								Complete					NYLON BAG			40"		
05	6		(22 E	2								Split-ship										
04	6		90°	6																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-ORCA-C

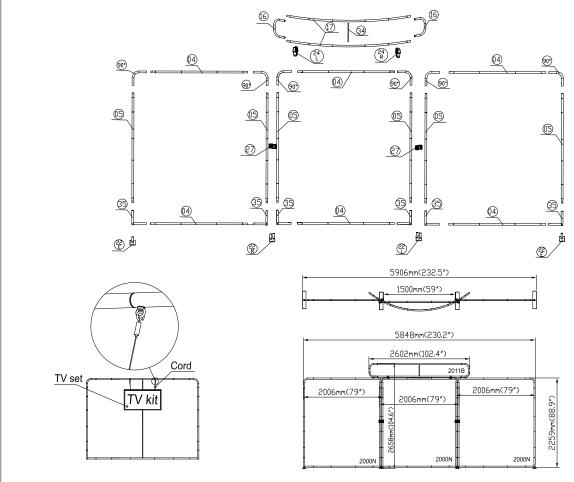




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	oping C	ase		TV Kit	
35	6		16	2		17	2					Single or Double	e-sided	59			CA900			22.6"		
27	2		(22 R	1		(24 R	1					None					CA500			32"		
34	1		(22) L	1		(24 L	1					Complete					NYLON BAG			40"		
05	6		(22 E	2								Split-ship										
04	6		90°	6																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-OSPREY-A

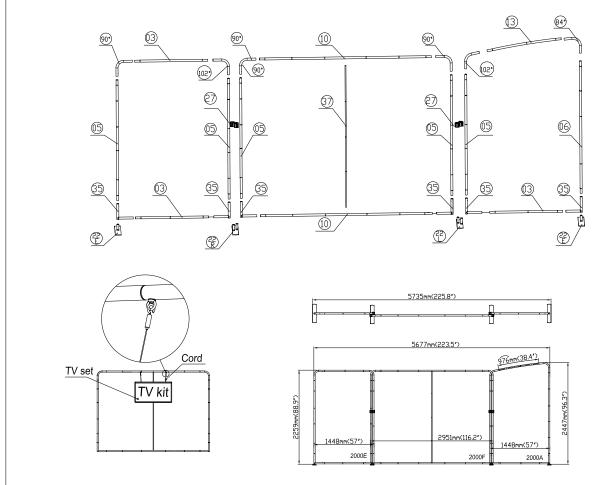




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	ping C	ase		TV Kit	
102°	1		90°	4		(22 E	2					Single or Double	e-sided	59			CA900			22.6"		
84°	1		35	6		10	2					None					CA500			32"		
13	1		27	2		05	5					Complete					NYLON BAG			40"		
06	1		(22 R	1		03	3					Split-ship										
37	1		(22) L	1																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-OSPREY-B

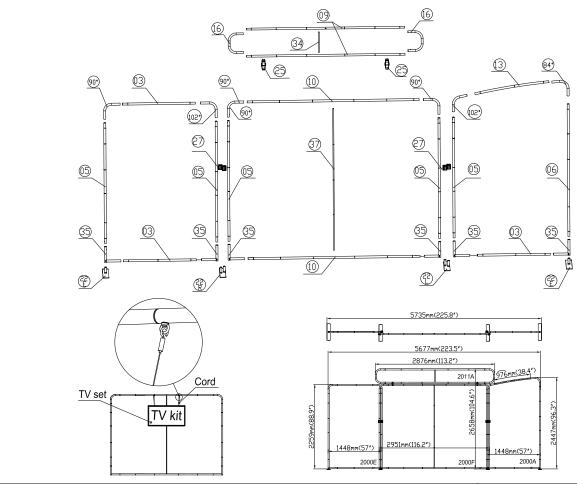




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	ping (ase		TV Kit	
102°												Single or Double	e-sided	59			CA900			22.6"		
84°)	1		35	6		25	2		34	1		None					CA500			32"		
13	1		27	2		10	2		09	2		Complete					NYLON BAG			40"		
06	1		(22) R	1		05	5					Split-ship										
37	1		(22 L	1		03	3															
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-OSPREY-C

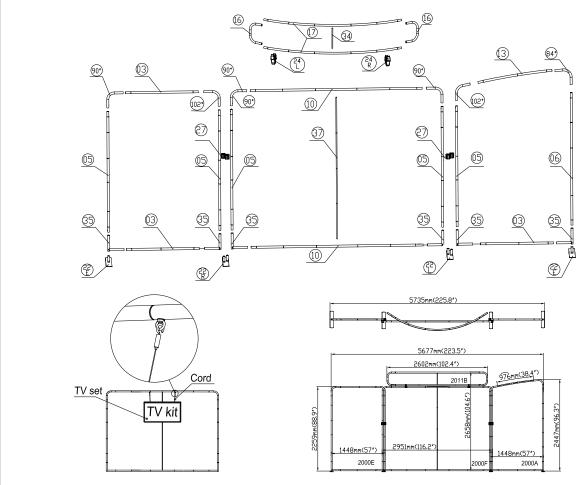




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	pping (ase		TV Kit	
102°	1		90°	4		(22) E	2		34	1		Single or Double	e-sided	59			CA900			22.6"		
84°)	1		35	6		16	2		17	2		None					CA500			32"		
13	1		27	2		10	2		(24 R	1		Complete					NYLON BAG			40"		
06	1		(22) R	1		05	5		(24 L	1		Split-ship										
37	1		(22 L	1		03	3															
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-REEF-A

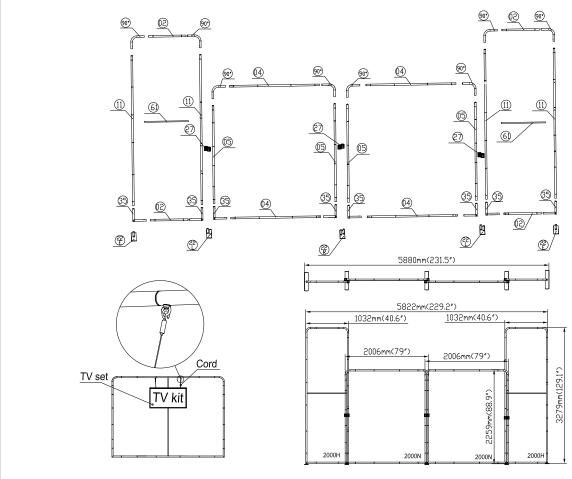




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shi	pping (ase		TV Kit	
90°	8		(22) L	2		61	2					Single or Double	e-sided	59			CA900			22.6"		
11	4		(22 E	2								None					CA500			32"		
05	4		(22 R	1								Complete					NYLON BAG			40"		
04	4		35	8								Split-ship										
02	4		27	3																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-REEF-B

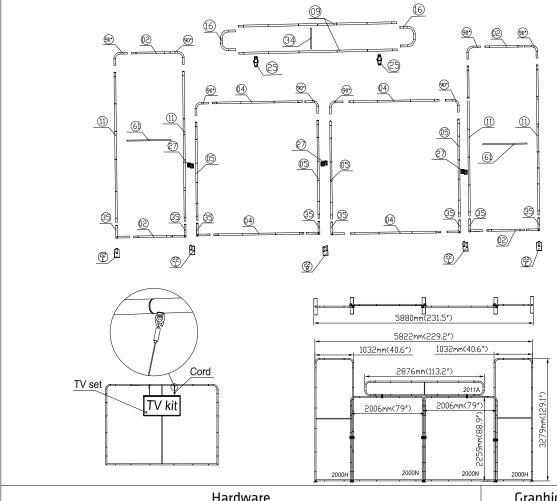






- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	ping (ase		TV Kit	
34	1		(22 L	2		09	2					Single or Double	e-sided	59			CA900			22.6"		
11	4		(22 E	2		25	2					None					CA500			32"		
05	4		90°	8		16	2					Complete					NYLON BAG			40"		
04	4		35	8		(22 R	1					Split-ship										
02	4		27	3		61)	3															
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-REEF-C

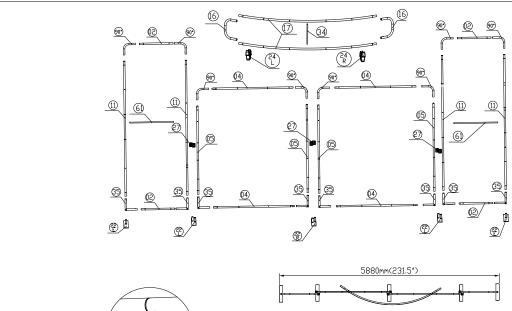

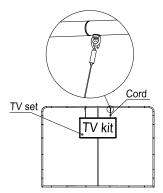

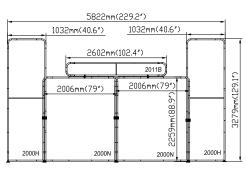




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	ping (ase		TV Kit	
17												Single or Double	e-sided	59			CA900			22.6"		
11	4		(22 E	2		(24 R	1					None					CA500			32"		
05	4		90°	8		(24 L	1					Complete					NYLON BAG			40"		
04	4		35	8		16	2					Split-ship										
02	4		27	3		(22 R	1															
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-SEADRAGON

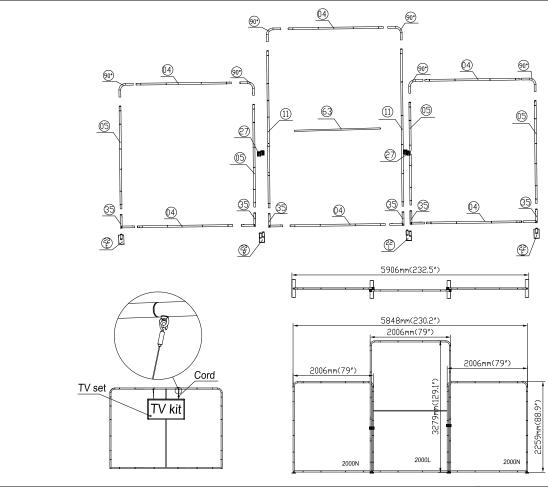




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

	Hardware													Accessories			Shipping Case			TV Kit		
27	2		(22) R	1								Single or Double	e-sided	59			CA900			22.6"		
90°	6		(22 L	1								None					CA500			32"		
11	2		(22) E	2								Complete					NYLON BAG			40"		
05	4		35	6								Split-ship										
04	6		63	1																		
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-TARPON-A

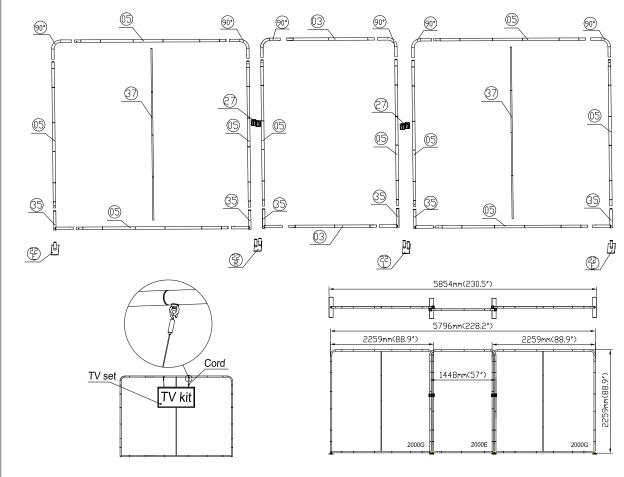




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

	Hardware													Accessories			Shipping Case			TV Kit		
37	2		(22) L	1								Single or Double	e-sided	59			CA900			22.6"		
27	2		(22 E	2			/					None					CA500			32"		
35	6		(22 R	1								Complete					NYLON BAG			40"		
05	10		90°	6								Split-ship										
03	2																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-TARPON-B

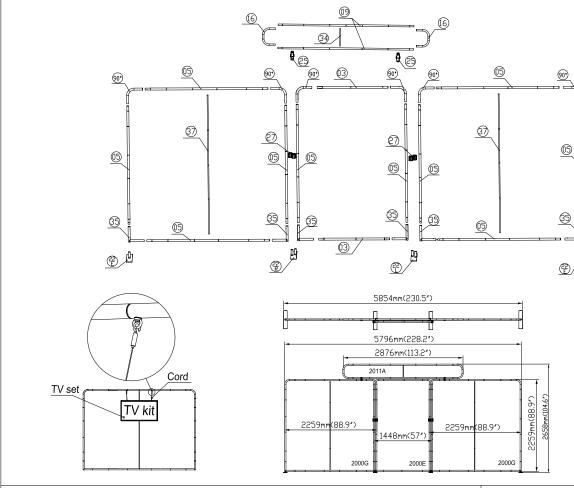




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

Hardware													Graphics		Accessor		ies Shi		ipping Case		TV Kit			
37	2		(22 L	1		34	1					Single or Double-sided		59			CA900			22.6"				
27	2		(22 E	2		09	2			/		None					CA500			32"				
16	2		(22 R	1		25	2					Complete					NYLON BAG			40"				
05	10		90°	6								Split-ship												
03	2		35	6																				
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		

WLM-H-TARPON-C

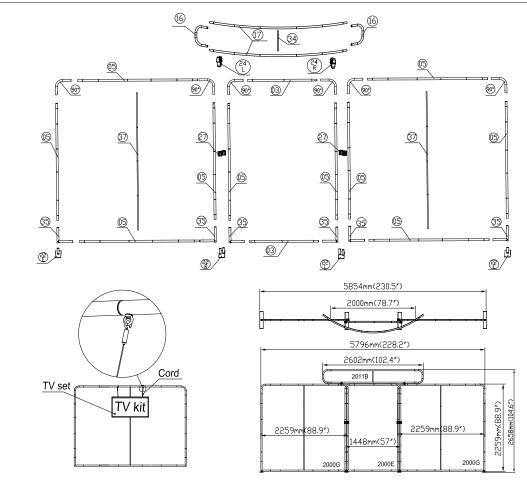



- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

	Hardware													Accessories			Shipping Case			TV Kit			
37	2		(22) L	1		(24 L	1					Single or Double	59			CA900			22.6"				
27	2		(22 E	2		(24 R	1					None					CA500			32"			
34	1		(22 R	1		16	2					Complete					NYLON BAG			40"			
05	10		90°)	6		17	2					Split-ship											
03	2		35	6																			
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	