


8 3


TIMBERLINE HYBRID MONITOR DISPLAYS TL-MONITOR-xxxx

GRAPHIC ATTACHMENT DETAILS


STEP 6 GRAPHIC ATTACHMENT INSTRUCTION IS RELEVANT TO CENTER SPAN AND Z-4400 ENDS (SEE PAGE 2)

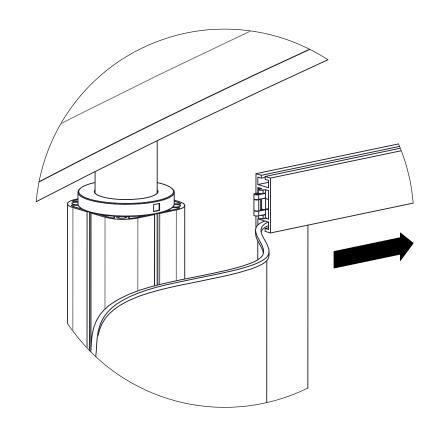

SLIDE GRAPHICS INTO BOTTOM CHANNEL OF TOP CENTER SPAN THEN CONNECT THE CENTER SPAN TO TIMBERLINE POSTS AT BOTH ENDS AS PER STEP 4

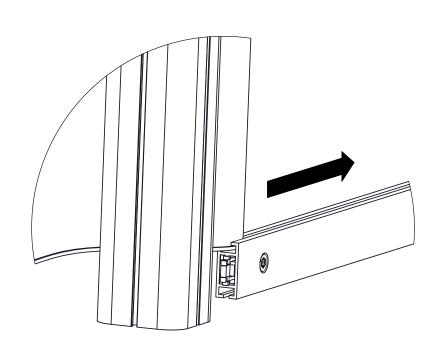

SLIDE GRAPHICS INTO TOP CHANNEL OF BOTTOM CENTER SPAN THEN CONNECT THE CENTER SPAN TO TIMBERLINE POSTS AT BOTH ENDS AS PER STEP 4

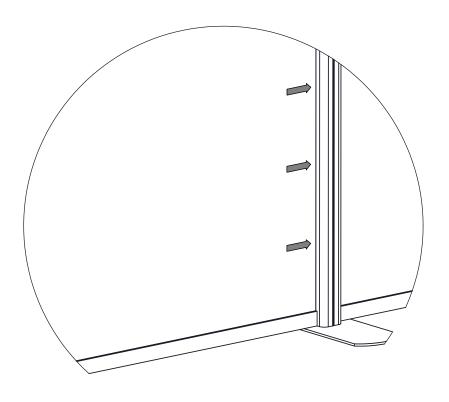

WHEN TOP AND BOTTOM CENTER SPANS ARE ATTACHED, THE GRAPHIC SIDES MAY BE TUCKED INTO THE VERTICAL CHANNELS OF THE **TIMBERLINE POSTS ON BOTH SIDES**

PAGE 5


FINISH:	THI AND PROJE		4	MENT AND DATA DE REPRODUCED, USED,	- PROPRIETARY - NT AND DATA DISCLOSED HERIN OR HEREWITH IS IODUCED, USED, OR DISCLOSED IN WHOLE OR IN NE WITHOUT PERMISSION OF NEDIO GROUP, INC.		
DIMENSIONS ARE IN MILLIMETERS	*	NIE	DO GRO	UP, INC.	5465 S	W WEST	ERN AVE. 0R 97005
TOLERANCES UNLESS OTHERWISE SPECIFIED	Timberline Hybrid Monitor Displays Setup Instructions						
UNLESS OTHERWISE SPECIFIED		Timbe					lays
UNLESS OTHERWISE SPECIFIED	SIZE	Timbe					lays 01


8

6

5

3

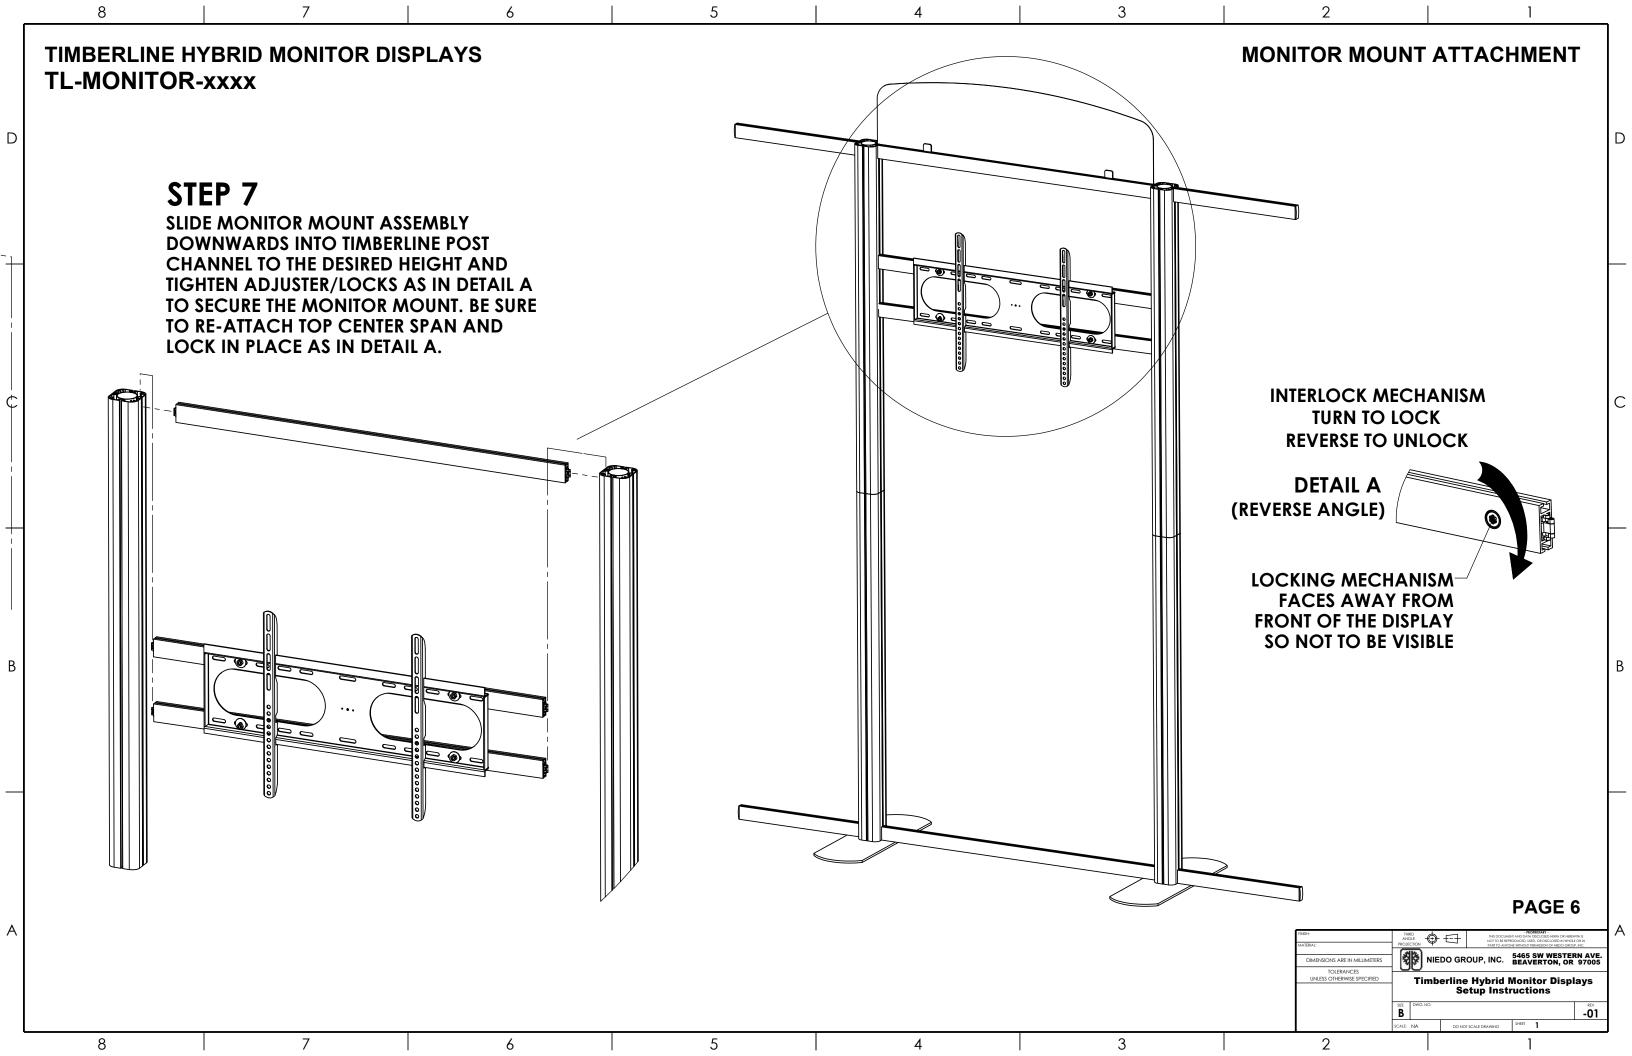

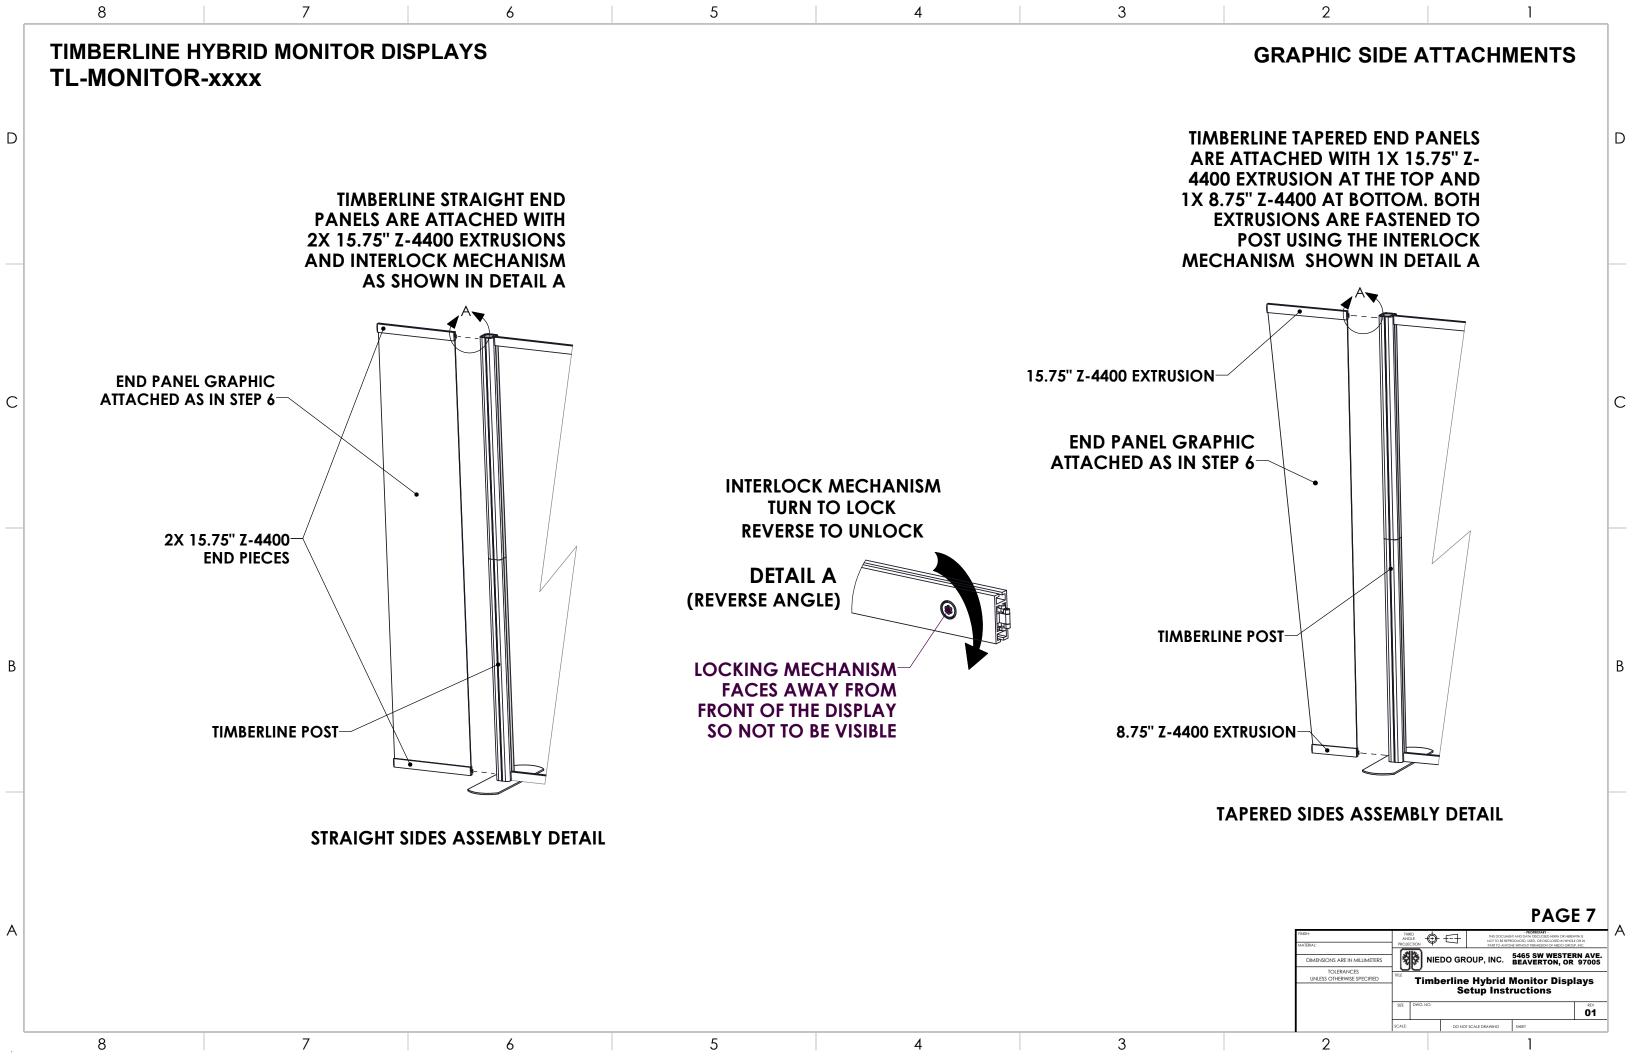


TL1007 Monitor Mount for 30-50 LCD


Each Kit includes: 1 monitor mount w/bars attached, 12 screws &16 washers























Safety Warning: Be careful to make sure there are no missing or defective parts. Never use defective parts. Improper installation may cause damage or serious injury.

Installing bars to your LCD monitor

1) To ensure optimal installation, this kit includes various screws of different diameters and lengths.

2) Place your TV screen down on a soft, flat surface and locate the threaded mounting points that are located on the back of the display.

- 3) Determine which screw (A/B/C) is of the correct length by carefully inserting a straw or toothpick and mark how deep the mounting point is.
- 4) If your display has a curved back or a recessed thread mounting point, a spacer (F) must be used.
- 5) Place the spacer (F) between the mounting bracket and display.
- 6) According to the size of the display's hole, choose the corresponding screw and hole on the rectangle washer, then thread them in line.

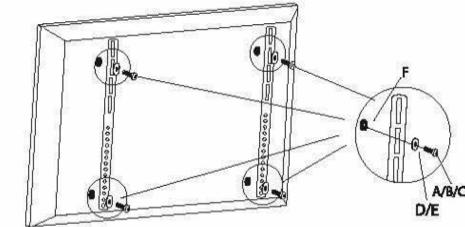

Notice:

First, if the TV back is accurate you will need to use (F), if it's flat that is unnecessary. Second, the choice of screw (A/B/C) should be according to the size and depth of the install aperture in the back of the TV.

