


Mightee Mounts™


1. (If using graphic with holes) Sandwich graphic in between Mightee Mounts (A-1) and screw together with wingnuts and carriage bolts (fig. A-2).
2. (If using graphic without holes) Screw Mightee Mounts (B-1) together with wingnuts and carriage bolts and rest graphic on top of screws (fig. B-2).
3. For MM12 Only: Plug screw hole (fig. C)

NOTE: Base covers approximately 3" of the bottom portion of the graphic. Base holds any rigid substrate up to 1" thick (as long as the substrate can hold its own weight).

NOTE: MM12 model uses screws instead of wingnuts/bolts, but assembly remains the same.

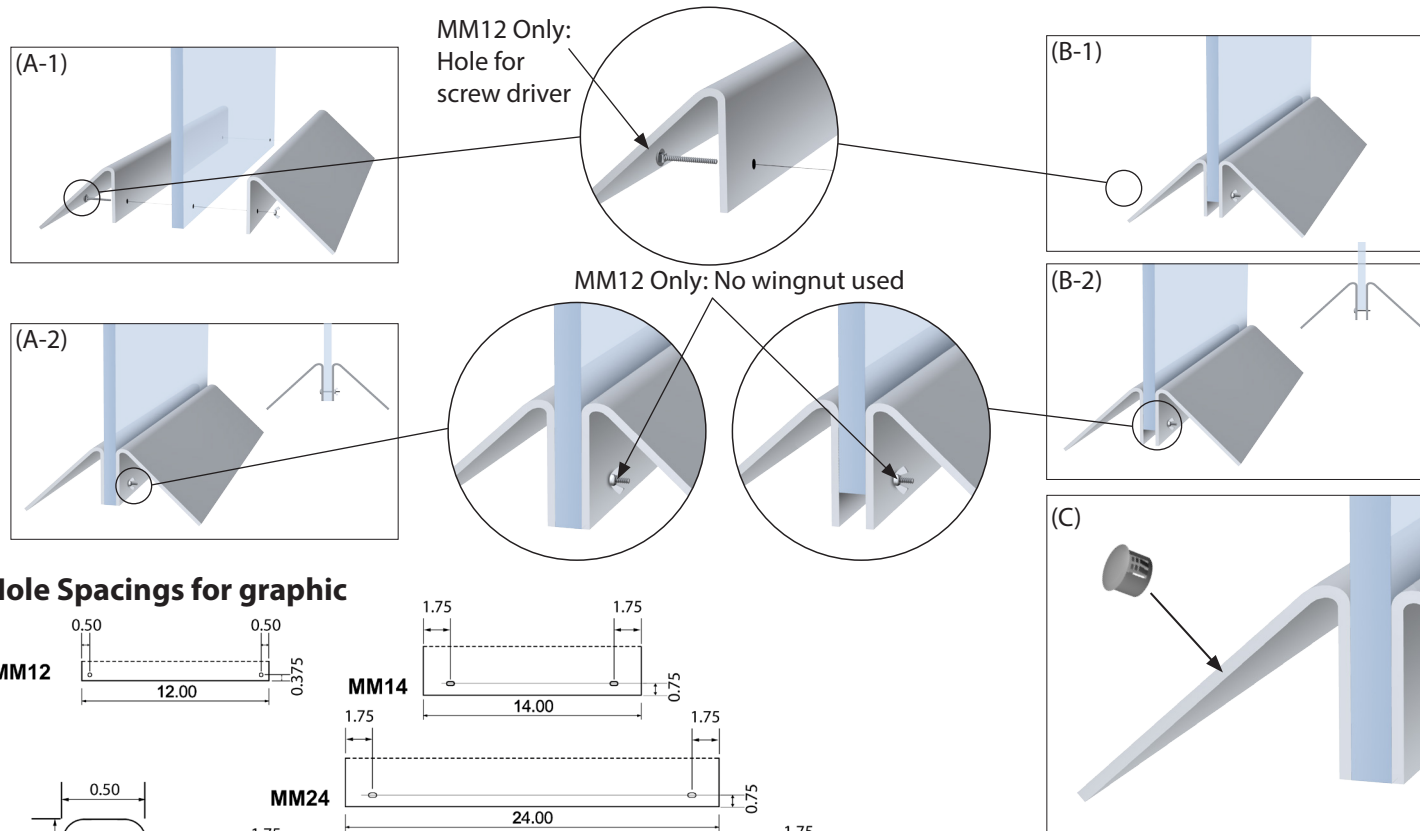

Hole Spacings for graphic

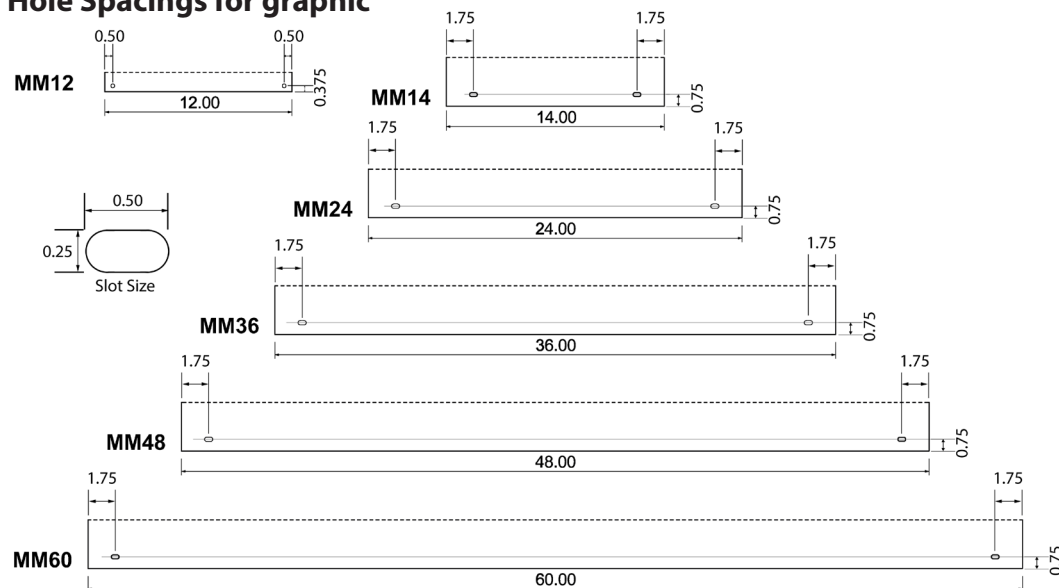

Applicable Products:

MM Series

