

Instructions For:

# Premium Bracket System

## Product Specifications

Graphic sizes will vary - **Do not exceed 24 Square Feet**


Requirements: 2" Top and Bottom Pole Pockets with #2 Grommets



### Product Parts

- 1 - Castings
- 2 - Premium Fiberglass Arms
- 3 - 40" Stainless Steel Bands (x4)
- 4 - Large Pin (x2)
- 5 - Small Pin (x2)
- 6 - Screws (x4)
- 7 - Large Washer (x2)
- 8 - Small Washer (x4)

**\*Screw/nut driver & drill will be needed**

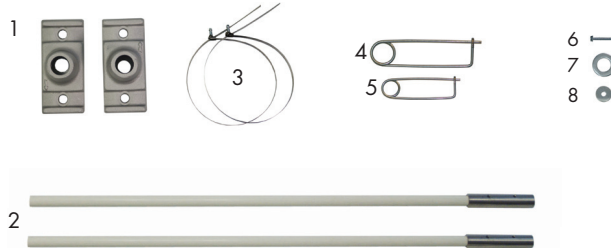

### Step 1


Take out all parts.

### Step 2

Attach top Casting (1) to pole. Be sure the arrow is facing up - away from the banner.

Place a Screw (6) with a Small Washer (9) in the top hole and drill into place. Depending on the kind of pole - you may need to pre-drill the holes.

**Repeat Step 2 with the hole on the bottom of the Casting (1).**



### Step 5

Slide Large Washer (7) onto the Premium Fiberglass Arm (2). This will keep your banner from sliding up the arm.





### Step 6

Measure your banner for correct placement of the lower Casting (1) so it fits your boulevard banner properly.

**Repeat Step 2 -5 to attach the Lower Casting (1) and arm.**

Be sure the arrow is facing down for the lower casting - away from the banner, and that the Pin (5) clips above the Casting.

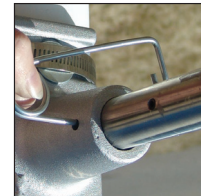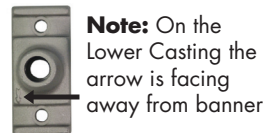

**\*Pin should clip above casting**

### Step 3


Secure the Casting (1) to the Pole with two Stainless Steel bands (3). Tighten the bands until they hold the bracket securely and lock it into place with a screwdriver or nut driver. Clip off any excess band length.



### Step 7

Slide your banner onto the Premium Fiberglass Arms (2).



Secure the top and bottom of the banner by pinning the Large Pin (4) through the grommets.

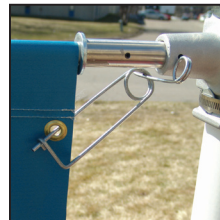

### Step 4

Insert the end of a Premium Fiberglass Arm (2) into the Casting (1) **Image A**. Line up the holes in the arm to the holes on the side of the Casting and secure by inserting the Small Pin (5) **Image B**.

Before closing the Small Pin (6) attach the Large Pin (4) onto the Small Pin (5) as shown in **Image C**.

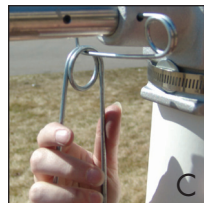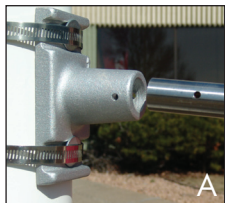

**\*Pin should clip below casting**