Designer Series 30’ Backwall - Kit 06

FMLT-DS-30-06

Formulate™ Designer Series 30ft displays have unique stylistic features and shapes, are portable and easy to assemble. The aluminum tube frame features snap-buttons and/or spigot connections and zipper pillowcase fabric graphics. All displays come in portable, wheeled transit cases. Simply pull the pillowcase fabric graphic(s) over the frame and zip.

features and benefits:

- Premium aluminum tube frames with snap button/ spigot assembly
- Serpentine shaped frame
- Easy to store and ship
- Quick to set up
- Weighted feet for added stability
- Zipper pillowcase fabric graphic
- Lifetime limited hardware warranty against manufacturer defects

dimensions:

Hardware

Assembled unit:
350.13”w x 92”h x 48”d
8893.21mm(w) x 2336.8mm(h) x 1219.2mm(d)

Approximate weight with cases:
135 lbs / 61.2 kgs

Shipping

Packing case(s):
2 OCE Cases

Shipping dimensions:
16.75”w x 64.25”h x 16.88”d
425.5mm(w) x 1632mm(h) x 428.8mm(d)

Approximate total shipping weight (includes cases & graphics):
168 lbs / 76.2 kgs

Graphic

Please be sure to include a 2” bleed around the perimeter.

Refer to related graphic template for more information.

Visit:
www.exhibitors-handbook.com/graphic-templates

additional information:

Graphic material:
dye-sublimation zipper pillowcase fabric

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

Included In Your Kit

Tools, Components, & Connectors

ALLEN KEY SET x1

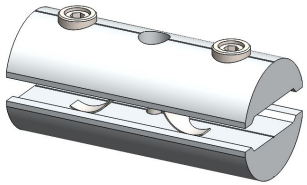

ES50 x12

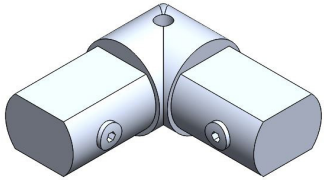

SG-50-2W x4

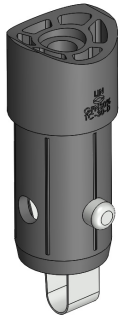

TC-30-D x10

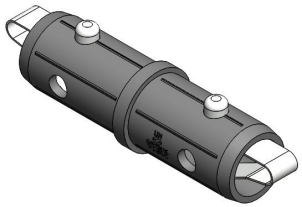

TC-30-S x5

Graphics

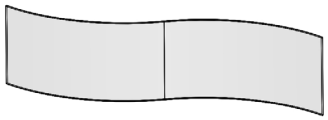

FMLT-DS-30-06-G x1

Included In Your Kit

Tubes

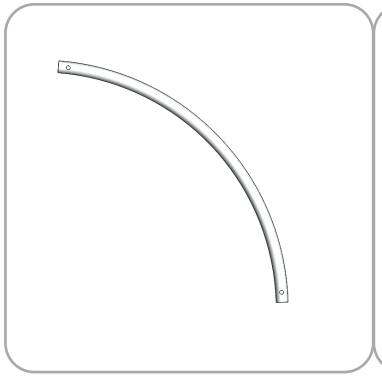

DS-30-06-A-T1 x6

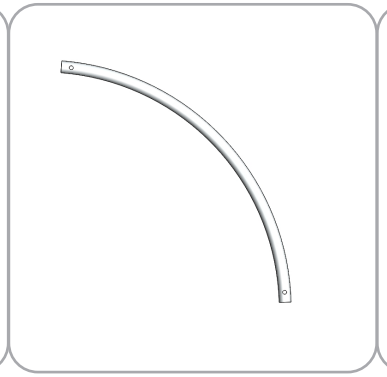

DS-30-06-A-T2 x6

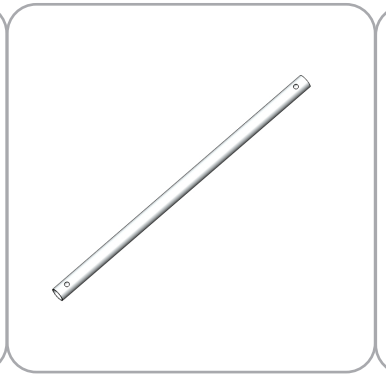

DS-30-06-A-T3 x4

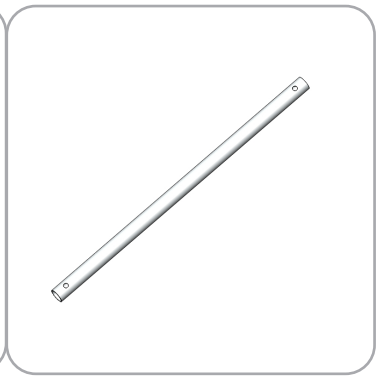

DS-30-06-A-T4 x10

PART CODE	QTY	DESCRIPTION
DS-30-06-T1	6	50MM CURVED TUBE T1 FOR DS-30- 06
DS-30-06-T2	6	50MM CURVED TUBE T2 FOR DS-30-06
DS-30-06-T3	4	50NN END TUBE T3 FOR DS-30-06
DS-30-06-T4	10	30MM SPREADER TUBE T4 FOR DS-30-06
ES-50	12	EXPANDING SPIGOT FOR 50MM TUBE
SG-50-2W	4	2-WAY CORNER FOR 50MM TUBE
TC-30-D	10	30MM CONNECTION TO 50MM TUBE
TC-30-S	5	INLINE CONNECTOR FOR 30MM TUBING
M8 NYLOCK NUT	10	M8 X 1.25 NYLON-INSERT HEX LOCK NUT
M8 CAP SCREW	10	M8 X 20MM CAP SCREW

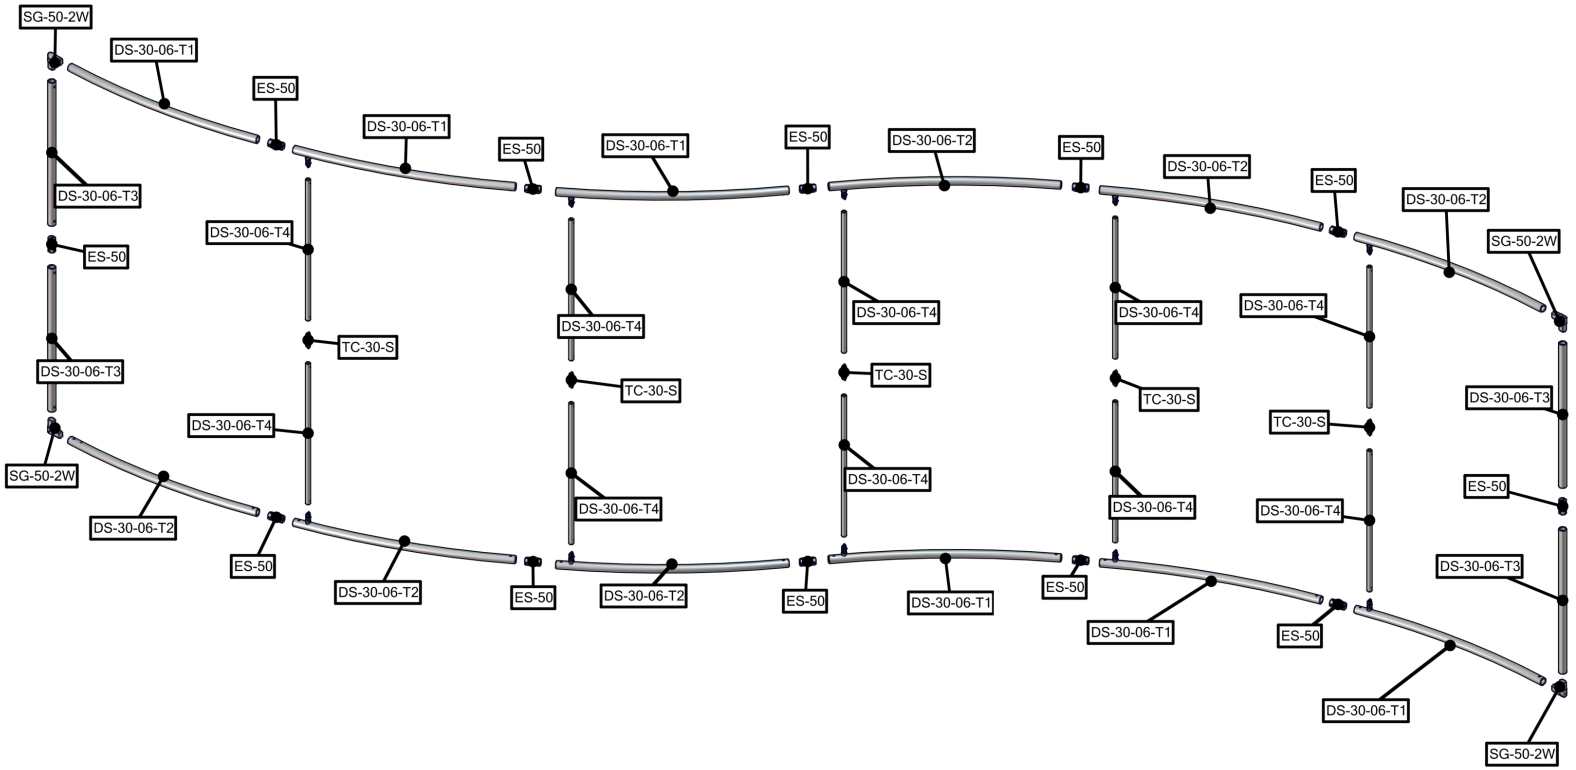

Labeling Diagram

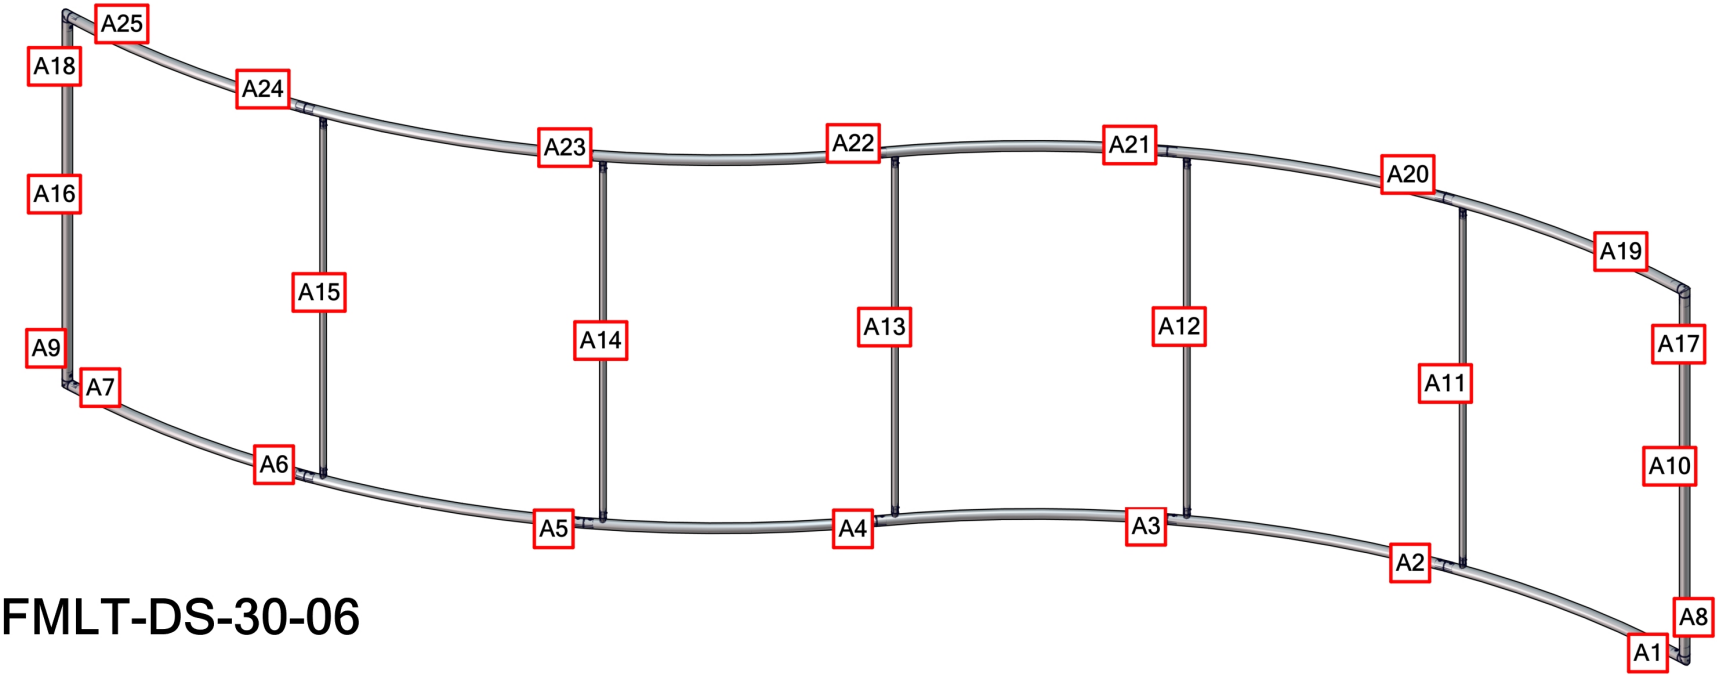

FMLT-DS-30-06

OVERVIEW

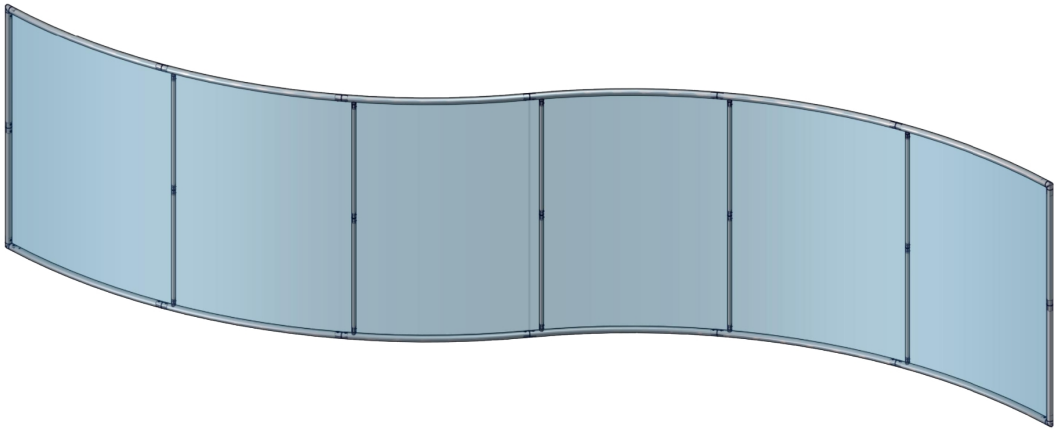

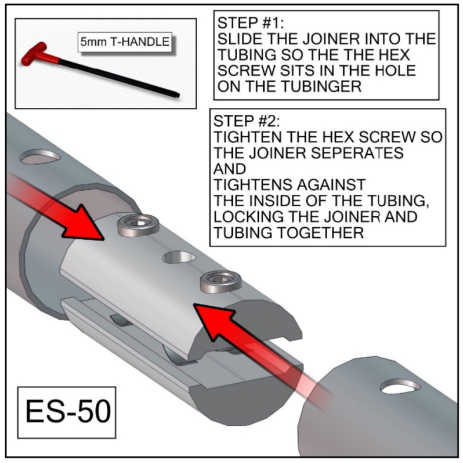

Kit Assembly

Step by Step

Step 1.

Assemble the bottom tube section. Using the provided handtool, start attaching the expanding spigots for the 50mm tubes. There are four spigots in this step.

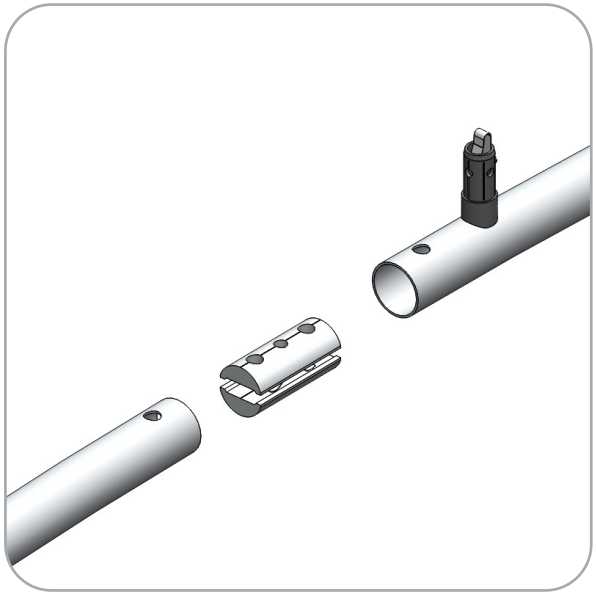

Step 2.

Continue assembling the bottom tube section. Using the provided handtool, attach the expanding spigot for the 50mm tubes. There is one spigot on center in this step.

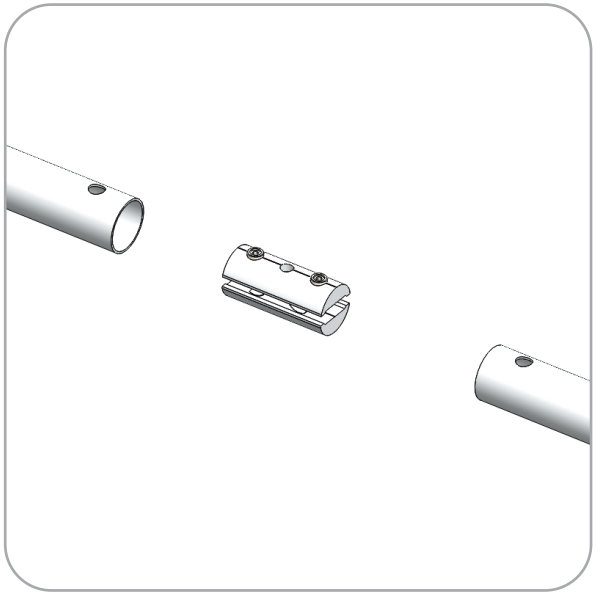

Step 3.

Continue assembling the bottom tube section. Using the provided handtool, attach one corner spigot on the left end for the 50mm tubes.

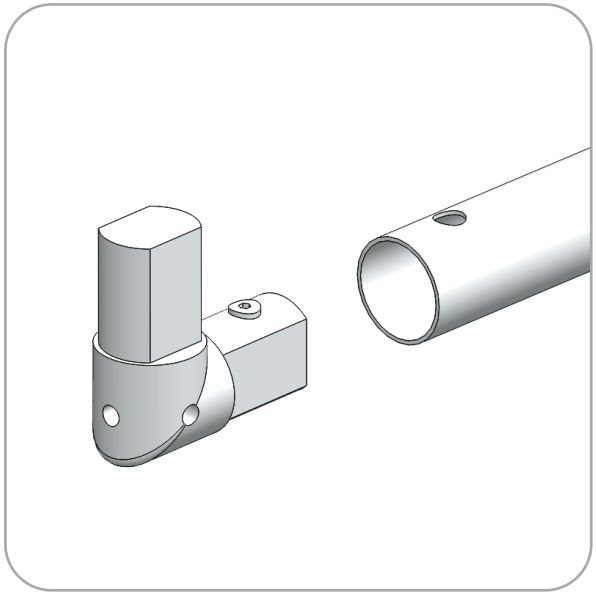

Step 4.

Continue assembling the bottom tube section. Using the provided handtool, attach one corner spigot on the right end for the 50mm tubes.

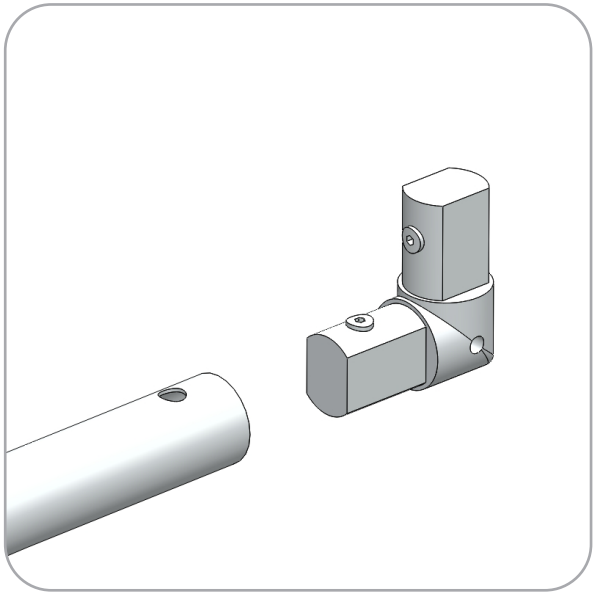

Kit Assembly

Step by Step

Step 5.

Assemble the bottom tube section. Using the provided handtool, attach one corner spigot on the left end for the 50mm tubes.

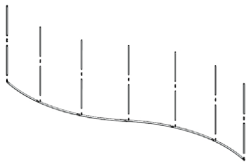

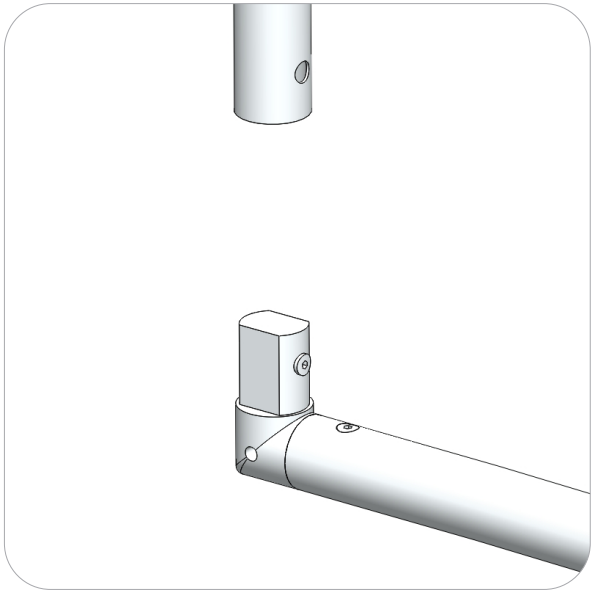

Step 6.

Assemble the bottom tube section. Using the provided handtool, attach one corner spigot on the right end for the 50mm tubes.

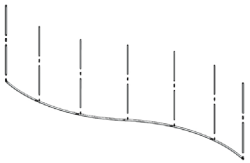

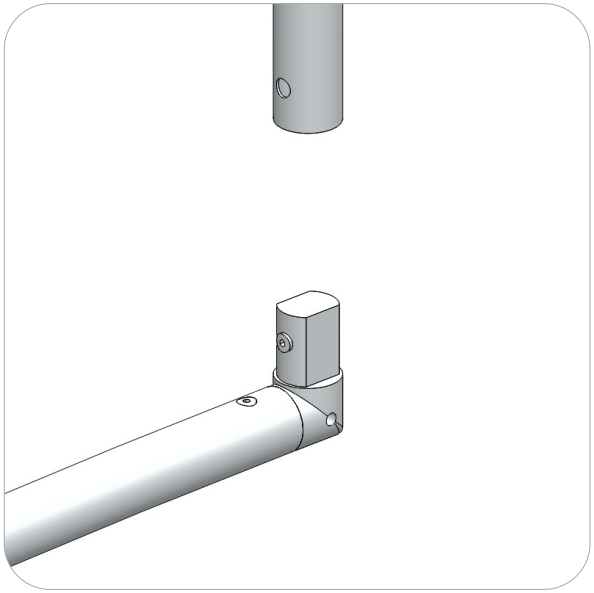

Step 7.

Locate your TC-30-S connectors and lock them into the center of each stack.

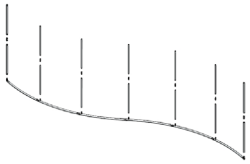

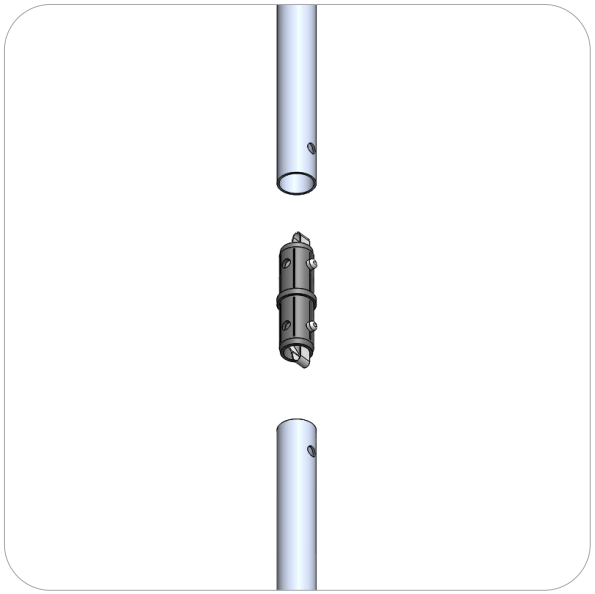

Step 8.

Snap each stack into the TC-30-Ds of the bottom tube section.

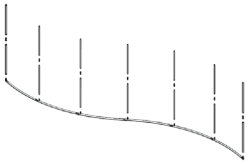

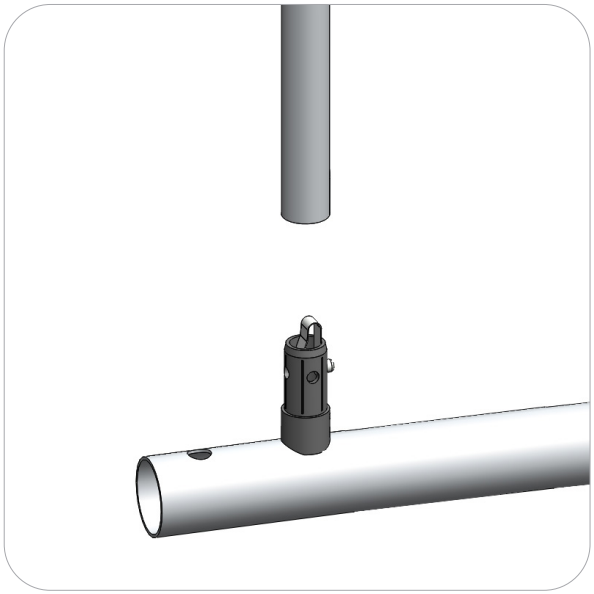

Kit Assembly

Step by Step

Step 9.

Assemble the top tube section using ES50 expanding spigots.

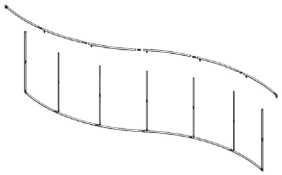

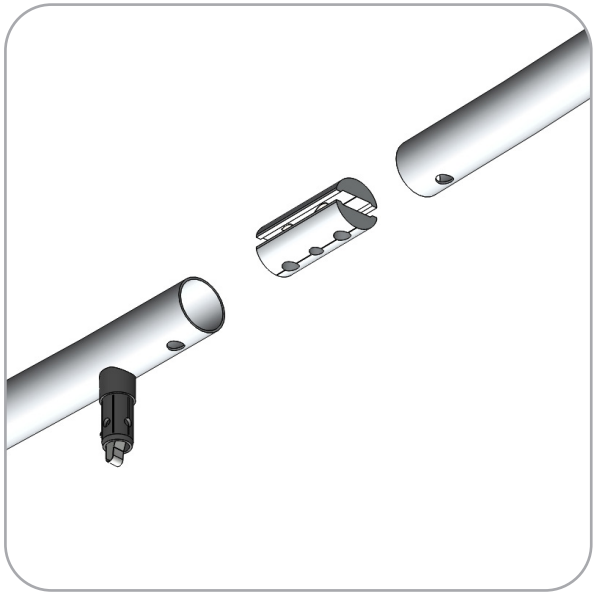

Step 10.

Continue assembling the top tube section. Using the provided handtool, attach the expanding spigot for the 50mm tubes. There is one spigot on center in this step.

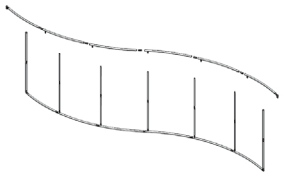

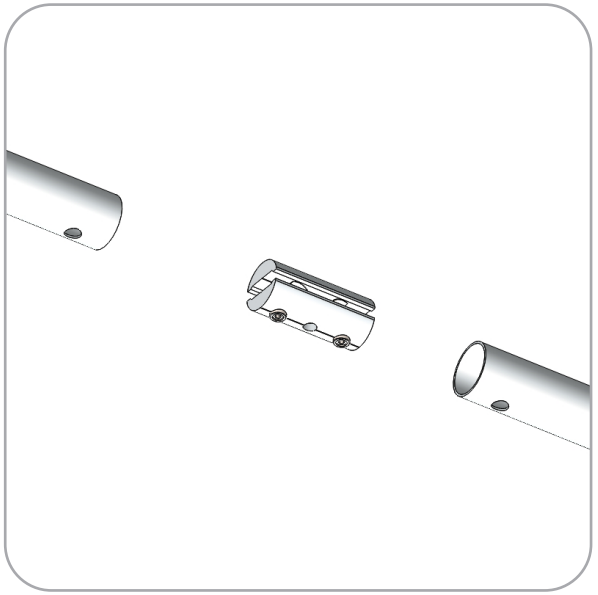

Step 11.

Continue assembling the top tube section. Using the provided handtool, attach one corner spigot on the left end for the 50mm tubes.

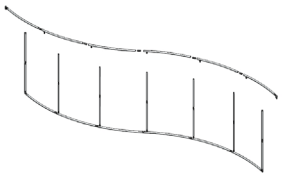

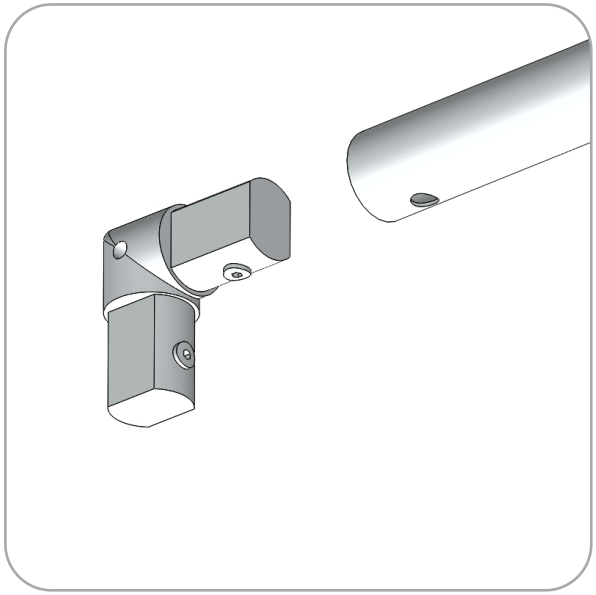

Step 12.

Continue assembling the top tube section. Using the provided handtool, attach one corner spigot on th right end for the 50mm tubes.

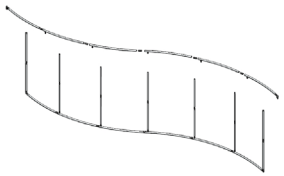

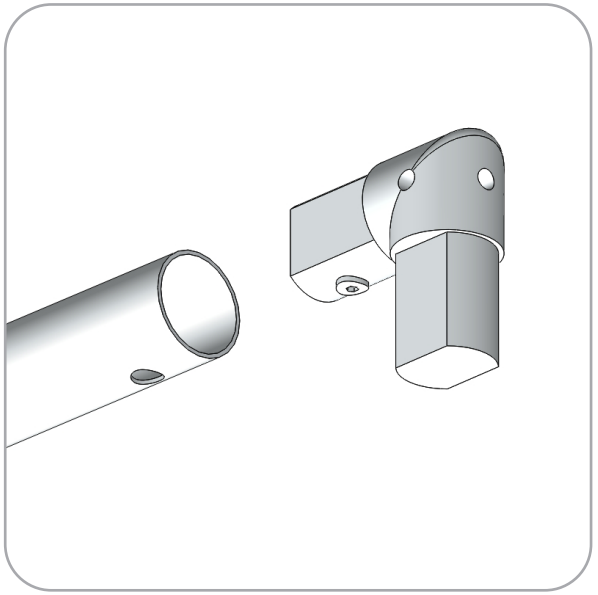

Kit Assembly

Step by Step

Step 13.

Apply the graphic pillowcase.

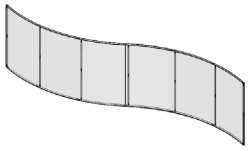

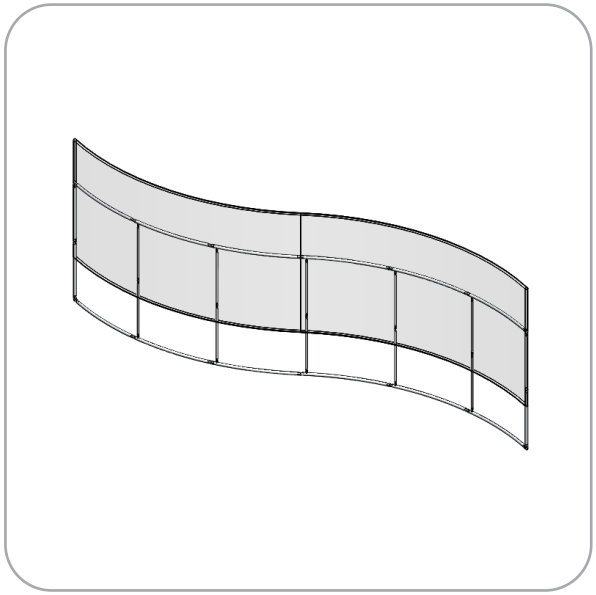

Step 0.
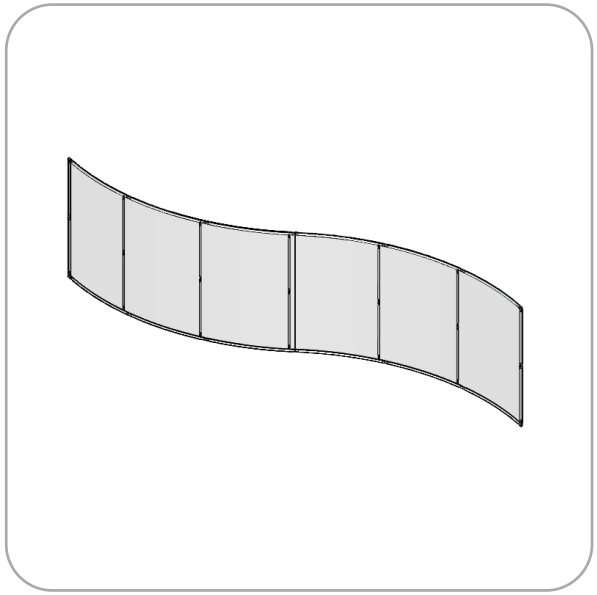
Setup Complete.