




Step 1: Screw in 4" standoffs to bottom of base.

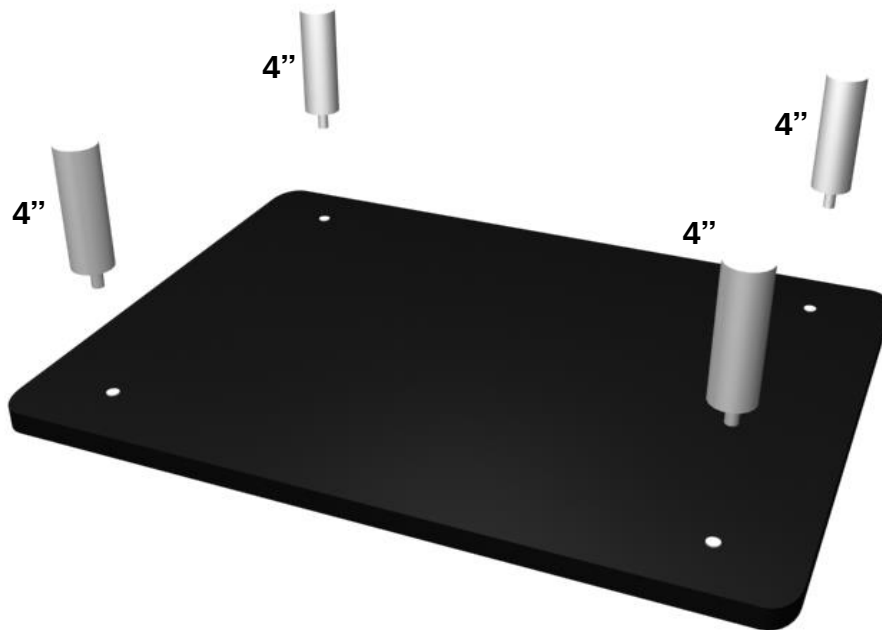

Step 2: Attach sides to base using 2 short knobs.

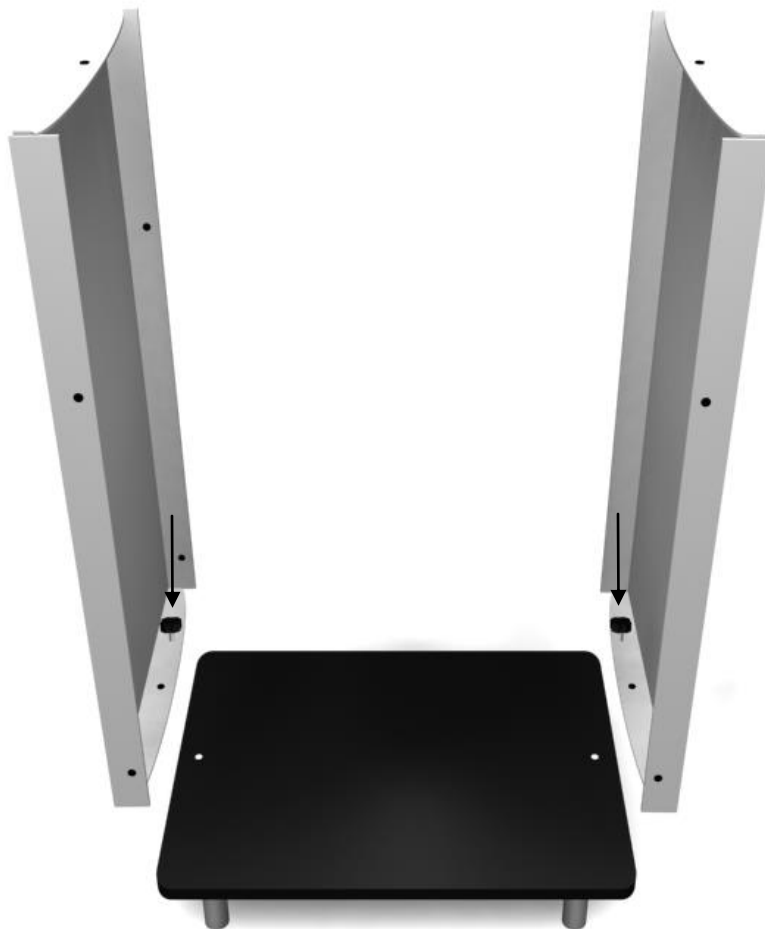


Step 3: Attach front & back to sides using 8 short knobs.

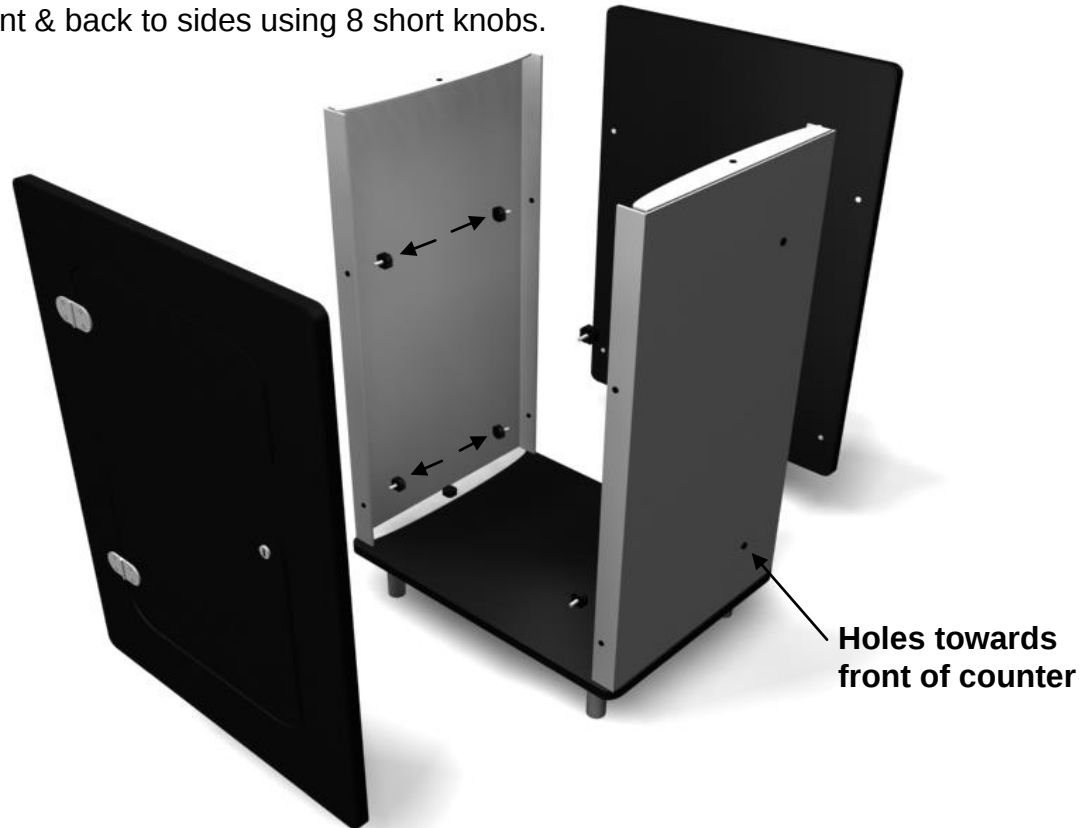

Step 4: Attach top to sides using 2 short knobs.



Step 5: Attach side piece using 2" standoffs & caps.

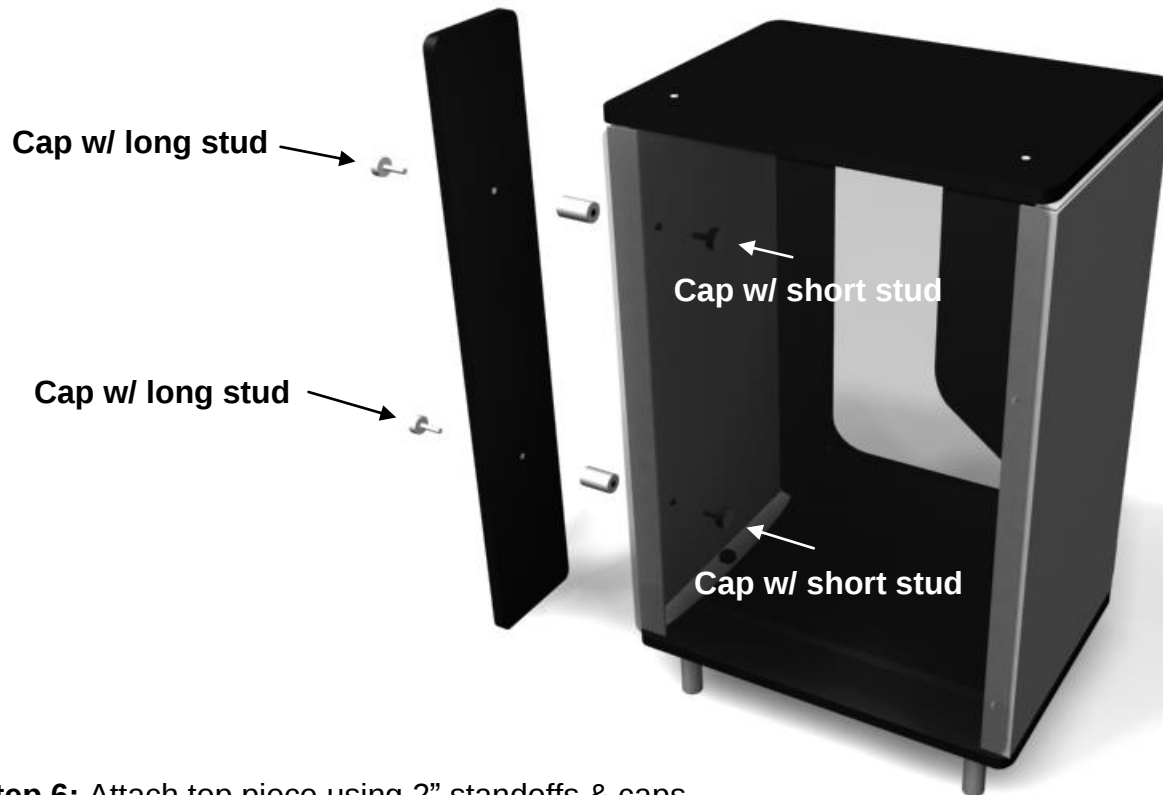

Step 6: Attach top piece using 2" standoffs & caps.

