



Step 1. Assemble left and right ends.

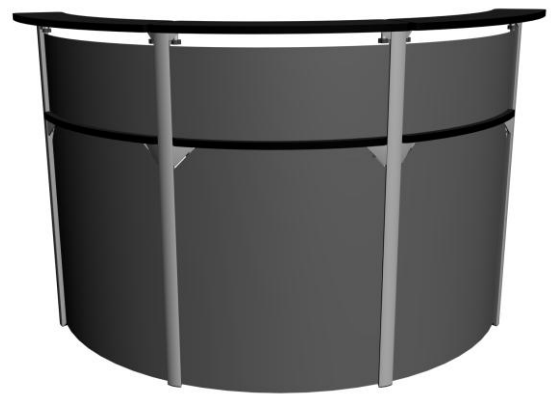

Step 4. Insert panels.



Step 2. Attach center counter section.

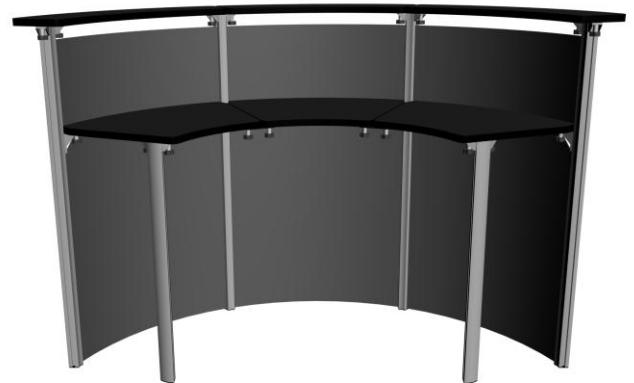

Step 3. Attach transaction tops. (end tops have 2 holes at termination end)

