














(option)

(option)



Our Casita Canopy Tents™ are an excellent way to provide shade during outdoor and indoor events. This canopy is a 20' x 10' size and is available in custom UV print, which has a high quality finish with vivid color. Set up is quick, easy, and user friendly. Telescopic legs snap into place offering a range of heights. This lightweight system includes a protective dust cover to use while in storag.

DISPLAY DIMENSIONS	232"W x 135"H x 11875"D
GRAPHIC SIZE	Canopy: 232"W x 89"H BackWall: 232"W x 79"H Half Wall: 117"W x 40.5"H

GRAPHIC MATERIAL

UV Fabric (water resistant)

GRAPHIC FINISHING

Hemmed around sides

DISPLAY CONSTRUCTION

Aluminum frame (Hex leg thickness: 50mm)

SHIPPING WEIGHS & DIMENSIONS

Shipping Weight	69 lbs (frame only) 84 lbs (frame and graphic)
Shipping Dimensions	62"H x 10"W x 7"D (over size)

LARGE WANTITY FREIGHT

Freight Shipping	12 boxes per 48"L x 40"W x 67"H skid
Freight Weight	873 lbs (frame only)
	1053 lbs (frame & graphic)

GRAPHIC TURN AROUND TIME

4 business days after proof approval

AVAILABLEACCESSORIES

Travel Bag w/wheels

(option)

(Qty 4) Ropes - 124.5"L each	Sand Bag
(Qty 6) Stakes	La Caja Hard Case
Flag Holder	Travel Bag Wheels
AVAILABILITY	CA Only
WIND RATING	20 mph



Nylon Travel Bag



Optional La Caja Hardcase

PARTS LIST



(qty 1) Canopy Frame



SET UP INSTRUCTIONS (5FT CANOPY SHOWN BELOW)

Take your frame and slightly expand it open to expose the corner bars.



Step 3

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of loop Velcro sewn to it and each corner of the frame has a strip of hook Velcro.



Step 5

Increase the height by extending the lower legs.



Step 7

Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole. The dome cap will push out the canopy creating tension to flush out any loose areas.




Take your canopy graphic and place it on top of the frame.



Step 4

With the canopy securely in position, expand the frame until the corner latches lock into place.

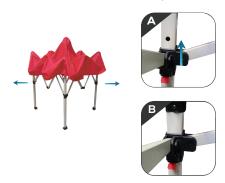

Step 6

Pull each leg down until the latch locks into place.



Step 8

The install is complete.

