
## Setup & assembly

A Phillips head screwdriver is required for installation

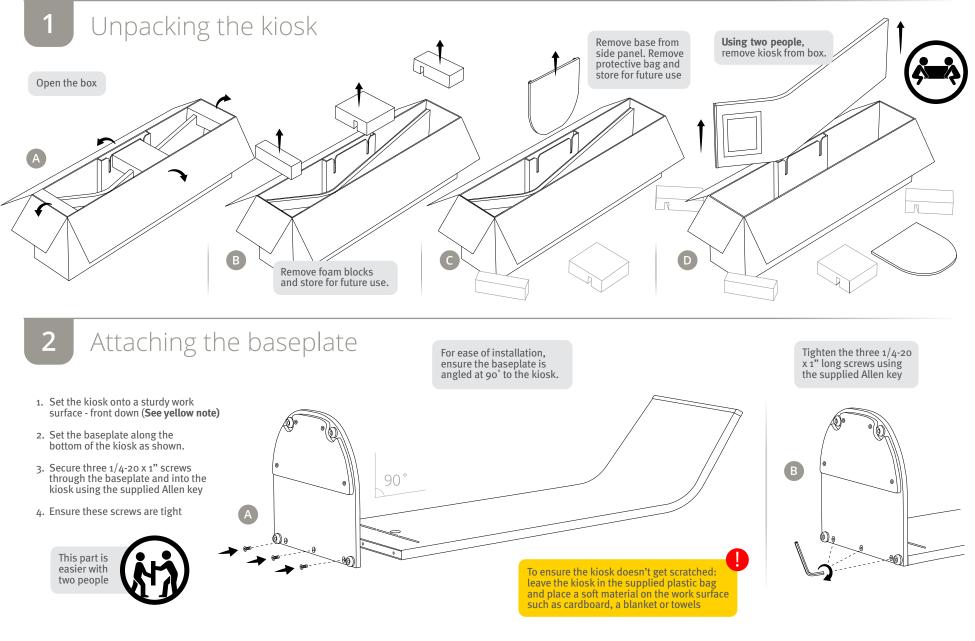



## Set the kiosk on the floor




## Removing the tablet carrier 3 Turn the two tabs securing Remove ArmoLock<sup>™</sup> screws on both sides Remove the top bar the tablet carrier out so and security screws they are vertical 1 8 ( C 0 Turn tabs out 120 Hold onto the bar so it doesn't drop

grabbing the two finger insets on either side, slightly wiggle the carrier to get it started

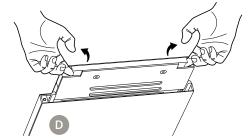

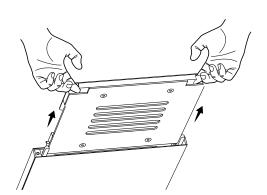

onto a work surface

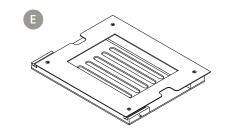


Warranty & other information available at: **armodilo.com** 


Please retain packaging material for future use.



## Setup & assembly

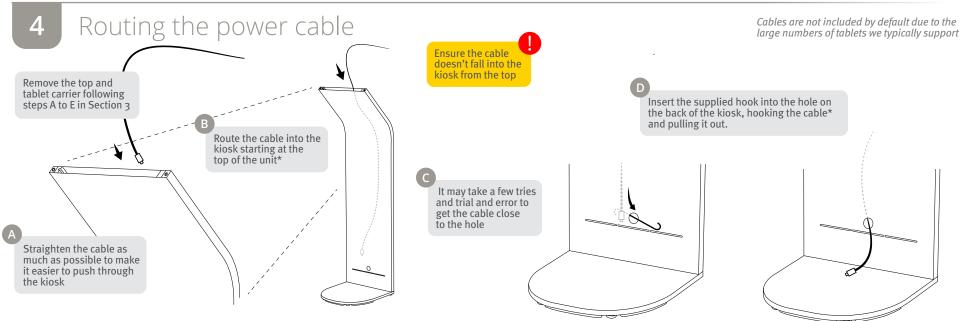

Cable options differ and although we suggest routing from the top of the kiosk – some cables will require routing from the bottom > up due to their design and size.

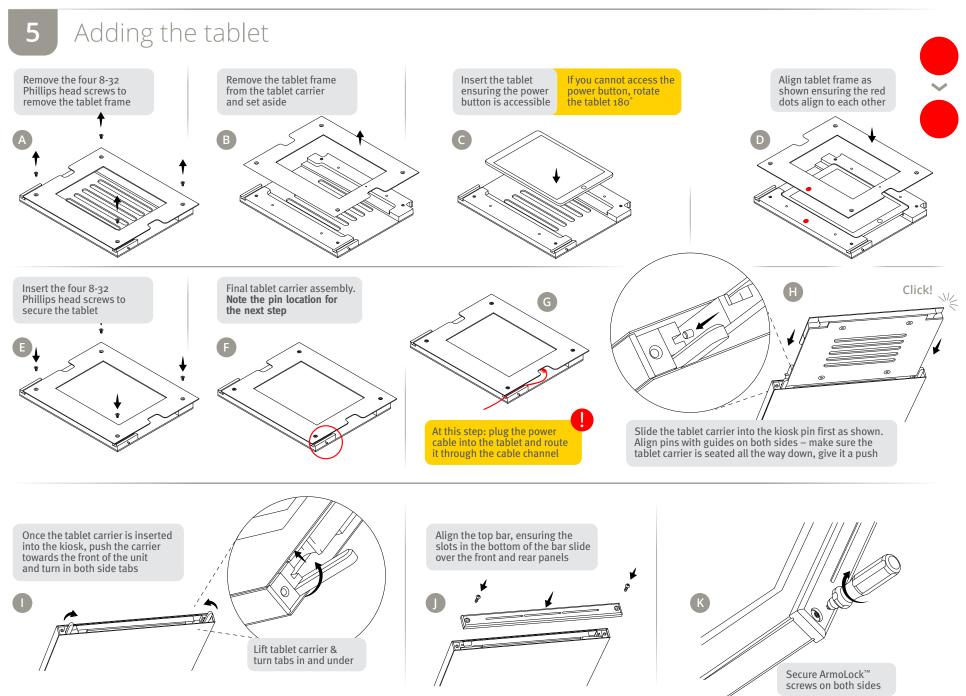

Warranty & other information available at: **armodilo.com** 

Please retain packaging material for future use.

