

# **Outdoor Ballast Display**

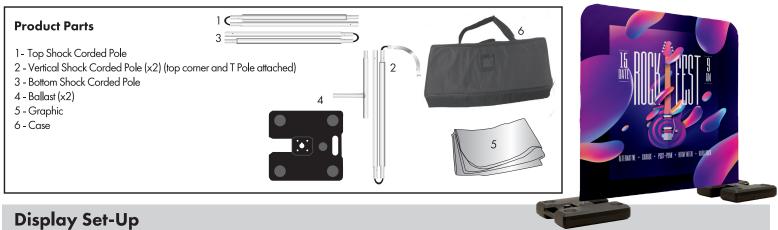

# Step 1

Assemble the two Vertical Shock Corded Poles (2) by connecting the corresponding numbers together while pressing the snap button as shown.



# Step 2

Connect the Top (1) and Bottom (3) Shock Corded Poles to the Vertical Shock Corded Poles (2). Match the corresponding numbers together.

# Step 4

Place Graphic (5) over hardware and pull towards




# Step 3


The Pole Insert Block is removable, but comes preassembled into the Ballast (4). If you want to lock the display into the Ballast, the pin slot should face inward to allow the push pin to lock.

### Step 5

Remove cap from Ballast (4) and fill with water or sand.

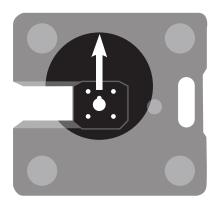

Pin Slot position to lock pole.

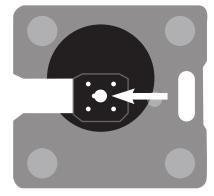

Pin Slot position to keep pole from locking.

# Disassembly

If poles are locked into Ballast (4), unlock by turning the Ballast clock-wise a 1/4 turn. If poles are not locked simply pull out from Ballast (4).

