WLM-ANGELFISH A

(1)

Yes.

4

(6)

16



according to the assembly diagram. 1. Take all the parts out of the bags and lay them on the ground

5906mm(232,5")


5848mm(230,2")

1541mm(60.7")

(4)

(4)

- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if spring pop up on place. difficult you can slightly twist the parts together to make the locking
- the bottom, now close the Zipper. the printed fabric. Feed the fabric from the round edges of the frame 4. Its time to get your hands cleaned as now you are ready to handle feed only a few feet, then stand the frame up then slide the fabric to
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet
- they are designed tight so they lock wel 6. To lock the frames together you can use the "S" shaped brackets,
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

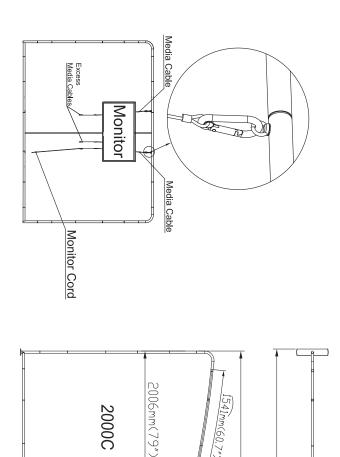

2006mm(79")

2006mm(79")

2000M

2447mm(96.3")

2000C

2723mm(107.2")

NO.	Q	060	08	14	23	
NO. Quantity Confirm NO.	4	4	2	2	6	Frame
Confirm						
NO.	35	27)	90°	102°	84°	
Quantity	6	2	2	2	2	Frame
Confirm						
NO.	(TIX)		R22			
Quantity Confirm NO.	2	<u></u>				Frame
NO.						
Quantity						Frame
Confirm						
NO.			\			
Quantity						Frame
Confirm						
NO. Quantity						Frame
Confirn						
NO.			40"	32"	22.6"	_
Confirm						TV kit
NO.				CA500	CA900	Shippi
Confirm						ng Case
					2000M*1+2000C*2	Shipping Case accessories

WLM-ANGELFISH C – Curved Header



Setup Instructions

- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- If you have a header in the kit you can fix to the top by using the clear plastic clips.

	23	14	08	06	04)	NO.
Frame	6	2	2	4	4	NO. Quantity Confirm NO.
						Confirm
	84°	1020	90°	(27)	35	NO.
Frame	2	2	2	2	တ	Quantit
Ф						y Confirm
	16	17)	(22) (R	(22) L	(F)	NO.
Frame	2	2	1	1	2	Quantity
						Confirm
	clear	Clear	34)			NO.
Frame	2	2	1	\		Quantity
						Confirm
			\			NO.
Frame						Quantity
						Confirm
						NO.
Frame	\					Quantity
CD						Quantity Confirm NO.
-	22.6"	32"	40"			NO.
TV kit						Confirm
Shippir	CA900	CA500				NO.
Shipping Case accessories						Confirm
e acc	200					<u> </u>
esso)0M*1+2					
ries	2000M*1+2000C*2					

