
WAVELINE® MEDIA PANELS

WLM-H-2000A

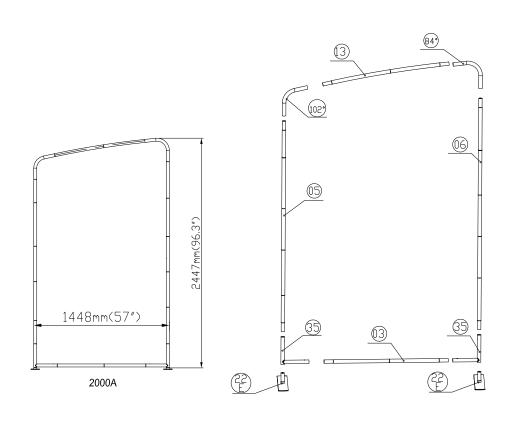




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shi	pping (ase		TV Kit	
35	2		(22 E	2								Single or Double	e-sided				CA900				22.6"	
13	1		(102°)	1								None					CA500				32"	
06	1		84°)	1								Complete					NYLON BAG				40"	
05	1											Split-ship										
03	1																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000B

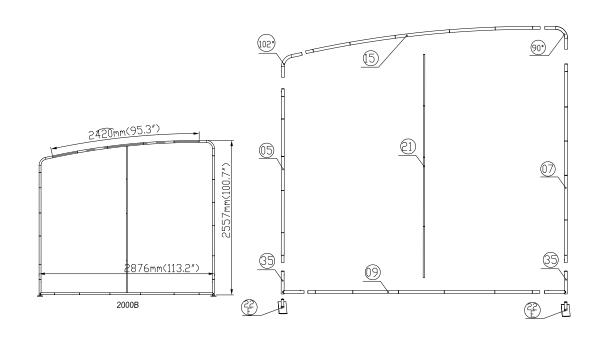




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessori	ies	Shi	pping (ase		TV Kit	
35	2		(22 E	2								Single or Double	e-sided				CA900					
15	1		21	1								None					CA500					
09	1		102°	1								Complete					NYLON BAG					
05	1		90°	1								Split-ship										
07	1																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000C

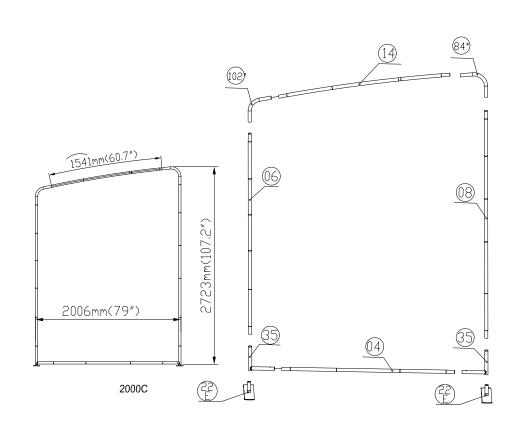




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessori	ies	Shij	pping (Case		TV Kit	
35	2		(22 E	2								Single or Double	e-sided				CA900				22.6"	
14	1		102°	1								None					CA500				32"	
08	1		84°)	1								Complete					NYLON BAG				40"	
06	1											Split-ship										
04	1																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000D

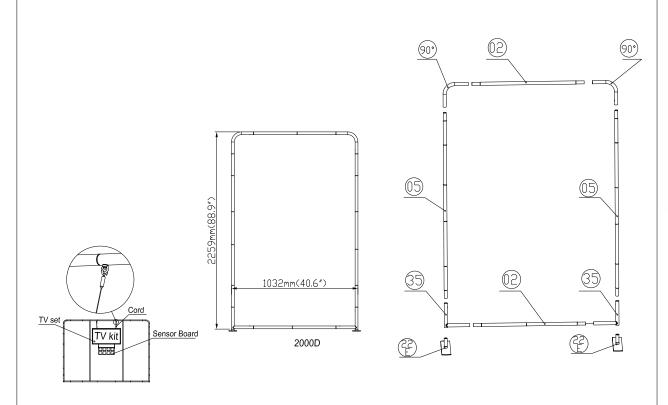




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessori	es	Shi	oping C	ase		TV Kit	
35	2											Single or Double	e-sided	59			CA900			22.6"		
05	2											None					CA500			32"		
02	2											Complete					NYLON BAG			40"		
(22 E	2											Split-ship										
90°	2																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000E

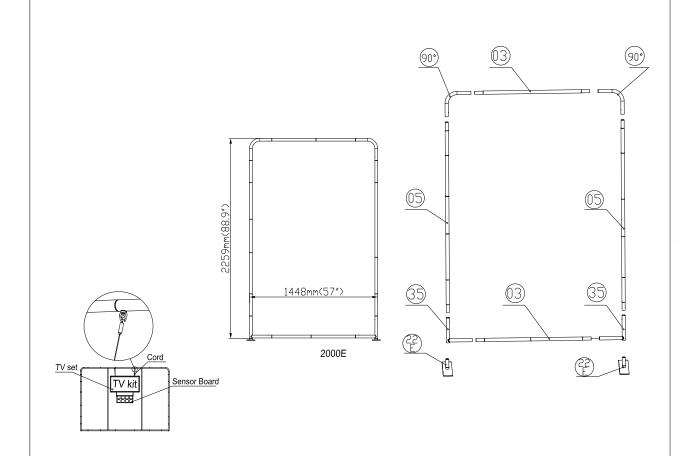




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessori	ies	Shi	pping (Case		TV Kit	
35	2											Single or Double	e-sided	59			CA900			22.6"		
05	2											None					CA500			32"		
03	2											Complete					NYLON BAG			40"		
(22 E	2											Split-ship										
90°	2																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000F

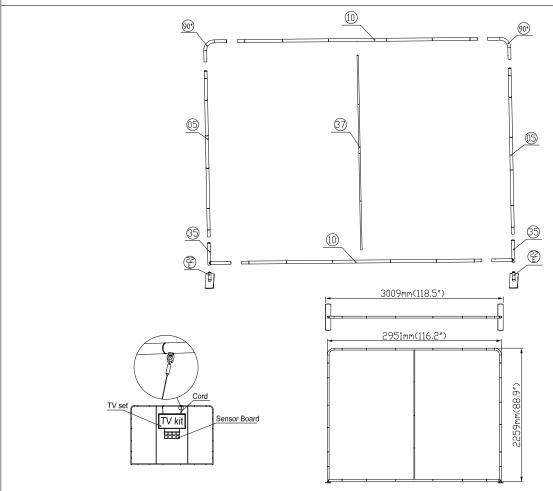




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessori	es	Shij	pping C	ase		TV Kit	
35	2		37	1								Single or Double	e-sided	59			CA900			22.6"		
10	2											None					CA500			32"		
05	2											Complete					NYLON BAG			40"		
(22 E	2											Split-ship										
90°	2																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000G

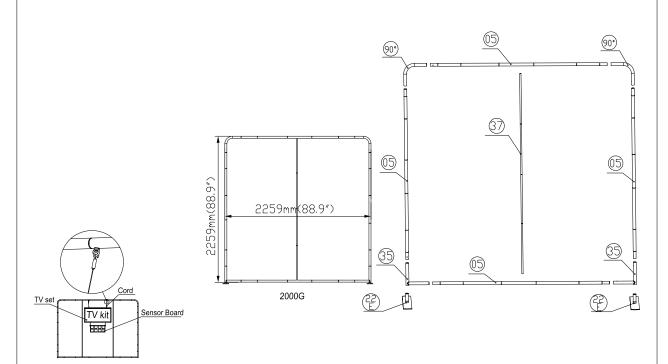




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessori	es	Shi	oping C	ase		TV Kit	
35	2											Single or Double	e-sided	59			CA900			22.6"		
37	1											None					CA500			32"		
05	4											Complete					NYLON BAG			40"		
(22 E	2											Split-ship										
90°	2																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000H

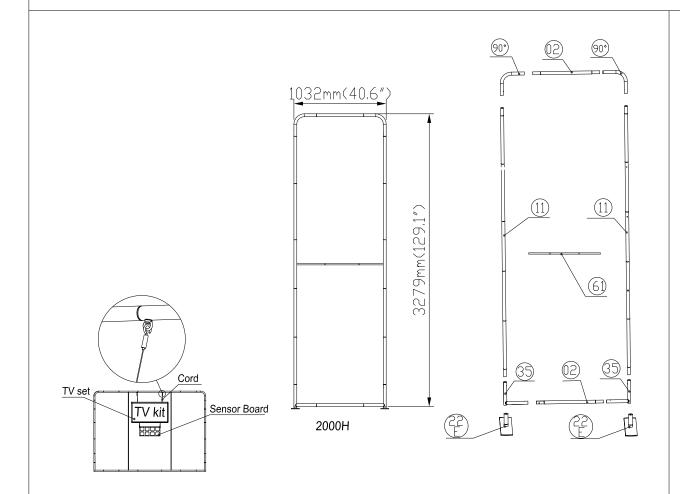




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessori	ies	Shij	pping (Case		TV Kit	
35	2		61	1								Single or Double	e-sided	59			CA900			22.6"		
11	2											None					CA500			32"		
02	2											Complete					NYLON BAG			40"		
(22 E	2											Split-ship										
90°	2																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000I

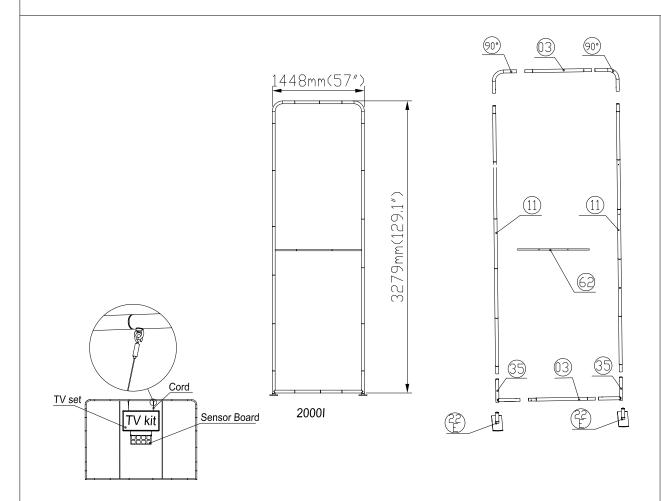




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	ping C	ase		TV Kit	
35	2		62	1								Single or Double	e-sided				CA900			22.6"		
11	2											None					CA500			32"		
03	2											Complete					NYLON BAG			40"		
(22 E	2											Split-ship										
90°	2																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000J

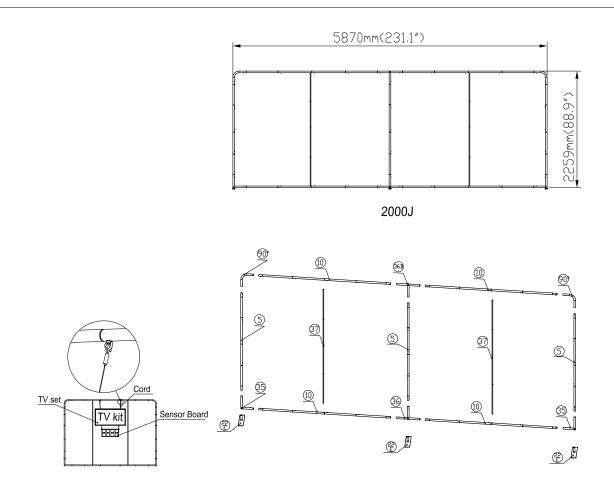




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessori	es	Shi	pping (Case		TV Kit	
35	2		(22 E	3								Single or Double	e-sided	59			CA900			22.6"		
36	1		90°	2								None					CA500			32"		
37	2		36B	1								Complete					NYLON BAG			40"		
10	4											Split-ship										
05	3																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000K

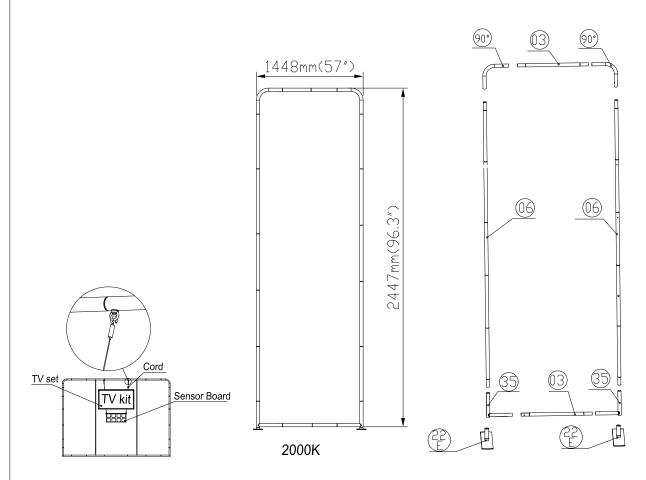




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphics	Ad	cessor	ies	Shij	pping (Case		TV Kit	
35	2											Single or Double-sided	59			CA900			22.6"		
06	2			/						/		None				CA500			32"		
03	2											Complete				NYLON BAG			40"		
(22 E	2											Split-ship									
90°	2																				
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000L

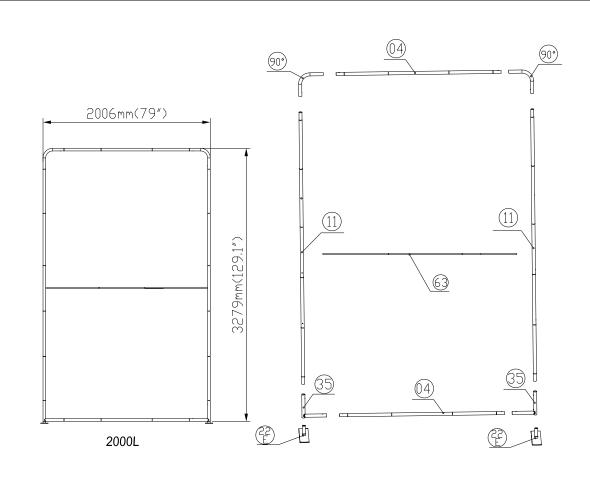




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	ping C	ase		TV Kit	
35	2		63	1								Single or Double	e-sided				CA900					
11	2									/		None					CA500					
04	2											Complete					NYLON BAG					
(22 E	2											Split-ship										
90°	2																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000M

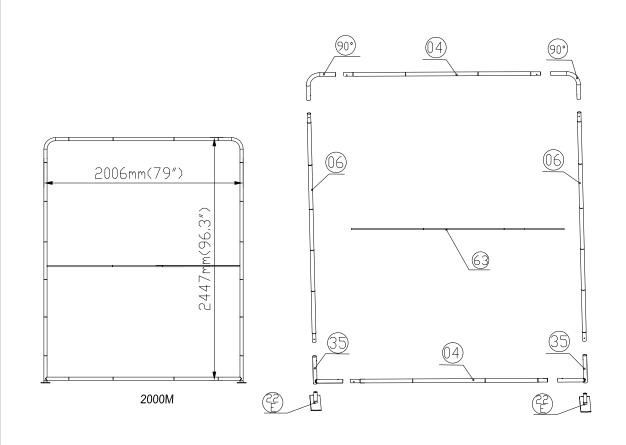




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessori	ies	Shi	pping (Case		TV Kit	
35	2		63	1								Single or Double	e-sided				CA900					
06	2											None					CA500					
04	2											Complete					NYLON BAG					
(22 E	2											Split-ship										
90°	2																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000N

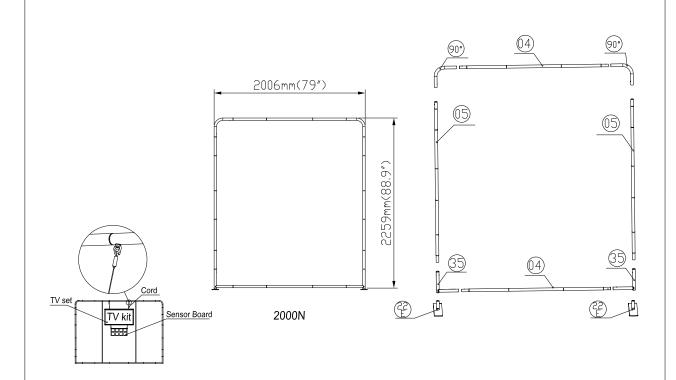




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shi	pping (Case		TV Kit	
35	2											Single or Double	e-sided	59			CA900			22.6"		
05	2			/			/					None					CA500			32"		
04	2											Complete					NYLON BAG			40"		
22 E	2											Split-ship										
90°	2																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000O

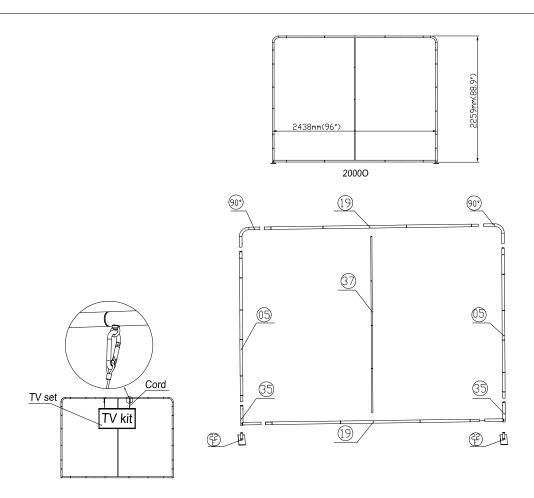




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessori	ies	Shi	pping (ase		TV Kit	
35	2		(22) E	2								Single or Double	e-sided				CA900			32"		
37	1											None					CA500			40"		
19	2											Complete					NYLON BAG					
05	2											Split-ship										
90°	2																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000P

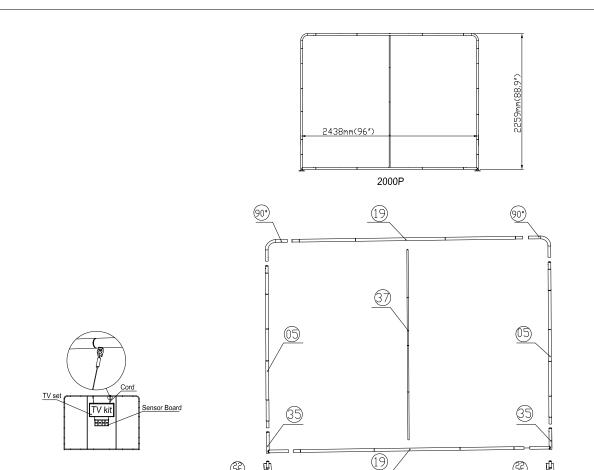




- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessori	es	Shi	oping C	ase		TV Kit	
35	2		(22 E	2								Single or Double	e-sided	59			CA900			22.6"		
37	1											None					CA500			32"		
19	2											Complete					NYLON BAG			40"		
05	2											Split-ship										
90°	2																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2000R

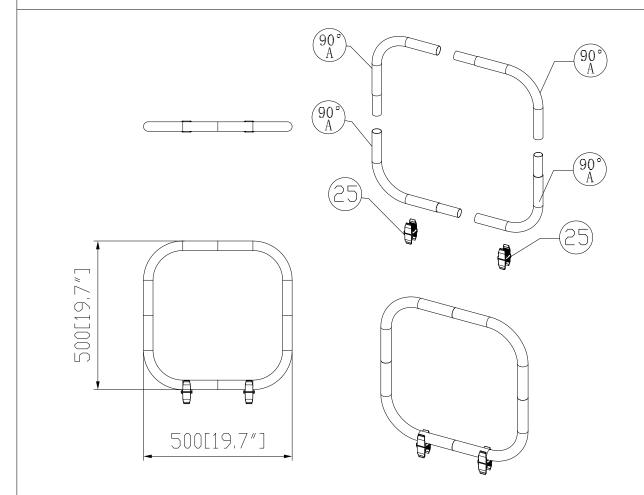





- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shi	pping (ase		TV Kit	
90° A	4											Single or Double	e-sided				CA900			22.6"		
90° A	2			/			/					None					CA500			32"		7
												Complete					NYLON BAG			40"		
												Split-ship										
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2011A

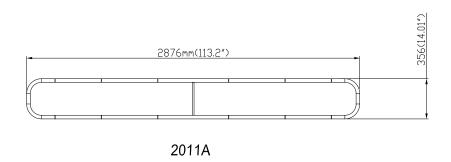


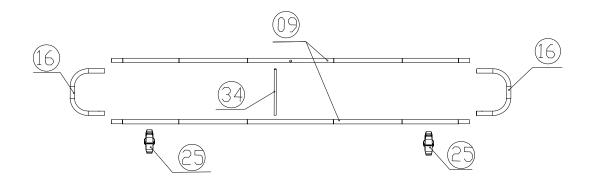


- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessori	ies	Shi	pping (ase		TV Kit	
34	1											Single or Double	e-sided				CA900					
25	2											None					CA500					
09	2											Complete					NYLON BAG					
16	2											Split-ship										
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2011B

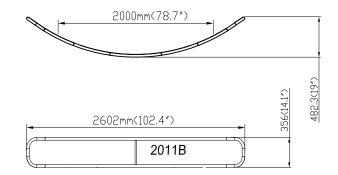

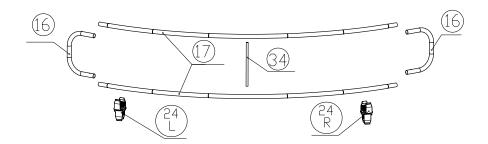

- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

					Hard	ware						Graphic	:S	Ac	cessor	ies	Shij	ping (ase		TV Kit	
34	1											Single or Double	e-sided				CA900					
17	2			/						/		None					CA500					
16	2											Complete					NYLON BAG					
(24 L	1											Split-ship										
(24) R	1																					
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm

WLM-H-2011B **CLAMP POSTIONING** 1650mm 2951mm 340mm 2218mm