

Formulate Fabric Banner

FMLT-WV03-01

Formulate™ combines state-of-the-art zipper pillowcase dye-sublimated fabric coverings with advanced lightweight aluminum structures to provide unique design, functionality, and style. The excellence of the Formulate line of displays, hanging structures and products is simply unmatched. Stretch fabric graphics are hand-sewn, durable and dry-cleanable.



We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

features and benefits:

- State-of-the-art 30mm aluminum tube frame with snap button assembly
- Easy to store and ship
- Quick to set up
- Kit includes: one frame, one dye-sublimated zipper pillowcase graphic, and one wheeled molded OCL storage case
- Lifetime hardware warranty against manufacturer defects

dimensions:

Hardware	Graphic
<p>Assembled unit: 36" w x 92.7" h x 24" d</p> <p>Approximate kit weight: 15 lbs / 7 kg</p>	<p>Total visual area: 36" w x 94.5" h</p> <p>Please be sure to include the 2" bleed around the perimeter.</p> <p>Refer to related graphic template for more information.</p>
Shipping	
<p>Shipping dimensions: One OCL case: 19" l x 19" w x 56" h</p> <p>Approximate shipping weight (with case): 35 lbs / 16 kg</p>	<p>Visit: www.exhibitors-handbook.com/graphic-templates</p>


additional information:

Graphic material:
Dye-sublimated zipper pillowcase fabric




www.display-setup-animations.com


Parts Included		
Part Label	Qty	Part Code
FABRIC GRAPHIC	x1	WV03-01-G
90 DEGREE ELBOW JOINT FOR 30MM TUBING	x2	TC-30-90
1094MM X 30MM TUBE	x3	WV8-01-T1
30MM CURVED TUBE WITH PART T AND 90B RIGHT SIDE	x1	WV10-01-T2-R
30MM CURVED TUBE WITH PART T AND 90B LEFT SIDE	x1	WV10-01-T2-L
R2250 (1163MM ARC) CURVED END	x2	WV10-01-T2
STEEL PLATE FOR WVC	x2	WVC-PLATE-STD

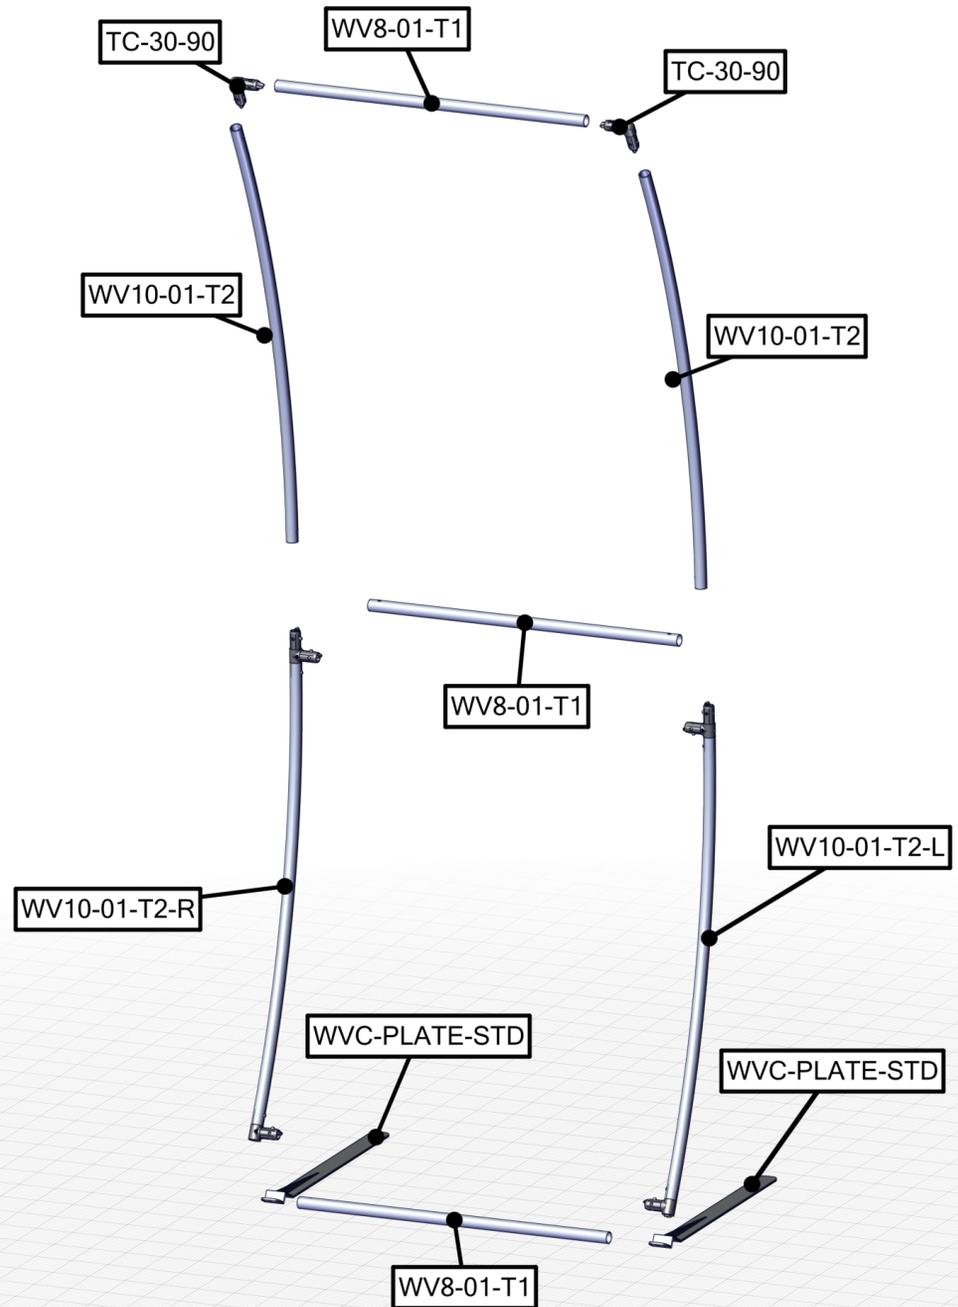


STEP 1: ASSEMBLE FRAME

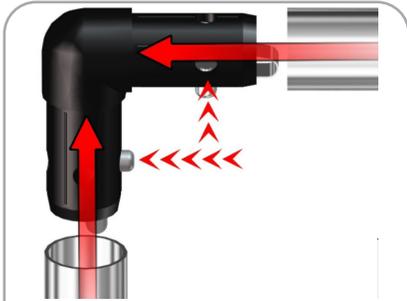


Assemble top frame corners using TC-30-90. Label codes will be on backside of tube. It is best to assemble frame laying flat.

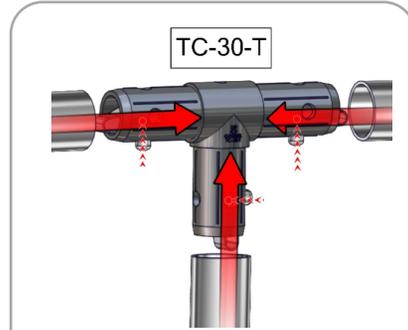

Connect sides of frame by lining up holes with snap buttons.

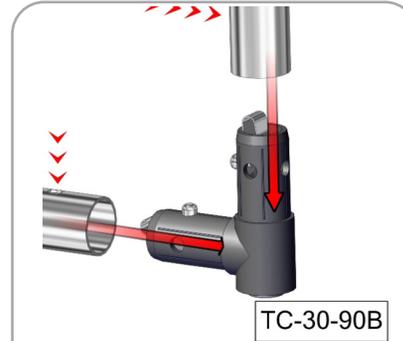


Use TC-30-90B to connect bottom frame corners; snap on button.

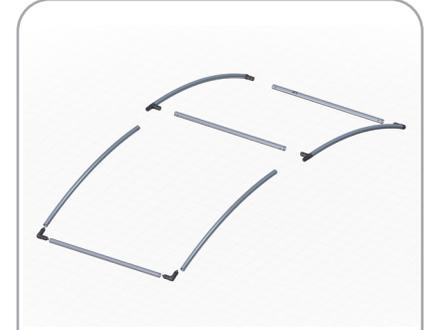




Frame assembly is complete once all sides and middle are connected.

STEP 2: ATTACH FEET

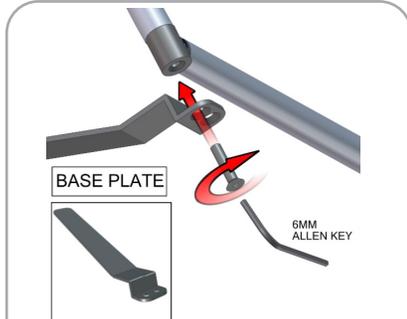

Attach feet using provided allen key, secure both feet (WVM-BP) to bottom of frame by tightening bolt.

STEP 3: ATTACH GRAPHIC

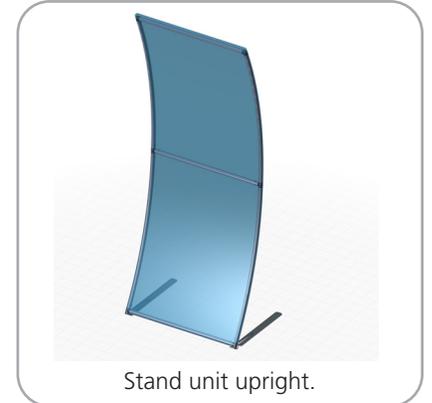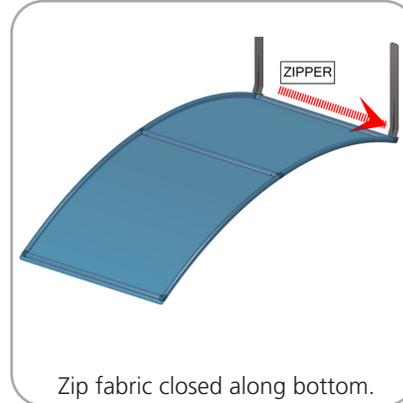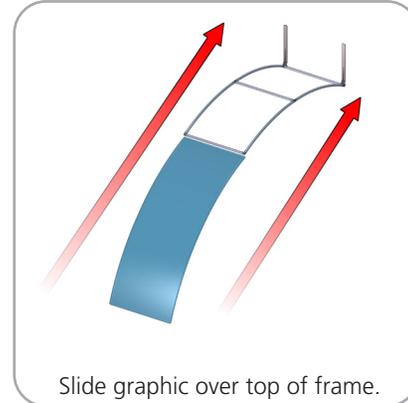

Check out these related products:

The Formulate line is a collection of stylish, ergonomically designed tabletop, 8ft, 10ft, 20ft exhibits, hanging structures, and display accessories. Formulate combines state-of-the-art zipper pillowcase dye-sublimated fabric coverings with a premium lightweight aluminum structure. Formulate is efficient, easy to assemble and disassemble, and offers remarkable style options and choices.



Formulate Shark Fin



Formulate Tabletop



Formulate 10ft Horizontal Curve



Formulate 10ft Vertical Curve



Formulate 10ft Straight



Formulate 20ft Serpentine



Formulate Lite